- 4. Repeat steps 1 and 2 if necessary.

After a hard landing, turn drone and remote off.

Then, repeat pairing!

- White lights indicate the front of the drone
- Red lights indicate the back of the drone
- Not applicable in auto-orientation mode

REMOTE CONTROL

DIRECTIONAL LIGHTS

The drone is controlled by the movement of the hand wearing the controller. Practice flying in an area free of obstruction. Fly below 10 feet until control is mastered.

- The controller is designed for the right hand
- Use small movements for maximum control
- The thumbstick toggles take-off and landing, altitude changes, & special flight modes.

- Do not operate in rain, heavy wind, and or any type of severe weather.
- Do not land drone on wet surfaces.
- Never touch or allow others to touch drone while it is flying.
- Always turn drone off when it is not in use.
- Always fly drone in large open areas.
- Never fly drones above or near people, sudden changes in wind or other conditions
- could lead to unexpected crashes. Always use caution when flying drone vehicles, obey relevant laws, respect the
- privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY **RECYCLING INFORMATION IS AVAILABLE AT** WWW.MERCHSOURCE.COM

FAA WARNING

This drone weighs 0.08 lbs. As of November 2017, the Federal Aviation Administration (FAA) requires registration of unmanned aircrafts weighing more than .55lbs. Visit www.faa.gov/uas/registration for more information. Ongoing compliance with Federal, state and local laws regarding operation is an owner's sole responsibility.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- ©2018 Sharper Image. Sharper Image® name and logo are registered trademarks. All rights reserved. Distributed by MerchSource, LLC, Irvine, CA 92618.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.


PATENT PENDING Printed in China

QUESTIONS OR CONCERNS? LEASE GIVE US A CALL ... WE'RE HERE TO HELP


Before calling please locate the 10-digit code printed on the back of your remote


WARNING: ONLY USE PROVIDED USB CABLE FOR CHARGING CUSTOMER SERVICE (800) 374-2744




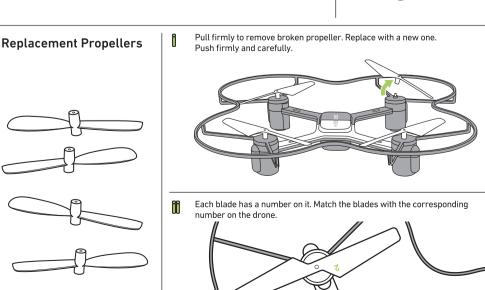

DRONE

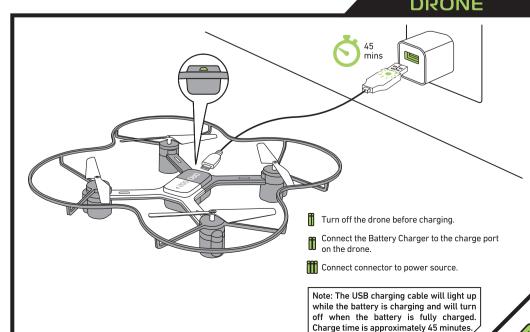

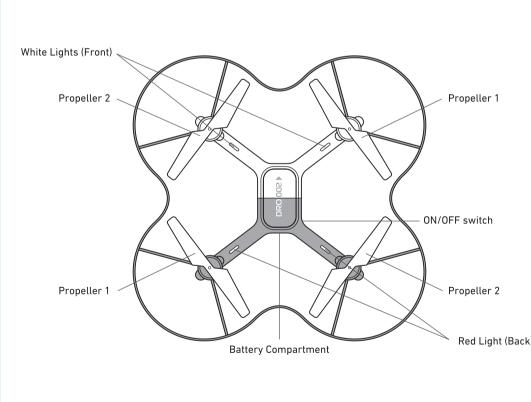

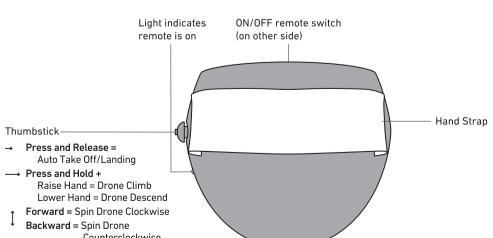

Counterclockwise Up and Hold + Hand Motion = 360° flip in direction of hand motion ↓ Down and Release = Auto Orientation On/Off **Down and Brief Hold =** Reset Gyroscope