

Car mp3 FM transmitter

Operation Principle

- LED indicator
- 24Mhz crystal
- PCB antenna
- 5.0V regulator
- USB Male Connector

It Powered by the 12v-24v car cigarette lighter. the motherboard is supplied 5v power by the power IC, and the CPU powered by the internal 3.3v 1 do 24Mhz crystal, the U-disk finally powered by the USB which supply 5V power, It will read the data inside and transmit the signal by the FM transmitter board. Then the car radio will receive the singal and output the sound by the car stereo.