


# X User Manual

GC01 / GC01K

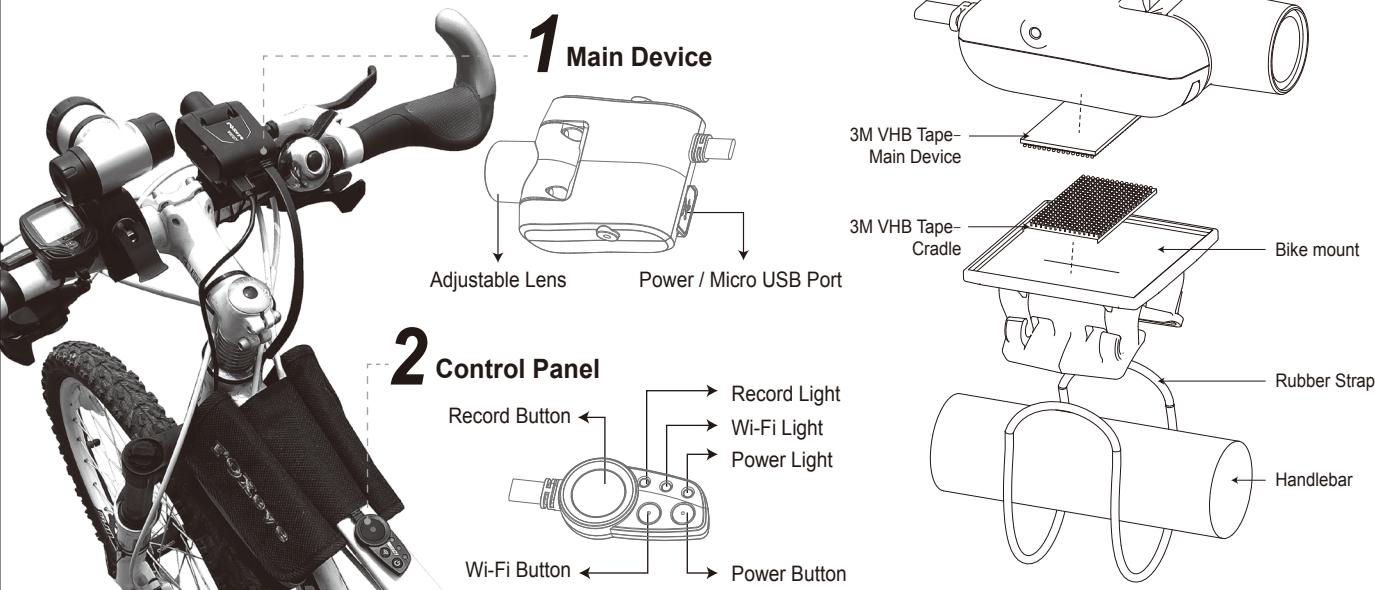

## Precautions

1. The time stamp function is disabled when Wi-Fi is on.
2. This device has loop recording and file lock down functions, locked files cannot be overwritten unless using connection via an external device such as a mobile phone.
3. This device has IPX6 waterproof ratings, but is not designed to submerge underwater.
4. Do not disassemble the device; all warranty will be invalid if the device has been disassembled.

## Light Indicators

1. Red light: Recording when lit, Stops recording when extinguished.
2. Blue light: Wi-Fi on when lit, Wi-Fi off when extinguished.
3. Green light: Device on when lit, off when extinguished.

## Operating Instructions

### 1. Button Descriptions

- i Power button: Press once to turn power on/off, Hold down 5 seconds for forced shutdown
- ii Wi-Fi button: Press once to turn Wi-Fi on/off, Hold down 10 seconds for restoring to factory settings
- iii Record button: Press once to lock the current video file (only works while recording), Hold down for 3 seconds to start/end recording.

2. When the ignition switch is turned to [ACC], the device is booted up, and will enter recording mode in about 5 seconds.
3. When the ignition switch is turned to [OFF], the current recording file is automatically saved and the device will proceed to shut down.
4. Wi-Fi is off by default, start-up time requires 15 seconds.
5. When Wi-Fi is enabled, the APP can be used to connect to the device to download, view, edit the files and give access to camera settings.
6. "The Foxeye Wi-Fi APP supports both the iOS and the Android systems.

### The microphone operation instruction is as followed:

1. The microphone is defaulted as on every time the device is booted up.
2. During recording mode
  - A. Stop recording, short press the power button once, the power light will blink twice, start recording, the sound will be muted.
  - B. Stop recording, short press the power button once, the power light will blink once, start recording, the sound will be unmuted.
3. During Wi-Fi mode
  - A. Short press the power button once, the power light will blink twice, the sound will be muted.
  - B. Short press the power button once, the power light will blink once, the sound will be unmuted.

## Establishing Wi-Fi Connection

1. Mobile APP Installation
  - i iPhone: Search for "Foxeye Wi-Fi" on the Apple's App store.
  - ii Android: Search for "Foxeye Wi-Fi" on Google play.
2. Wait for the device to boot up and enter recording mode.
3. Press the Wi-Fi button on the control panel, the recording will be interrupted shortly, and when the Wi-Fi indicator light is lit, the recording will resume.
4. Find "GC1" in the Wi-Fi listings on your mobile device, enter the default password "00000000", and select to connect.
5. Boot up the Foxeye Wi-Fi App, and proceed to use the app.

## Modifying Wi-Fi Settings

1. Connect to the GC1 using a mobile device.
2. Select the WI-FI settings option; you can change the SSID and password there.

## Formatting Internal Memory

1. After the devices has booted, please turn off Wi-Fi and the recording function.
2. Press and hold both the Wi-Fi and recording button for about 10 seconds, the blue and red light will start to cross blinking to indicate the formatting process has started.
3. All lights will extinguish to indicate the formatting has been successful.
4. Formatting will wipe out all files in the memory including the locked files, please back up all the files you wish to keep before commencing to format.

## Restore to Factory Settings

1. Make sure the device is not recording and the Wi-Fi is off.
2. Hold down the WI-FI button on the control panel for 10 seconds, the device will automatically reboot and is restored to factory settings.

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### **IMPORTANT NOTE:**

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.