

SGIN



10" HD Kid Safe Tablet

USER MANUAL

Tablet of Contents

Section 1: Tablet Overview

| | |
|-----------------------------------|---|
| Tablet Overview..... | 3 |
| Icon Glossary..... | 4 |
| Charging..... | 5 |
| Turning on your Playtime Pad..... | 5 |
| Touchscreen Basics | 6 |
| Lock Screen | 7 |
| G-Sensor..... | 7 |

Section 2: Kid Mode

| | |
|------------------------------|----|
| Security Control..... | 8 |
| Applications Filter..... | 8 |
| Websites Filtering..... | 8 |
| Child Lock | 9 |
| Time Limit..... | 10 |
| Behavior Report..... | 10 |
| Personal Style..... | 11 |
| Multiple Accounts..... | 11 |
| Kids TV..... | 12 |
| Learning & Playing Apps..... | 12 |

Section 3: Parent Mode..... 14

| | |
|-------------------------------------|----|
| Downloading New Apps | 14 |
| Uninstalling Apps..... | 14 |
| Removing Apps from Home Screen..... | 14 |
| Closing Background Apps..... | 15 |
| Creating a Google Account..... | 15 |
| Connecting to Wi-Fi® | 16 |
| Connecting to a Computer | 17 |

Tablet of Contents

Section 4: Tablet Settings

| | |
|--|----|
| Device Settings | 18 |
| Personal Settings | 18 |
| System Settings..... | 18 |
| Wireless & Network Settings..... | 19 |
| Adjusting Your Screen Brightness | 19 |
| Applications Recommendation | 20 |
| Multimedia Management..... | 20 |


Section 5: FQA

| | |
|--|----|
| How to add Whitelist..... | 21 |
| How to Reset Password..... | 22 |
| How to connect wifi..... | 23 |
| How to add Apps to the child's desktop | 24 |
| How do I reboot my unresponsive device?..... | 26 |
| Why is my tablet running slow?..... | 26 |

| | |
|--|-----------|
| LIMITATIONS OF LIABILITY STATEMENT..... | 27 |
|--|-----------|

| | |
|----------------------------------|-----------|
| WARRANTY INFORMATION..... | 28 |
|----------------------------------|-----------|

 I. Tablet Overview

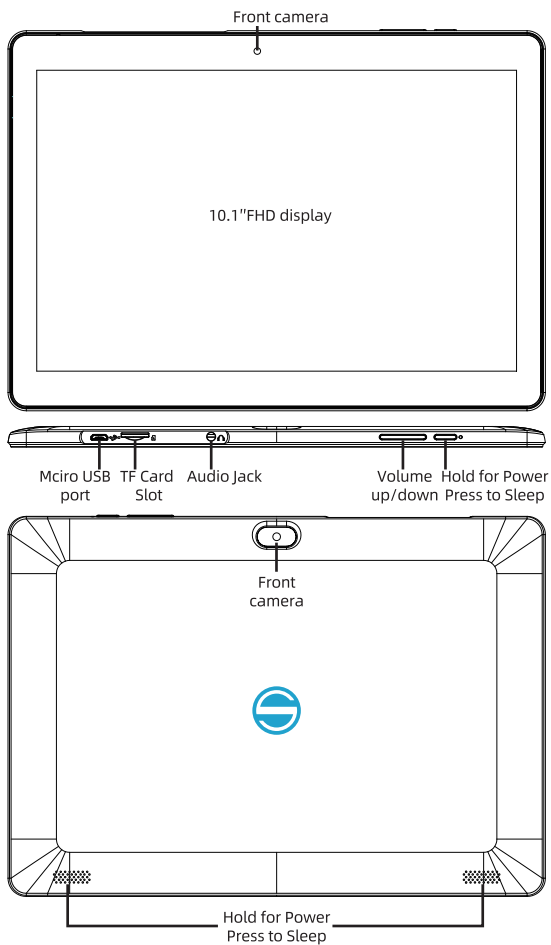

I. Tablet Overview

Icon Glossary



Battery Level: The white battery level indicator will decrease and change to red as the battery is drained.



Wi-Fi® Signal: As the Wi-Fi® signal strength decreases, the white bands will change to grey.



Settings: Tap to adjust settings for Wi-Fi®, screen brightness, security settings, language options, and more.



Menu: Tap to reveal settings and options.



RAM 2GB & ROM 32GB eMMC, Support 1TB TF card expansion.



Built-in 5000mAh rechargeable lithium-polymer battery, Charging via power adapter or USB-C to computer system.



 
ALLWINNER A133, CPU: Quad-core arm Cortex™-A53 @1.6GHz 32KBL1I-cache 32KBL1D-cache per core, 512KBL2 cache low-power CoolFlex™ power management architecture.

Charging

Fully charge your Playtime Pad for 6 hours before the first use.

Once the battery drains for the first time, please recharge the device for at least 8 hours. Your Playtime Pad's battery life will be optimized after three cycles of charging and draining.

Your Playtime Pad has an 8-hour battery life. Battery life is affected by various factors, including brightness, volume, active apps and more. To achieve optimal battery life, please set your device settings to the following: 35% brightness; 50% volume; 360P video quality.



Please only use the included USB charger. The battery indicator will show that your device is charging.

Note: Charging your tablet using the USB port on your computer will take longer. We recommend using the included wall charger. The charging process for this device should be operated by an adult.

We recommend charging your Playtime Pad at least once per month. If the tablet is not in use for extended periods of time, charge the device for at least 30 minutes until the screen illuminates. You may proceed with normal operation after this process.

Turning On Your Playtime Pad

To turn on your Playtime Pad, press and hold the power key for 2 seconds. The PBS KIDS logo indicates the software is loading.



I. Tablet Overview

Touchscreen Basics

Tap an app icon once to activate or open an app. Touch and hold to move an item by dragging.



In many apps, touch and hold can offer more options.



Zooming: Double tap quickly to zoom into a webpage, picture, or map. Some apps allow you to zoom in and out by touching the screen with two fingers, and pinching them together.



TIP: You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.

Tap a specific location on the screen where you would like to enter text. The on-screen keyboard will pop up.



To hide keyboard



Touch and hold a letter for special characters.

I. Tablet Overview

Lock Screen

Slide the padlock icon up to unlock the screen.



G-Sensor

The G-Sensor allows the tablet to detect screen rotation. You can view the home screen in either a landscape or portrait format as you use the apps.

Note: Some functions in the Playtime Pad only display in landscape format.

 
II.Kid Mode

Security Control

Separating contents which are not suitable for children and protecting kid's physical and psychological growth, parents can filter the contents which need to be blocked.

Applications Filter


Select appropriate applications for kids, and block inappropriate contents like bloody and violent content. Only selected applications will be showed up in children`s desktop.

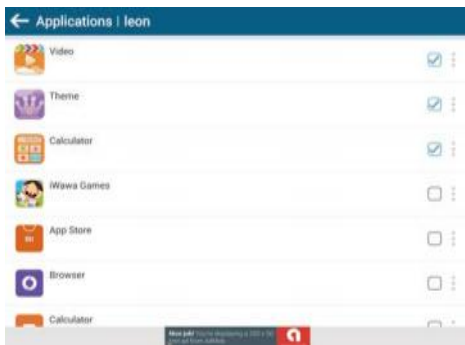

Websites Filtering

When children use the Internet browser, it will automatically block the websites without parental permission.

 
II.Kid Mode

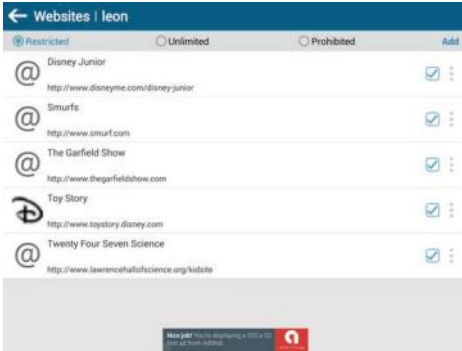

Restrict kids` behavior by iWawa, kids can not disturb the parents` desktop any more, unexpected consumption and games addiction could be effectively avoided.

Child Lock

 
Without permission of parents, children will not be able to exit the child desktop. Not only ensure that kids stay in a safe environment, but also ensure that kids do not have access to parents` desktop applications.

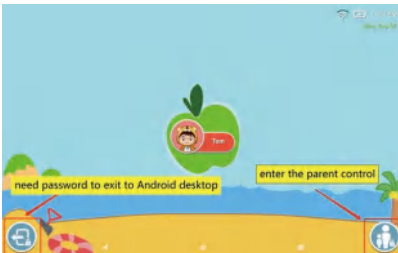

II.Kid Mode

Time Limit

 Parents can set a timetable for kids to use tablet and have a break time.It will automatically be transferred to break time when time is up, and tablet is temporarily unusable. It is flexible to protect the kids' growing environment.

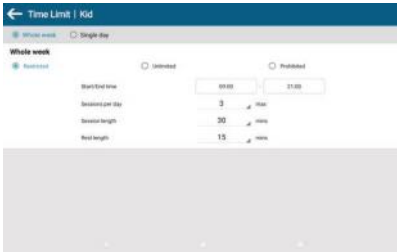

Behavior Report

The system automatically produces detailed reports of applications usage which record kids`behavior on using various applications and the frequency. In this way, parents can easily understand kids` habits and preferences.

 
 


II.Kid Mode

Provide more practical and convenient features for children and parents.

Personal Style

Multiple beautiful themes, kids can create their own beautiful space.

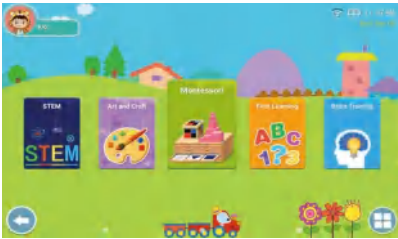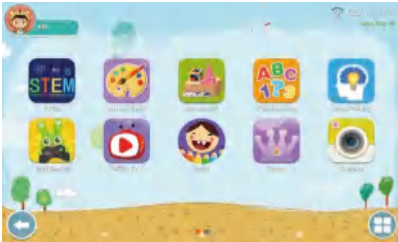

Multiple Accounts

 
A tablet can set up more than one account.Each child can have their own separate desktop.

II.Kid Mode



Kids TV



There are many wonderful children videos, and often updated, kids will love it much.

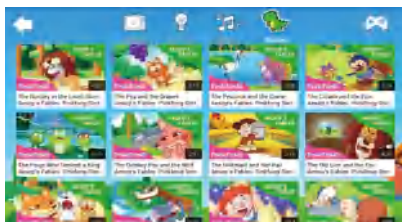

Learning & Playing Apps



  II.Kid Mode

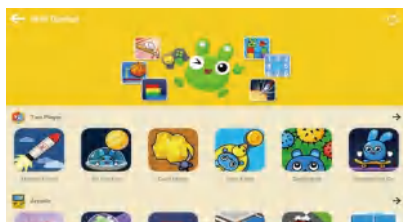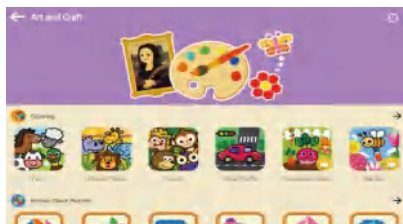

III. Parent Mode

 


Downloading New Apps

You will need a Google account in order to download third-party apps. Exit Kid Mode and open the Google Play store app to download more apps.

Uninstalling Apps


In Parent Mode, touch and hold an app in the All Apps Drawer and drag them to the trashcan uninstall icon.

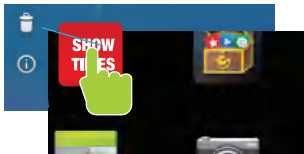

Note: You can also uninstall apps by tapping Apps in your device's Settings.

Removing Apps from Home Screen

 In Parent Mode, touch and hold an app on the home screen and drag the app to the "X" icon.

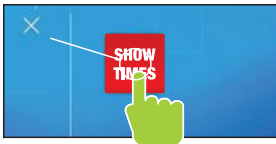


III. Parent Mode

Closing Background Apps

Once you've launched an app, it will continue to run in the background, even if you've moved on to other tasks. You may notice that your tablet is lagging if several apps are opened at once.

To close background apps and free up your tablet's RAM, enter Parent Mode and tap on the Multitasking button. Scroll to locate the apps you wish to close, and swipe to the right.

 Be sure to quit out of unnecessary apps often to ensure that your tablet runs smoothly.

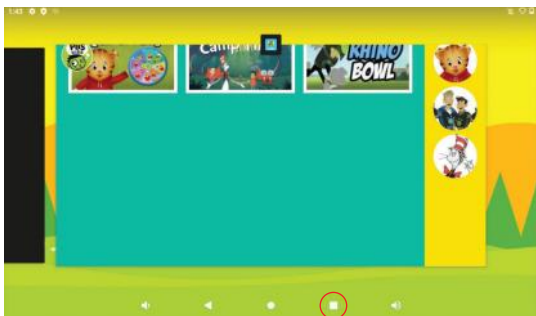

Multitasking

Creating a Google Account

 
1. Go to <https://accounts.google.com/signup>
2. The signup form will appear. Follow the directions by entering the required information.
3. Your account will be created, and the Google welcome page will appear.

III. Parent Mode

Connecting to Wi-Fi®

To connect to a different Wi-Fi® network for when you're not at home, or to set up a new connection, please exit Kid Mode and enter Parent Mode.

Tap on the Settings App  > Network & Internet > Wi-Fi® to set up a new connection.

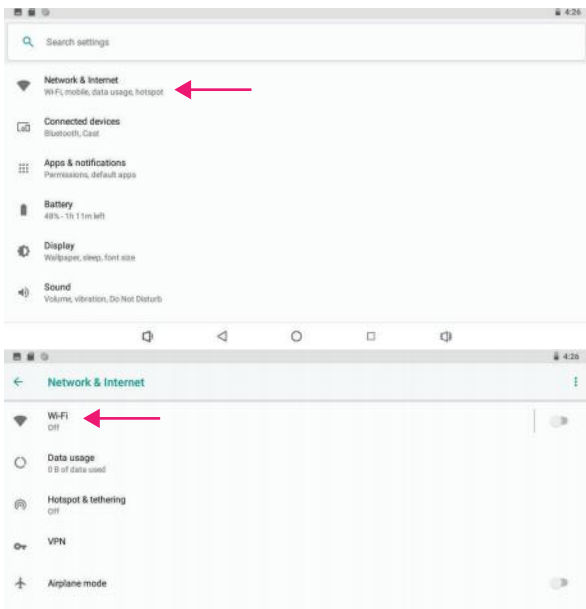


Tap on the Home Button  to go back to Kid Mode.

III. Parent Mode

Connecting to a Computer

Connect to your computer by USB.

 Note: You must be in Parent Mode to connect to a computer.

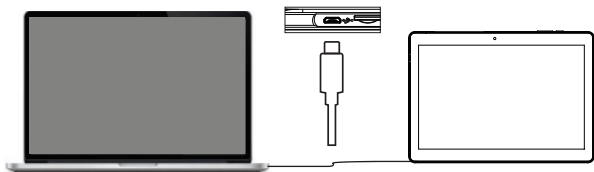

On PC:

Once connected, the device driver will install. The Autoplay Dialogue Box will appear. Choose “open folder to view files” or “select removable disk” .

You will now be able to drag and drop files from your computer onto your tablet just as you would with a USB flash drive.

On MAC:

First, install the Android File Transfer application for Mac. Go to **[android.com/filetransfer](https://www.android.com/filetransfer)** on your Mac and choose “Download Now” and then install the application.



The Android File Transfer application will launch automatically when you connect your tablet. Drag & drop files to transfer.

IV. Tablet Settings

Device Settings

- **Home:** Google Now Launcher
- **Display:** Adjust brightness, change your wallpaper, sleep settings, font size, HDMI® setting, and device rotation.
- **Storage:** Provides storage use data.
- **Battery:** Provides battery usage data.
- **Apps:** Tap an app to force stop, uninstall, clear data, or move to SD card.
- **Sound:** General audio settings.
- **Notifications:** Adjust notifications.
- **Memory:** Show the amount of memory used.

Personal Settings

- **Location:** Allow Google to use data to determine your location for improved search results.
- **Security:** Adjust settings to make your tablet more secure. Allow installation of non-market apps.
- **Accounts:** Tap to add or remove email accounts.
- **Language & input:** Set language, spelling correction, keyboard and voice settings.
- **Backup & reset:** Backup data and reset your tablet.
- **Google:** Provides Google services.

System Settings

 
- **Date & time:** Set the date, time, and time zone.
- **Accessibility:** Adjust settings to better suit your needs; turn on/off screen rotation.
- **Printing:** Print services
- **About tablet:** Model number and general tablet information.

IV. Tablet Settings

Wireless & Network Settings

- **Wi-Fi®:** Turn Wi-Fi® on to see available networks and connect.
- **Bluetooth®:** Provides Android Bluetooth® to nearby devices.
- **Data usage:** Shows data usage.
- **More:** Airplane mode and VPN.


Adjusting Your Screen Brightness

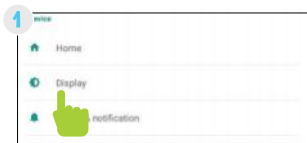

In settings tap “Display”



 Then “Brightness Level”

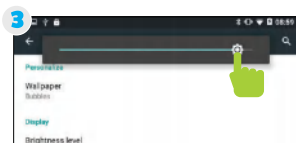

Use the slider to adjust the brightness.

 
Tip: Lower the brightness at night to extend your battery life.

IV. Tablet Settings

Provide children with rich applications resources, and use tools to manage applications, video, music and other content.


Applications Recommendation

Recommend with educational games and other applications which are suitable for kids. Recommended content is regularly updated and can be downloaded for free.

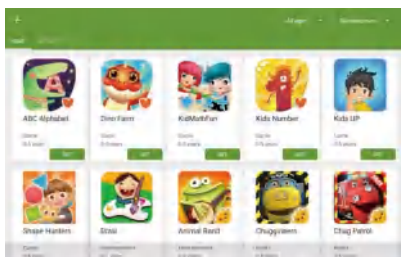

Multimedia Management


 
Children can open "Video" application in the children desktop and see all good movies selected by parents; similarly, children can open the "Gallery" and "Music" applications and see pictures and listen to songs which are previously prepared.

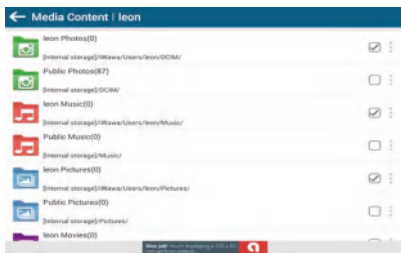

V.FAQ



How to add Whitelist

  Please enter "Parental Control" ->"Whitelist" add the Settings.

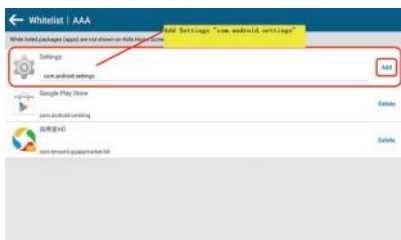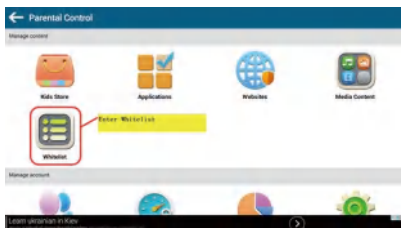

V.FQA

  By the way, at "Parental Control", the Settings will not be blocked.

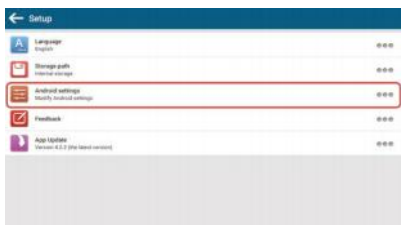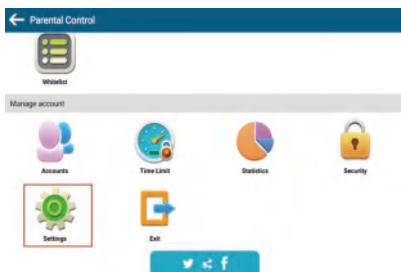


How to reset Password

If you forget your password, please reset it. The reset code is 257518:






 How to connect wifi

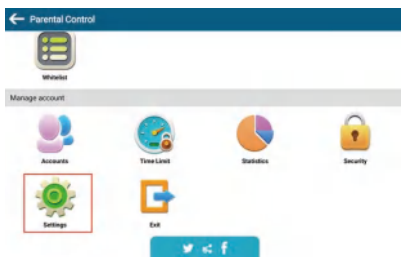




How to add Apps to the child's desktop

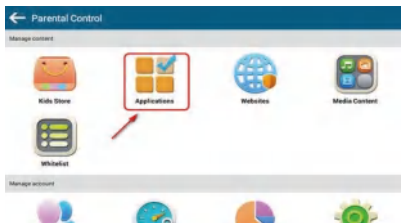 

V.FQA

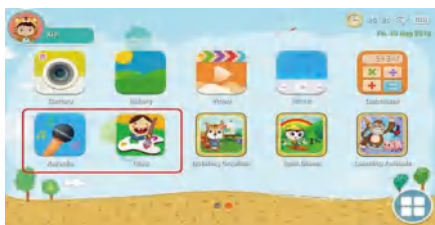 

V.FQA

How do I reboot my unresponsive device?

If your device is still unresponsive after using the reset button, press and hold the power button for at least 10 seconds to enter system reset mode.

 
If this method is still unsuccessful, simultaneously press and hold both volume and power buttons to enter factory reset mode. Please note a factory reset will delete all data stored on your device.

Why is my tablet running slow?

Once you've launched an app, it will continue to run in the background, even if you've moved on to other tasks. You may notice that your tablet is lagging if several apps are opened at once.

To close background apps and free up your tablet's RAM, enter Parent Mode and tap on the Multitasking button. Scroll to locate the apps you wish to close, and swipe to the right.

Be sure to quit out of unnecessary apps often to ensure that your tablet runs smoothly.

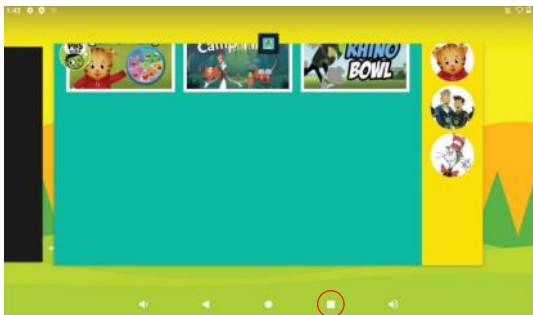

LIMITATIONS OF LIABILITY STATEMENT

Links to Third Party Sites

This DP Audio Video User Manual may contain or reference links to third-party sites, however, please be aware that DP Audio Video is not responsible for and cannot control these other sites. DP Audio Video makes no representations or warranties whatsoever about any other website which you may access as a result of reading this user manual, or otherwise. When you access a website that is not owned or operated by DP Audio Video (a “non-DP Audio Video website”), even one that may contain a DP Audio Video logo, please understand that it is independent from DP Audio Video, and that DP Audio Video has no direct control over the content on such website(s). In addition, a link to any such non-DP Audio Video website does not mean DP Audio Video endorses or accepts any responsibility for the content, or for any functionalities or services, of such website(s). Furthermore, DP Audio Video makes no promise, representation or warranty that any non-DP Audio Video website you navigate to will be free of viruses, worms, Trojan horses and other items of a destructive nature. The DP Audio Video User Manual is for your exclusive benefit and you assume all risks, losses and/or damages of whatever nature that may result arising out of your use.

To the maximum extent permitted by applicable law, DP Audio Video shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the DP Audio Video User Manual or use of any DP Audio Video product and/or software. In no event shall DP Audio Video be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach of contract or in tort, even

if DP Audio Video has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against DP Audio Video for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to indemnify, hold harmless and defend DP Audio Video, together with its affiliates, parent and subsidiary entities, successors, assigns, partners, managers, members, employees, officers, directors and shareholders, from and against any and all damages, liens, liabilities, losses, demands, actions, causes of action, claims, costs and expenses (including, without limitation, reasonable attorneys' fees, charges and disbursements, as well as the cost of in-house counsel and appeals) arising from or related to DP Audio Video, the use of The DP Audio Video User Manual or any DP Audio Video product and/or software. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY INFORMATION

This is a limited warranty for the product purchased and contained in this package (the "Product") to you, as the original retail purchaser of the Product ("you"). For Manufacturer to honor this limited warranty, you must present a valid, proof of purchase (i.e., a receipt) of the Product.

This warranty is void if Company deems, in its discretion, that the Product may have been damaged through modification, improper use, end user negligence, water damage, or tampering with the bar code of the product unit. This warranty is a limited warranty for repair/replacement of product, subject to the condition set forth herein.

DP AV IS NOT LIABLE FOR CONSEQUENTIAL, INDIRECT, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES AND COMPANY'S TOTAL LIABILITY HEREUNDER SHALL NOT EXCEED AN AMOUNT GREATER THAN THE RETAIL PURCHASE PRICE OF THE PRODUCT.

Subject to the applicable provision set forth herein, with regard to this limited warranty, you are responsible for all costs connected with the shipping and handling of the Product to DP AV, and DP AV is likewise responsible for all shipping and handling of the Product back to you. DP AV bears no risk of loss of the Product in connection with the transportation and shipment of the Product in any way relating to this limited warranty.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

IC Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



Distributor : L FORWARD INC.

Address: 1908 Thomes Ave Cheyenne, WY 82001.

Manufacturer: Shenzhen NST Industry and Trade Co., Ltd.

Address: 3/F, Bldg 1, HongBang Intelligent Technology Park, No.30 Cuibao Road, Baolong Street, Longgang District, Shenzhen, Guangdong, China.

E-mail: sgin-tech@sgin-service.com

SGIN Ltd.

2022 SGIN Ltd. All rights reserved.

According to copyright law, all or part of this manual may not be copied without the written consent of SGIN.

We have tried our best to ensure that the information in this manual is accurate.

SGIN is not responsible for typographical or typographical errors.



Blotzke International Trading GmbH
Wollenteufelstr. 50-45 Magdeburg
Germany 39112
+49 1743636106

