

User Manual



trio :)

Before operating your Trio 7.85 inch Tablet, please read, understand, and follow these instructions.

CONTENTS

Welcome	2
Important Safety Instructions	2
Care of the Environment	3
What's in the Package	4
Layout of your Tablet	5
Getting Started	7
Charging the Battery	7
Powering Up	8
Checking Out the Controls and Connections	10
Physical Controls	10
Virtual Controls	10
Connections and Plug-ins	11
Basic Operations	11
Power Monitoring and Charging	11
Connecting to your Computer and Loading Files	11
Powering on your Tablet	12
Home Screen Menu	12
Main System Menu	13
Multi-Media	14
Music	14
Video	16
Images	16
Email	17
Browser	19

System Settings	22
Voice and Display	22
Display Settings	22
SD Card and Internal Storage	25
About the Tablet	27
Installing Applications	27
Uninstalling an Application	27
Troubleshooting	27
Technical Specifications	29
Warranty	30

WELCOME

Thank you for purchasing a Trio 7.85 Inch tablet! We appreciate your business. This guide is designed to walk you through the basics of using your new tablet. Please make sure to read the safety instructions below to prevent bodily injury and/or damage to the tablet.

If you have any questions that are not covered in this guide, please visit our website: www.triotablets.com or contact us by phone 844.400.8746.

Please note that the information in this guide is subject to change without notice and is protected by the copyright laws of the United States of America and other countries. Copying or modifying this user guide without written consent is prohibited.

IMPORTANT SAFETY INSTRUCTIONS

- Clean only with a clean, dry cloth; do not use any water, cleaners or polishes
- Do not use the tablet near water
- Do not use or leave your tablet in temperatures above 95°F (35°C) or below 25°F (-5°C)
- Do not place your tablet on or near any heat source, such as a radiator, heat register, stove, or other apparatus that produces heat

- Do not leave your tablet in direct sunlight
- Using the tablet with earphones at a high volume may cause permanent damage to your hearing. Please keep the volume at a comfortable level
- Use only the charger that came bundled with your tablet. Use of other chargers may result in damage
- Do not charge your tablet during storms. A power surge could damage the charger and/or tablet
- There are no user-serviceable parts inside the tablet's casing. If you attempt to take your tablet apart, you run the risk of damaging it voiding the warranty
- This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org

CARE OF THE ENVIRONMENT

Your tablet is manufactured using high quality materials and components, which can be recycled and reused. Do not dispose of it with other household waste. Please familiarize yourself with local rules on the separate collection of electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Please visit www.eiae.org for additional information on recycling your tablet.

WHAT'S IN THE PACKAGE

- Trio 7.85InchTablet
- Charger
- USB/charger Cable
- Quick-Start Guide

LAYOUT OF YOUR TABLET

Once you have unpacked your Tablet, take a look around it so that you know where all the controls and connections are located.

Front

Front Camera



Back



It's now time to get your Tablet ready for use. Follow the instructions for getting started, then you will be able to check out and try the various controls, icons, connections and features so that you will be comfortable using your new device.

GETTING STARTED

Charging the Battery

MOST IMPORTANT - You will need to charge up the battery before you use your Trio 7.85Inch Tablet for the first time.




USB/Charger
Port

Connect the charger to your Trio 7.85Inch using the USB/Charger cable. The cable plugs in to the USB/Charger Port at the top of your Tablet.

The connection should look like this:

Plug the charger into a power outlet. Keep the battery on charge for 6 to 8 hours to make sure that it is fully charged.

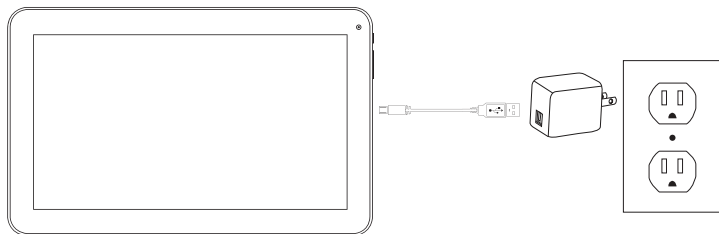


Powering Up

When the battery is fully charged, switch on your Trio 7.85 Inch Tablet. To do this, press and hold the power on/off button until the Trio 7.85 Inch Hogo appears:



The logo remains until the startup operation is finished; the startup screen then appears:

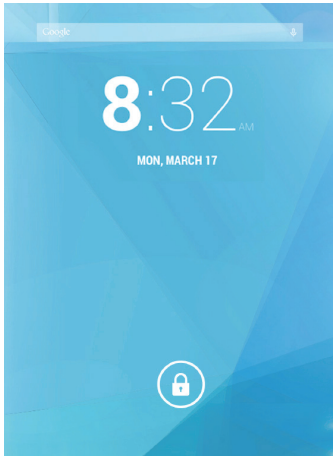

Touch the screen at the lock symbol and swipe sideways. This will unlock your tablet and display the home screen. This is sometimes called a desktop screen, as on a laptop or personal computer. At the bottom of the home screen you will see the following icon:



Touch this symbol and the Apps page appears. Touch any icon on the Apps page and it will open the application that you have chosen. You are now up and running!


CHECKING OUT THE CONTROLS AND CONNECTIONS

Physical Controls

These are controls that you can see and touch at all times, even when your Tablet is switched off. They are separate items that actually move when you operate them. There are just three of these:

- On/Off – Press to switch on; press again to switch off. For some operations you need to hold the on/off button down for a couple of seconds; this will be explained for each operation that uses this control.
- Volume UP – press to increase volume
- Volume DOWN – press to reduce volume

Virtual Controls

These controls are simply images on the screen. They appear as icons (small figures) and are displayed only when they are needed. At different times different icons will show up on the same part of the screen. This  is a typical icon. It is usually shown at the bottom of the screen, but it can also show up in other places. There are a large number of virtual controls. What they are, what they do and how they work is explained in the “Basics” section, or in the section where they are used.

Connections and Plug-ins



USB/Charger Port – This is used with the USB/Charger cable when you need to charge the battery on your Trio 7.85 vQ Tablet, or if you wish to connect your Tablet to another device (such as a personal computer or notebook).

Audio Jack – You can plug headphones into this jack for personal listening or when you are making a phone call.

microSD Card Slot – If you wish to increase the data storage on your Tablet you can purchase a microSD card and plug it in here. Your Tablet will accept cards up to 32GB capacity.

BASIC OPERATIONS

Power Monitoring and Charging

You can see the battery icon  on the upper right hand corner of most screens and monitor battery capacity. When the power runs out, the device will automatically turn off. When the screen shows low battery , users can use the computer to charge it. It takes approximately 4 hours to fully charge.

Connecting to your Computer and Loading Files

Attach your USB cable to your computer, and then the tablet. Select “Turn on USB storage” on the device, it will be recognized in the “Computer” or “My Computer” section of your PC as an “ECL Tablet” player. Simply open this drive and drag your files to the appropriate folders.

Please note that MAC operating systems will display the drive on the desktop and in your listed devices.

Powering on your Tablet

When you power your tablet on, you come to your home screen. You have five home screens to add your applications and shortcuts to. Tap an icon to select a file or start an application. If you hold your finger on an icon for several seconds, you can move the icon around on the screen, or to a different screen.

Home Screen Menu

Tapping the sub menu icon will bring up your home screen menu. This menu allows you to manipulate wallpaper, manage apps and system settings.

A screenshot of a dark grey menu with three white text options: "Wallpaper", "Manage apps", and "System settings".

Wallpaper

Manage apps

System settings

MAIN SYSTEM MENU


Your main system menu allows you to access applications you have downloaded and adjust the settings on your tablet.

Please note: We are unable to provide support for third party applications. Please contact the software manufacturer for issues with an application.

File Manager: Select this to browse images, audio files, movies, ebook files, etc. saved on the internal memory or SD card you have installed. Selecting one of these files will open the file in the appropriate program.

Browser: Selecting this option will open your web browser. For detailed instructions, please refer to the “Main Functions” section below.

Settings: This option will allow you to adjust most of your settings, including Wi-Fi, screen brightness, etc. For detailed instructions, please refer to the “Main Functions” section below.

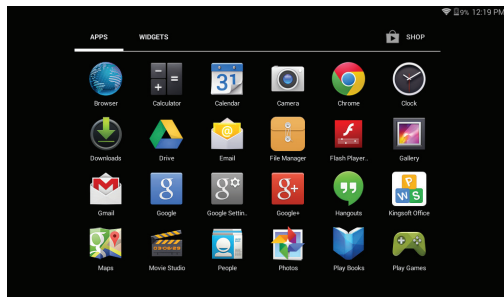

MULTI-MEDIA

Your device supports the following media formats

Audio file formats supported:

MP3, WMA (non encrypted), MP2, OGG, M4A, MA4, FLAC, 3GP, WAV

Supported video formats:

AVI(H.264, DIVX, XVID), RM, RMVB, MKV(H.264, DIVX, DIVX, XVID), WMV, MP4(H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV (H.263,H.264), HD 1080P max.

Supported image formats:

JPG, JPEG, GIF, BMP, PNG

Music

All music files can be accessed through the "Play Music" app. Music stored locally on the device can be played here. Songs purchased from the Play Store can also be streamed over Wi-Fi in the Play Music App. To get started:

1. Browse to the Apps catalog and tap the Play Music app.
2. Swipe up and down to browse for your music and tap songs you wish to play.
3. Standard Play, Previous, and Skip buttons can be found at the bottom of the now playing playing screen.
4. Tap the back button in the bottom tray to go back within

the app. You can also tap the name of the song in the play bar at the bottom of the screen to return to the Now Playing Screen at any time.

5. Tap the three vertical dots icon next to song files to access options for adding to a playlist, deleting and more.
6. From the main screen, tap “Listen Now” in the upper-left corner of the screen to create/access playlists, view settings, and access other features

Video

Access your devices video files from the Gallery or Play Movies and TV app (requires a Google account)

1. Tap the Gallery or Play Music and TV app. The device will display all compatible video files
2. Tap the file you want to play

Images

View images

1. Tap the gallery application.
2. This will bring up the image gallery, tap the file or folder you want to view.
3. Tap the image you want to view, the system will view the image in full screen.

4. When you view images, you can zoom in and out by pinching or sliding two fingers apart.

Edit and setting images as a contact or desktop

After opening an image, tap the image again to bring up your menu and delete icons. Tapping the delete icon will allow you to delete the image. Tapping the menu icon will bring up your image sub menu.

Slideshow: Tap to enable slideshow mode.

Edit: Tap to edit the image.

Rotate left/Rotate right: Tap to Rotate the image.

Crop: Tap allows you to crop the image.

Set picture as: Tap to set the picture as a “Contact image” or “Wallpaper”.

Details: Tap to display image details, such as file name, creation date, dimensions, orientation, file size, path, etc.