

7inch Tablet PC

Brand Name: ubilsate

Model Name:3G7

FCC ID: 2AAMZ-3G7

Dear Sir/Madam:

Thank you for selecting our digital mobile phones.

The mobile phone is a kind of touch-screen candy-bar mobile phone. Besides the basic mobile communication function, the mobile phone also provides you with multiple utility functions such as camera, input method, phonebook, personalized chords, memory card (T-Flash card), sound recorder, calculator, scheduled power on/off, etc. for the convenience of your work and leisure activities. You can use the mobile phone in an all-round way after you read the Manual. Our company reserves the right to modify the content in the Manual without any prior notice.

Contents

I. Cautions	4
1 Safety Information.....	4
1.1 Traffic Safety First.....	4
1.2 Turn Off in Hospital.....	4
1.3 Turn Off in Airplane.....	4
1.4 Turn Off When Refueling	4
1.5 Turn Off near Blasting Sites	4
2 Cautions on Mobile Phone Use	4
2.1 Interference.....	4
2.2 Reasonable Use.....	4
2.3 Qualified Maintenance Service.....	4
2.4 Water-Resistance	4
2.5 Emergency Calls.....	4
3 Precautions for use of Battery.....	4
4 Cautions for Children.....	5
II. Start to Use	5
1 Battery.....	5
1.1 Remove/Insert the Battery.....	5
1.2 Charge the Battery	5
2 Connecting to Network	5
2.1 SIM Card	5
2.2 Insert and Remove the SIM Card.....	6
2.3 Insert/Remove the Memory Card.....	6
2.4 Switch ON/OFF	6
2.5 Unlock SIM Card.....	6
2.6 Connection to Network.....	6
III. Basic Functions.....	7
1 Make calls	7
1.1 Make Domestic Calls	7
1.2 Call Extension Phone.....	7
1.3 Make International Calls	7
1.4 Make Listed Calls	7
2 Emergency Calls	7
3 Answer Calls	8
4 Call History.....	8
5 Connection Option	8

IV. Function Menu Instruction.....	8
1. Browser	8
2. Calculator.....	9
3. Calendar.....	9
4. Call Log	9
5. Camera.....	9
6. Clock	9
7. Contacts	10
8. Downloads	10
9. Email	10
10. Facebook	10
11. File Explorer.....	10
12. FM Radio.....	10
13. Gallery	10
14. Email	10
15. Search	11
16. Messaging.....	11
16.1 Compose new message	11
16.2 Message Setting	11
17. Music	11
18. Phone	12
19. Settings	12
20. Sound Recorder.....	13
V. Input	14
VI. Quick Start Guide	14

I. Cautions

Please read the concise rules. The breach of the rules may result in danger or violation of law.

1 Safety Information

1.1 Traffic Safety First

Please use the mobile phone carefully when you drive a car. Park your car at roadside and then use the mobile phone if the driving condition is bad.

1.2 Turn Off in Hospital

Please abide by relevant provisions or regulations. Please turn off your mobile phone near medical equipment.

1.3 Turn Off in Airplane

Wireless equipment has disturbance in the airplane, so the use of the mobile phone in airplane is dangerous and illegal.

1.4 Turn Off When Refueling

Please don't use the mobile phone in gas station or near fuels or chemicals.

1.5 Turn Off near Blasting Sites

Don't use the mobile phone in blasting sites. Please observe relevant restrictions and carry out rules or regulations.

2 Cautions on Mobile Phone Use

2.1 Interference

All phones may be interfered, which affect phone calls.

2.2 Reasonable Use

Use only in the normal position. Do not touch the antenna area unnecessarily.

2.3 Qualified Maintenance Service

Only qualified personnel may install or repair this product.

2.4 Water-Resistance

Your device is not water resistant. Keep it dry.

2.5 Emergency Calls

Ensure the phone is switched on and in service. Enter the emergency number and press the Dial icon.

3 Precautions for use of Battery

3.1 Do not dispose of batteries near or in a fire to avoid dangers.

3.2 Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

4 Cautions for Children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

II. Start to Use

1 Battery

The battery which is initially 50% charged can be used immediately. Please fully charge/discharge the battery for the first three times to get maximum capacity.

1.1 Remove/Insert the Battery

■ Installing the battery

1. of the battery to one end of the sheet metal contact phone battery connector contact contact;
2. Press down on the battery the lower end;
The phone back cover with the phone body card, battery installation is completed. Make sure the battery is properly installed before turning.

■ Remove the battery

The battery lower part of the gap at the back cover has been removed, grasped, and pull to remove the battery.

Note:

- (1) Remove the battery before shutdown.
- (2) Be sure to operate in accordance with the above method steps.

1.2 Charge the Battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during the charge, there will still be a charge indication on the screen that shows the phone is still being charged. If the device is overused when the battery is low, it might take some time to appear the charging icon.

When the battery indicator on the screen says 'fully charged', then thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will have a 'fully charged' scene. It generally takes 4 hours to charge the battery. During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging. .

Attention: Charge the phone in a well ventilated place in which the temperature is from-10°C to +50 °C. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during the charge, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

2 Connecting to Network

2.1 SIM Card

Insert valid SIM card (subscriber identity module) before using the device.

All information related to the reach of the network are recorded in the chip of SIM card, including the name, phone number and messages stored in the SIM card contacts. In case of losing or damaging SIM card information, users should avoid touching the metal touching side

and keep SIM card away from electrical and magnetic field.

2.2 Insert and Remove the SIM Card

- Switch off the device, and remove the battery and other external power supply.
- Insert the SIM card into the card slot as the picture indicated.
- Please switch off the phone and remove the battery before removing the SIM card.

Warning: Damages could happen to your SIM card if the device is not switched off when taking out of the SIM card.

2.3 Insert/Remove the Memory Card.

- Switch off the handset.
- Insert the memory card into the slot
- **Attention:** This handset doesn't support the hot-swap of T card. When you need to take out the inserted card, please switch off the device before taking out the memory card.

2.4 Switch ON/OFF

Do a long press the Switch on/off key to switch on/off the phone. If the device is switched on but the SIM card isn't inserted, the lock screen will show "please insert SIM card"

After inserting the SIM card, the screen will show the notes in the following order when the phone is switched on:

Type in PIN—if you have already set the SIM code.

Search—The handset will be searching for proper network connection.

2.5 Unlock SIM Card

To avoid illegal use, the SIM card is enciphered with PIN (personal identification number) as a protection. When this function is ON and you have already set a PIN code, you need to type in PIN code every time the handset is switched on in order to unlock SIM card and use the handset.

You can turn off the SIM PIN code. Yet in this situation, the SIM card can't prevent illegal use.

■ Input PIN code, press arrowhead icon to erase typing error and press OK to end typing. For example, if the PIN code is set as 1234, then type "1234" then press OK.

The SIM card will be locked if you type in wrong code for three times continuously. The handset will inform you to type in PUK code.

Attention: Your network provider will set a standard PIN code (four to eight numbers) for your SIM card. It is recommended that you change the code into a personal code as soon as possible.

2.6 Connection to Network

When the SIM card is successfully unlocked, the handset will automatically search for available network (the lock screen shows searching). The handset will show the information of the network provider, the status bar will show the signal strength and the network condition once the handset is successfully connected to a network.

Attention: If the lock screens shows "Emergency", it means that you're out of network coverage (service coverage) or your card is not valid, yet you can still have emergency calls based on signal strength.

III. Basic Functions

1 Make calls

When the network provider icon appears on the standby screen, you can call out or answer calls. The indicator on the upper right part shall show the signal strength.

Quality of connection will be greatly influenced by obstructions. So movement in a small range may effectively improve the quality of connection.

1.1 Make Domestic Calls

Use virtual keyboard to enter phone numbers and then press Dial icon to call. If you need to change the phone number, please press the delete key on the touch screen to delete. When the call is answered, the screen shall show the connection status.

1.2 Call Extension Phone

Some of the extension phones can't be directly connected to. Use the virtual keyboard, enter switchboard number, open the option menu and choose "Add 2-sec pause", and then dial the extension phone number.

Type in as follows to call extension phone:

Zone description > switchboard number > Add 2-sec pause > extension phone number > call

1.3 Make International Calls

If you need to make an international call, do a long press on the 0 key on the virtual keyboard until there appears the sign "+" for international call prefix, which helps you call from any country (For example, in China that is 86)even if you don't know the international call prefix of that country.

You can make an international call according to the following typing order: + > country code > complete phone number > dialing icon (type in the prefix code, and then continue to enter the country code and complete phone number). Country code usually follows conventional practice: German is 49, Britain 44, Sweden 46 and so on.

When making international phone calls, the "0" in the city code should be emitted.

For example, if you want to make a call to Shanghai from other countries, you should dial: +86 21 114.

1.4 Make Listed Calls

Every dialed and received phone number is recorded in the call history list. Recently dialed, answered and missed phone numbers are chronologically (newest to oldest) listed in the "all" log. You can also choose and check missed, answered and dialed list according to your need.

- Listed phone numbers can be called out by pressing the respective log.
- Press the small icon on the right side to enter the details interface of the log. In the call history interface, users can do a long press to save or delete the number. In the details interface, the phone number save function is preset.

2 Emergency Calls

You can call for emergency service as long as you are in the network coverage (check the signal strength indication bar on the upper right side of the handset screen). If your network provider doesn't provide roaming service in this area, there will be "Emergency Calls

" on the lock screen. If you are in the network coverage, you can have emergency calls even without a SIM card.

3 Answer Calls

Directly press "answer" key to answer an incoming call. If your headphone is connected to the handset, you can use the headphone key on the headphone answer calls.

Attention: A short press of the headphone key will answer the call while a long one will refuse to answer the phone; When you hang up the phone, you need to long press the headset key

4 Call History

This handset not only can list all calls in reverse chronological order, but also list a floating menu with all, answered, dialed, missed calls for checking call history of different kinds.

5 Connection Option

This option can only be seen during a call. The waiting call, hold call, multi-party call functions require the support of the network. Please contact with the network provider.

In the connection option, you can do the following operations:

■ Speak

Switching hands-free and handheld

■ Hold

Temporarily hold the current one-line call.

■ End

End the current call.

■ Add Call

Enter the dialing screen for a new call.

■ Contacts

Enter the Contacts menu.

■ Dialpad

Enter the dialing screen of the current call.

■ Mute

Turn on/off Mute. When the mute is ON, the other person can't hear this handset's sound.

■ Start recording.

Record the current call.

■ Conference*

In Conference call mode, you answer the incoming call and add it to the conference in accordance with the instructions; Hold multiparty conference; Have a private conversation with one party and hold other parties' call; Connect one party to the other and end the conference call; Put one party on hold; End current call and all hold on calls.

Attention: Menu items marked by * happen only under certain situations. Users need to apply for opening the conference call functions to relevant service provider.

IV. Function Menu Instruction

1. Browser

Select the browser icon to enter the Google Interface and you can search for websites.

2. Calculator

The handset is provided with a calculator with basic functions. You can carry out the operation for plus, minus, multiply, and divide by pressing the screen. You can use some functions in the advanced panel.

Attention: the accuracy is limited and round-off error may occur.

3. Calendar

Calendar You can add events for each day and assign reminder for specific events. Calendar page, touch the Menu button, you can also choose to refresh, search calendars to display, set operations.

4. Call Log

Click the dial-up menu to select the top of the screen, an icon in the middle of the call records interface. Operating interface in the list are as follows:

- Click the icon to the left of the phone records, choose whether to add this number to the contact.
- Click on a record to view detailed information about the record number, add to contacts, call, send a message, this interface touch menu keys operational delete call records, call Edit number before the operation.
- Touch menu button pop-up menu: Delete settings.

5. Camera

The device comes with the camera, you can easily take photos and record video clips.

- **Photographs:**

Into the camera preview screen, the camera program starts, placed horizontally phone screen tie-screen display. Click on the screen below the camera icon to take a picture.

Camera interface under different icons represent different operating content See specific mobile content.

- **Camera:**

Select the camera icon to switch to video camera preview screen, click on the camera icon at the bottom left. In the camera mode, click the camera icon on the bottom of the screen, and start shooting, and click again to stop shooting.

Video interface under different icon represents a different operating specific, see mobile content.

6. Clock

Touch set the alarm clock interface can enter the alarm interface, enter the alarm interface, touch the menu button pop-up menu options are as follows:

- **grandfather:** clock: Click to return to the clock interface
- **to add Alarm clock:** add more alarm entry.
- **setting:** selectable silent mode, the alarm on or off, adjust the alarm volume size, select Snooze interval, set the volume button on the side of the alarm sounds.

Turn on alarm

1. Select an alarm entry into, select Enable alarm ", the right of the icon, open the green.
2. of the alarm time, repeat type, ring tones, vibration, label set.

Click "Finish" to save the alarm settings.

Note:

1. in order to ensure the alarm effect, do not set the phone to silent mode.
- 2.alarm settings, if you replace the battery, to be carried out within one minute, otherwise the shutdown alarm clock, Automatic Switcher, time and date information may be inaccurate or missing.

7. Contacts

Entering the Contacts, you can check all the contacts, search for contacts or add new contact. New contact means a newly added phone number that is recorded in the SIM card or the handset.

When adding a new contact, you can type in the name, address, phone number, other phone number, work place, other email address and so on.

You can also check call history and contact group.

8. Downloads

You can check the downloaded or being-downloaded contents.

9. Email

First you need to set the Email account. Step 1: enter email address and password. Step 2: select account type, choose OK to connect.

10. Facebook

Facebook is a very popular social networking site around the world giving people the power to share and make the world more open and connected. Millions of people use Facebook everyday to keep up with friends uploads an unlimited number of photos, share links and videos, and learn more about the people they meet.

Please ensure that you have GPRS settings in your phone to open Facebook. Contact your operator for GPRS settings.

11. File Explorer

You can manage file , including Download, Music, and Received File. Press menu key to create a new folder or select folders to copy, move and delete.

12. FM Radio

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector. Select FM Radio from the Menu to access the radio controls

Attention: this handset doesn't have a built-in antenna. If you want to listen to the radio, please insert the headphone first. Pressing the side key can adjust the volume.

13. Gallery

View pictures or video files stored on the memory card.

In the gallery interface, there are different folders. Select a folder and press to enter it. Press image or video to view pictures or videos.

When viewing the picture, if you press the screen, a menu with "share, delete, more" will pop out. Choose "share" to send the file through Bluetooth or via a message; press the menu key for further functions like detailed information: slideshow, set picture as, edit, and rotate left or right.

If you press the capture icon at the upper right corner, you can directly get a capture or record a video.

14. Email

Use the mailbox automatically receive mail. The user can set the time interval, take the initiative to go to the server to receive e-mail and read the body of the e-mail and attachments through mobile terminals, you can also directly reply, forward and compose a new email.

Note: To learn more business rates and other details, please consult your local carriers..

15. Search

Enter the search interface, input the search content, connection network search for relevant content. The touch of the upper left corner of the search icon can choose the searchable items, searchable items include: all, networks, applications, contacts and other..

16. Messaging

In the main menu interface, click on the "information" to enter the information list interface.

1. Tap the menu button, the pop-up menu: delete all sessions and settings.
2. Click the icon in front of the sender, choose whether to save the sender's number to contacts .
3. click opens the content, the information content of the interface, the top of the screen, click the phone icon may have a number of information call
4. information content interface, press and information content at the pop-up sub-menu, you can copy text, save the information to the SIM card / phone forwards, lock, Details, delete and other operations

16.1 Compose new message

In the information interface, click on the bottom left corner + icon, to write information interface.

- click on the "Recipient" icon to enter the contact list interface, select the desired contact, click on the lower right corner + icon, the selected number can enter the recipient in the edit box.
- click on the edit box can be directly input the number .According to this box popup menu you can select the operation.
- "input" click on the edit box, edit the information content.
- click the upper right corner of the "additional" icon can add attachments. This information has been converted to mms.
- touch menu button, can write information to add topics, send, abandon, insert commonly used phrases, insert emoticons, insert contacts, set the edit operation.

After the end of information content editor, click on the 'content edit box' on the right side of the "send" arrow icon, can send sms.

16.2 Message Setting

Include storage settings, SMS settings, MMS settings notice settings, service information settings and so on.

17. Music

Use the Music player to play music files. The songs saved in your SD Card can be played using the Music Player of the device.

Click music library interface, the following options:

- 1 artists: in accordance with the artist's name to divide the type of songs.
- 2 Album: in accordance with the album name to view the songs.
- 3 songs: view all music list.
- 4 playlists: view the current playlist and pre-existing playlist.

Click on a song into the media player interface, touch the menu button pop-up menu:

- Music Library: View native music library file.
- party random play: random play party music.
- add to playlist: add the songs to the playlist.
- as a ringtone: ringtones set to the track.

- Delete: delete this repertoire
- sound: open / close equalizer equalizer, editor equalizer

18. Phone

Press the keyboard, enter the phone number, and press Dial icon.

19. Settings

Wireless and networking

- SIM card management: to enter the can edit SIM information, set a voice call, the default SIM card information, data connection, set up international roaming binding contacts to a specific SIM card.
- WLAN: turn on or turn off the WLAN.
- WLAN settings: turn on or turn off the WLAN, to turn on or turn off automatic access can open network notification function or add WLAN network. Touch the menu button you can select the scan function or Advanced Settings.
- Bluetooth: turn on or off Bluetooth.
- Bluetooth settings: click to automatically search for and display the Bluetooth devices list, touch the Menu button, the Bluetooth name rename detection timeout setting, display the received file

Note:

- A. display device name, search the device name is too long, it will automatically truncated to the appropriate length.
- B. select pairing the device will pop up a dialog box, the user needs to enter the Bluetooth PIN match code. The two devices must use the same password. Headset or earpiece kit may use a fixed password, you can refer to the Bluetooth headset instructions. (Device can perform a lookup operation has been paired do not have to be matched.)

More

- flight mode: Turn on / off flight mode
- VPN: Add or modify the VPN network
- network sharing & portable hotspot: USB sharing networks or Bluetooth sharing network.
- WiFi Direct: start WiFi Direct operation will turn off the WLAN client / hotspot operation.
- mobile network: start the data access capabilities of the mobile network, set data roaming, the name of the access point, the priority network and network operators.

Profiles

including standards, mute, Meeting, Outdoor four kinds of modes. Enter its set

Display

- to adjust the screen brightness.
- set wallpaper
- turn on or off automatically rotate the screen.
- to adjust the delay time before the screen automatically locks
- set the phone menu font size

Storage

Select the preferred installation location, and view storage space

Battery

Check the battery power consumption

Application

View phone has been downloaded, SD card, running all applications

Accounts and Synchronization

Add Account sync email

Location-based services

My position:

- to select the location using google services.

Security

- Set up screen lock.
- Set up SIM card lock
- turn on or off the password visible.
- to select the Device Manager.
- to select whether or not to use security credentials.
- choose whether to install encrypted certificates from SD card.
- Clear credential storage of all content

Language and input method

Setting the language and default input method

Backup and reset

To reset DRM and restore the factory settings

Date and Time

- turn on or turn off automatic date & time.
- to set the date, time zone, and time.
- to select the time and date format.

Timer switch

The settings automatically start and auto-off time.

Auxiliary functions

- large font: open the function menu is displayed in large font
- press the "Power" button to end a call: open the function call, press the "Power" button to end the call and not turn off the screen.

Developer Options

Specific operation, please refer to the phone, remember to exercise caution, should problems restart the phone or to restore the factory settings

About phone

View status messages, legal information, model and version information.

20. Sound Recorder

This equipment provides a long recording, make sure there is enough storage space for your cell phone memory card.

Record sound

1. From the main screen, click on the "recorder"
2. Keep the phone microphone near the sound source.
3. Click “

13

recording, click Save to save the recording, click to give up, give this recording, click  Play the tape.

Tip:

Use the music player can play audio files directly.

V. Input

1. Click the editing frame and a input option menu will pop out which include upper-case letters, lower-case letters and number mode.



2. Press  to switch freely between English and Number typing.



3. Press  to insert facial expressions.

VI. Quick Start Guide

Featured Function

Besides basic mobile phone functions, your handset also has various practical and fast featured functions. They are briefly introduced as follows:

- **Contacts:** Support of quick search for qualified phone number records; the contact storage volume of SIM card/USIM card depends on the card itself; support texting through Contacts, copying a single record to SIM card/USIM card/handset and support copies among the handset, SIM card and SD card; support deleting the contact records in the SIM/USIM card and the handset.
- **Call log:** Your handset will automatically store information related to call history for checking; support dialing all of the phone numbers listed in the call history; support storing the listed phone numbers in call history; support deleting single call record and all call records.
- **Messaging:** Support storing the messages on the handset; support inserting text templates when editing a text; support copying phone number in the message.
- **Music:** Support playing audio files, including mp3 formats.
- **Recorder:** Support of call recording and non-call recording. During a call, you can select the open recorder in the option menu to record the call conveniently. You can check the generated recording file in the T card.
- **Camera:** Support of picture-taking. You can change the camera settings to your preference.
- **Settings:** You can change the phone settings to your preference, including SIM card management, wireless connection and network, call settings, profiles and so on. You can change the functions of each item according to your own taste, such as date & time, schedule ON/OFF and so on.

FCC statement

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device is acting as host and operating in the 2.4 GHz (2412 ~2462 MHz) band.

Ad Hoc function is supported but not able to operate on non-US frequencies. Do not use the device with the environment which below minimum -10 °C or maximum over 50°C .

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.