

Size: 59.14 x 57 mm

材质: 108g铜板纸, 正反面印刷, 覆亚膜

DOUBLE SIDE PRINT

BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES

CHARGING THE HEADPHONE

⚡ Charge the headphone before using it for the first time.

🕒 Plug in the cable to the micro USB port and charge for at least 2 hours.

Connect the charging cable to charging port.



BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES

PAIRING YOUR HEADPHONE

Your headphone will work best if it is within 30 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process. Make sure the headphone is turned off before attempting to pair it with a smart phone or tablet. Press and hold the "Power" button to turn on the headphone.

BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES



1 Press and hold the button until you see the light flash red and blue. This indicates that your headphone is ready to pair.



2 From your smart phone or tablet, find a list of nearby devices and choose "BDY-4150". Enter "0000" if asked. The headphone will "beep" when pairing is complete!

BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES

CONNECTION LOST?

- If pairing the headphone does not work, turn off the headphone and repeat the steps again in "Pairing your Headphone."
- Make sure your headphone is within range of your smart device.
- If you hear a long beep, you need to recharge your headphone. Connection may be lost due to low battery.
- When charging your headphones, only use the enclosed USB cable.

MEDIA KEY FUNCTIONS



- + Press & Hold - Next Track Press Once - Increase volume
- ⏪ Press & Hold - Turn device on/off Press Once - Play/ Pause music
- Reject an incoming call
- Press & Hold - Previous Track Press Once - Decrease volume

BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES

SPECIFICATIONS

| | |
|--------------------|------------------|
| Bluetooth Version: | 4.2 |
| Range: | Up To 33ft (10m) |
| Frequency: | 120-20khz |
| Play Time: | Up To 8-10 Hours |
| Speaker Size: | 40mm |
| Battery: | 300mah |
| Charging Time: | Up To 2 Hours |
| Standby Time: | Up To 180 Hours |
| BT ID: | D038588 |
| FCC ID: | 2AANZ4150 |

WARNING

Keep away from water and moisture.
Keep away from heat sources.
Do not disassemble.

BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL

BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES

DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

BODY GLOVE QUICK START GUIDE

SWEAT-PROOF WIRELESS HEADPHONES

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

