 


## MANUAL: 108G COATED ART PAPER, DOUBLE SIDES PRINTING

SIZE:130 X 80MM

### PAIRING YOUR DEVICE

- 1 - Press and hold the power button to turn on your device
- 2 - Keep holding power button until LED indicator flashes blue & red - This will indicate you are in pairing mode
- 3 - On your phone go into your bluetooth settings and look for Device "DG-BHPH" - tap to pair devices  
IMPORTANT: Make sure bluetooth is turned on before connecting to the devices
- 4 - The LED indicator will slowly flash a blue light when paired successfully

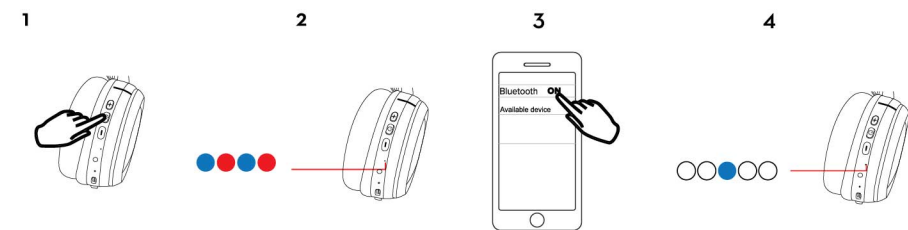

### DEVICE MODES

#### ANC MODE:

- The active noise cancelling reduces distracting background noise
- You can use ANC mode alone or in combination with music playing via bluetooth
- To activate ANC mode: Slide the ANC switch button to "ON" position - The LED indicator will turn green
- Slide the ANC switch to "OFF" position to stop using ANC mode

#### AUX MODE:

- Insert an auxiliary cable into the AUX-IN jack to listen to music from another device
  - You device will automatically change to AUX mode when cable is inserted
  - You can use AUX mode when your headphone batteren is low or depleted
- Note: While AUX mode will work, headphones ANC function and controls will be unresponsive

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AANZBHPH  
BT ID: D059694

**Vibe**  
e-ssential

VIBE™ COPYRIGHT© ALL RIGHTS RESERVED.  
DISTRIBUTED BY DGL GROUP, LTD., 2045 LINCOLN HIGHWAY, 3RD FLOOR, EDISON,  
NJ 08817, UNITED STATES.

**Vibe**  
e-ssential



### CAUTION: READ BEFORE USE

- READ ALL INSTRUCTIONS BEFORE USING YOUR HEADPHONES
- Do not submerge in water or place on wet surfaces
- Do not allow children to use headphones without adult supervision - Keep out of reach of infants
- Do not expose your headphones to excessive heat
- Handle your headphones with care - Do not drop, throw, or crush your headphones
- Do not use in overly dry areas - This can cause static discharge and damage during usage
- Do not expose to temperatures above 104°F (40°C) - Keep out of direct sunlight
- Do not attempt to disassemble or repair the product yourself
- Product not intended for commercial usage
- Do not expose product to strong magnetic fields
- Please recycle or dispose your headphones properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your headphones for further information



 
CAUTION

#### BATTERY WARNING:

- The device is equipped with a lithium polymer battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in re or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.


### PRODUCT DIAGRAM

- 1 - Volume up - Press and hold to increase volume - press to go to next track
- 2 - Power - Press to play/pause or answer/end calls - Press and hold to decline call
- 3 - Volume down - Press and hold to decrease volume - press to go to previous track
- 4 - Charging indicator
- 5 - AUX in
- 6 - Microphone
- 7 - Type-C charging port
- 8 - Active noise cancelling on/off

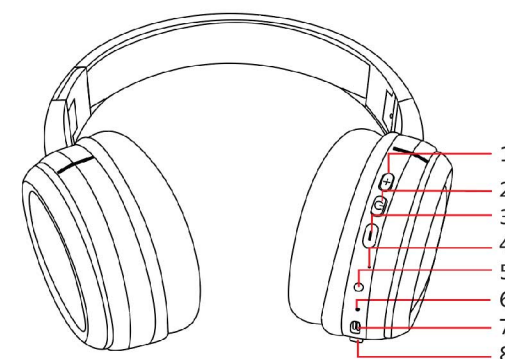

### CHARGING YOUR DEVICE

 - 1 - Insert the included USB type-c into the charge port on your headphones
- 2 - Plug the USB-A end of your included cable into any standad USB port
- 3 - The LED indicator will turn red when headphones are charging, and turn off when charging is completed

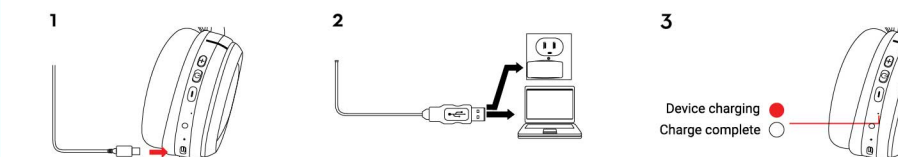

#### NOTE

- Remove charging cable completely once charging has completed
- Overcharging headphones could reduce total battery life
- A charged battery will lose its capacity if not used on a regular basis