



**TABLE OF CONTENTS**

- Important Safety Information ..... 2
- Introduction ..... 6
- Overview ..... 6
- Specifications ..... 6
- Assembly Instructions ..... 7
- Controls and Features ..... 8
- Install the Quirky App ..... 9
- Using Alexa ..... 15
- Using Google Home ..... 17
- Cleaning ..... 21
- FCC Statement ..... 22
- RF Warning Statement ..... 22
- Warranty ..... 23

Pictures in the manual are for reference only. Please refer to the actual product.

**IMPORTANT SAFETY INFORMATION**

**SAVE THESE INSTRUCTIONS** ⚠️

When using your Cool, basic safety precautions should always be followed. Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Neither Quirky nor its affiliates are responsible for damage resulting from improper use or for damages caused by non-compliance with the information, warnings, and instructions provided in this manual. Please keep this manual in a safe place for future reference.

**WARNING:** Do not exceed the voltage and power rating of the power outlet or connection device. This may generate excessive heat and cause electric shock or fire.

- Only use the appropriate type of electric socket for the product. Connecting the product to an incorrect socket may result in damage.
- Do not immerse the product or any of its parts in water.
- If repairs are needed, send the appliance to our customer service department, or a qualified service provider; do not attempt to repair the unit yourself.
- Always turn the unit OFF after use; in case of a malfunction, and before cooling.
- When removing the plug from the wall socket, never pull on the power cord.
- Do not attempt to remove any parts of the housing.
- Do not insert metal objects into the interior of the appliance.
- To prevent damage to the power cord, do not let it pass over sharp corners or edges.
- Do not expose the appliance to rain or moisture.
- Do not operate the appliance outdoors or with wet hands.
- Do not forcibly bend, twist, pinch, or damage the power cord.
- Do not operate Quirky Cool if the power cord shows signs of damage.

⚠️ Please read this manual carefully and retain for future reference.

**SAVE THESE INSTRUCTIONS** ⚠️

- The appliance has a polarized plug (one blade is wider than the other). To reduce risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. Do not force the plug into the outlet.
- Remove the power plug from the electrical outlet by grasping the plug and pulling it gently. Never pull the cord to unplug the appliance.
- Keep the electric cord away from heat sources or open flames.
- Do not repair the product. Doing so will void your warranty. All repair work must be carried out by a qualified technician. Contact customer service for instructions.
- Do not clean the product using detergents, paint thinners, or other household solvents. Only Cool according to instructions listed in the CLEANING section of this manual.
- Do not spray insecticides or other flammable materials near or on the product.

**WARNING:** This product can expose you to chemicals including lead which is known to the State of California to cause cancer or birth defects or reproductive harm. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). (California law requires this warning to be given to customers in the State of California.)

**CAUTION:** This product should not be used by children under the age of 15 without supervision.

- This product should not be used by persons with reduced physical, sensory, or mental capabilities or lack of experience without supervision or instruction concerning the use of the product in a safe way and understanding of the hazards involved.
- Do not allow children to play with the plastic wrapping and product.

⚠️ Please read this manual carefully and retain for future reference.

**SAVE THESE INSTRUCTIONS** ⚠️

- Do not use this product with any solid-state speed control device, as it may result in electric shock or fire.
- Do not use an adapter or extension cord, as it may cause fire, shock or personal injury.
- Avoid contact with moving fan parts. Do not insert any body parts (e.g. finger) or objects through the grill when the fan is operating.
- Do not cover the grill, or operate in close proximity to curtains, etc. Ensure adequate ventilation around the unit.
- This product is for household use as described in this manual. Using it in an industrial environment or any other place not recommended by the manufacturer may result in electric shock, fire, personal injury, and damage to the product.
- Do not place anything on top of the product.
- Do not run the power cord under carpets or cover it with rugs to prevent tripping, or damage to the cable.
- Keep the product and its cord out of the way, where it cannot be stepped on or tripped over.
- Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons. This will also void your warranty.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
- This product is intended for indoor, household use ONLY. Do not use outdoors or for commercial industrial purpose.
- To protect against electric shock do not immerse unit, plug or cord in water or spray with liquids; do not place fan on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the fan.
- Do not use this product in the immediate vicinity of water, such as bathtubs, washbaths, swimming pools where the

⚠️ Please read this manual carefully and retain for future reference.

**SAVE THESE INSTRUCTIONS** ⚠️

likelihood of immersion or splashing could occur.

- This product is not toy! Children should be supervised to ensure that they do not play with the appliance.
- Turn the fan OFF and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning. Make sure the fan is fully assembled before switching on again.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- The use of attachments not recommended by the manufacturer may be hazardous.
- Place the fan on a dry level surface to avoid overturning.
- Do not operate if the fan housing is damaged.
- A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified technician to replace loose or worn outlet.
- If the fan is not working properly, contact a qualified technician for examination and repair. Never attempt to dismantle the fan yourself.
- Never install or store the unit where it could be subject to:
  - Heat sources, radiators, heat registers, stoves, etc
  - Direct sunlight
  - Mechanical vibration or shock
  - Excessive dust
  - Lack of ventilation, such as cabinets or bookcases
  - Uneven surfaces
- Do not leave the fan running unattended.
- Do not hang or mount fan on a wall or ceiling
- The fan must be fully and properly assembled before use.

⚠️ Please read this manual carefully and retain for future reference.

**INTRODUCTION**

Thank you for purchasing the Quirky Cool Smart Tower Fan! When things get too hot to handle, keep your cool. The Cool tower fan is sleek and unassuming. It's also lightweight and easy to move to any room. You can control all of its features with the sound of your voice or a touch of your phone.

Control oscillation, set an auto shut-off timer and more! Choose between 3 fan modes, normal, natural breeze or a quiet sleep mode.

**OVERVIEW**

**SPECIFICATIONS**

RATED VOLTAGE	120V
FIXED FREQUENCY	~60 Hz
RATED POWER	45W
PROGRAMMABLE TIMER	UP TO 7.5 HOURS

6

**ASSEMBLY INSTRUCTIONS**

1. Take out the fan body and the spare parts from the box.
2. Pass the power cord through the gap between two halves.

3. Connect the two halves of the base by aligning the plastic pegs of each half of the base.

4. Insert the anti-slip pegs into the 4 corners of the base as shown below.

**IMPORTANT:** Make sure that the power cord passes through the cord guides on the rear half of the base.

5. Stand the fan upright.

7

**CONTROLS AND FEATURES**

The control panel consists of an LED display, programmable timer, control keys, and a power on/off button.

**Basic Controls**

Please see below chart for basic functions.

<b>Swing</b>	Press to start/stop oscillation.
<b>Speed</b>	Press the cycle through 3 fan speeds: low, medium and high.
<b>On/Off</b>	Press to turn the fan on. Press again to switch to standby mode.
<b>Mode</b>	Press to cycle through 3 fan modes: Normal - constant speed and output Natural - simulates a natural breeze Sleep - operates quietly
<b>Timer</b>	Press to set an auto shut-off timer. The panel will light up with your set time. Cycle through half an hour up to 7.5 hours. They will light up in combination to show you the set time. For example, a 3 hour timer will show both 2H and 1H lit up simultaneously.

8

**INSTALL THE QUIRKY APP**

Please scan the QR Code, or search for "Quirky" in the App Store or Google Play.

Works with:

**Registration and Login**

1. Run the Quirky App from your smart phone.
2. Register or login. The App will take you to the home page.

9

**Device Preparation**

Before moving forward, please ensure your Cool and your device are prepared for pairing and setup.

- Ensure Cool has been connected to a power source.
- Ensure your smart phone is able to connect to a WiFi network and has internet access.
- Download and open the App on your smart phone.

**Pairing**

1. If this is the first time connecting a Quirky smart home device, you can add your first device by pressing the "Add Device" button on the home page.

If devices are connected to your Quirky App, and you want to add a new device, press the + icon on the top right to connect a new device.

10

2. Select the device you want to connect from the list.

11

3. Follow the steps as prompted by the App to finish connection. If you get stuck somewhere, start again from the beginning.

12

4. The App will show you a list of nearby WiFi networks. Select your home network, enter your password, and connect to it through the App.

If you do not see your WiFi Network on the list, press "Change Network."

13

5. Wait for your device to finish connecting.

6. Once your device is connected, it is ready to use.

14

**USING ALEXA**

Please make sure that your Alexa app is connected to Amazon Echo and both work together successfully under your WiFi home network.

1. Log in your Alexa App, tap top left corner, and tap "Skills".

2. Find the Quirky App in the search bar and tap "Enable."

15

3. Enter the account and password of your Quirky App that you created during registration or login.
4. Tap "Link Now," then tap "Authorize" on the next page to connect Alexa to Quirky.
5. Once connected, the following page will appear. Tap "Done" on the top left corner to complete connection.

6. Tap "Discover Devices" on the next page.

7. Wait a few seconds for Alexa to find and connect to your device through the Quirky App. You should see your device paired in your list of devices when this is complete.
8. You can now control your device with the Alexa App.

16

**USING GOOGLE HOME**

**PREPARATION**

- Download the Google Home app on your smart phone.
- Register your Google Account.
- Pair Cool with Quirky App and name it with a simple and easily recognizable name.
- Finish setting up Google Home.

NOTE: This device currently only supports US accounts.

1. Open your Google Home App, select Account on the bottom right hand corner.

17

2. Tap "Settings."

3. Under "Google Assistant Services," tap on "More Settings."

4. At the top, tap "Assistant."

18

5. Tap "Home Control."

6. Tap "+" on the bottom right hand corner of the screen.

19

7. Find and add the Quirky App from the search bar.

8. Enter the account and password of your Quirky App that you created during registration or login.
9. Tap "Link Now" then tap "Authorize" on the next page to connect Google Home to Quirky.

20

**CLEANING**

Regularly clean the inside and outside of the product to prevent dust from collecting. Dust may prevent the Cool from performing effectively.

1. Only clean the Cool when the power source has been disconnected.
2. Do not use abrasive cleaning tools or harsh cleaning solutions such as bleach, alcohol or any flammable cleaning agents.
3. Do not immerse the heating base or the tower fan's sub base in any liquid.
4. To clean, use a slightly damp, lint-free cloth or sponge to wipe the exterior, air inlet and air outlet.
5. Ensure the Cool has fully dried before plugging into a power source.

21

**FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AANZCOOL

**RF WARNING STATEMENT**

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 7.87 inches / 20 cm between the radiator and your body.

22

**WARRANTY**

This product is covered by a 90-day limited warranty. For details, please contact customer service at: [support1@quirky.com](mailto:support1@quirky.com)

23