

# Manual

Model No.: HY-PLM-GRN (C1)

## Function instruction

- Bluetooth play/SD paly/LINE IN mode/U memory card
- time Bluetooth play and LINE IN play
- Long Press the “-” or “+” button on the unit to adjust the volume;
- Short press to next or previous song.
- USB charge cord
- Hands-free
- Voice prompt function

## 1. User manual

1. make sure the smartphone, tablet or computer you want to hook up to speaker has Bluetooth.
2. Turn on the speaker and look for the little blinking light
3. make sure Bluetooth speaker is power on, then you can choose other way player, needing put in the TF memory card.
4. look for C1 BT-SPK in your device’s Bluetooth list or click
5. Depending on your device you may be prompted to enter a pairing code.
6. when the audio device is in play model, the music will sound from the C1 BT-SPK speakers.

Long Press the “-” or “+” button on the C1 BT-SPK to adjust the volume

If you want to change another music, short press “-” or “+” button on the C1 BT-SPK to adjust the music

Depending on your device you may be prompted to enter a pairing code.

If prompted enter “0000” as the code.

## Hello? Speakerphone? Yes!

Here’s how it works:

1. Make sure your phone and the speaker are connected through Bluetooth and not on a “break.”
2. Answering and ending a call works the same way: simply click the PLAY/PAUSE button on your C1 BT-SPK
3. If you’d rather not talk, hold down the PLAY/PAUSE button on your C1 BT-SPK for three seconds to ignore the call.

THE COOLEST PART: The C1 BT-SPK knows when a call is coming in and pauses the music before ringing. When you hang up, the music starts where it left off—and so does the party. If it’s you making the call, just start dialing from your phone, and C1 BT-SPK automatically does its hands-free thing. Isn’t it refreshing to know your speaker totally gets you?

## Charging the speakers is so easy you’ve

probably figured it out by now, but just in case, you’ve got two options: your computer or a wall outlet.

1. The cord that came with the speaker—the one with the USB on one end and the Micro USB on the other—will work with your computer.
  2. If you want to use the wall outlet, you’ll need to pick up a power cord with a Micro USB the next time you’re at the store, or use any USB AC adapter, including the one for your cell.
- Now go get ready for an epic night while your speaker does too. It needs about 2 hours of me time for 4 hours of party time.

## FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.