



Wireless Karaoke Mic & Speaker

Operation Manual BRK-LEDK-ASST

MADE IN CHINA

Thank you for purchasing the Breakout™ Wireless Karaoke Wireless Mic/Speaker & Speaker. Please read all instructions carefully before using and retain this manual for future use and reference.

- PACKAGE CONTENTS**
- Karaoke Wireless Mic/Speaker
 - Charging Cable
 - Operation Manual

- KEY FEATURES**
- Compatible with Bluetooth®-enabled devices
 - Built-in rechargeable battery
 - Built-in speaker
 - Volume and echo control

SAFETY INSTRUCTIONS
Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in anyway.

Repairs to electrical equipment should only be performed by the manufacturer. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.


Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not expose batteries, battery pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.

DIAGRAM OF BUTTONS & THEIR FUNCTIONS

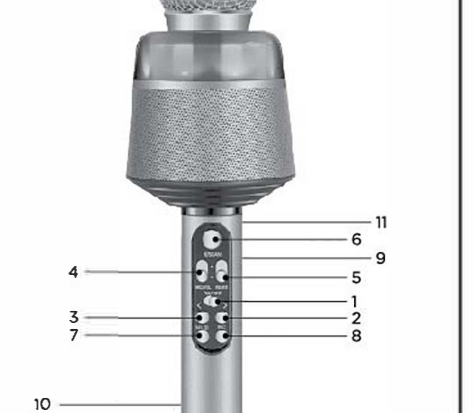

- 1. ON/OFF**
Powers unit on or off
- 2. >**
Short press: skip to next song
Press and hold: volume up
- 3. <**
Short press: replay previous song
Press and hold: volume down
- 4. Mic / VOL**
Slide the volume switch up or down to adjust vocal volume.
- 5. REMIX**
- 6. ▶ || / SCAN**
Short press: Search for next radio station (only in FM mode)
Pressed and hold: one of five vocal effects is activated. Repeat to go through all five effects.
- 7. M / LED**
Short press: toggle through playmodes: Bluetooth / FM Radio
Press and hold: turn LED lights ON/OFF
Connect Bluetooth and open selfie interface on camera, double click M/LED for selfie.
- 8. Rec**
Short press: remove vocals (while music is playing)
Press and hold: record
Connect Bluetooth and open selfie interface on camera, double click REC for selfie.
- 9. TF Card Slot**
Insert TF card to play music files
- 10. USB Port**
Insert USB flash drive to play music files
- 11. 3.5mm Audio Output**
Play audio on other devices via 3.5mm cable connection

Slide the REMIX switch up or down to adjust the amount of voice echo.

6. ▶ || / SCAN

Short press: Search for next radio station (only in FM mode)
Pressed and hold: one of five vocal effects is activated. Repeat to go through all five effects.

7. M / LED

Short press: toggle through playmodes: Bluetooth / FM Radio
Press and hold: turn LED lights ON/OFF
Connect Bluetooth and open selfie interface on camera, double click M/LED for selfie.

8. Rec

Short press: remove vocals (while music is playing)
Press and hold: record
Connect Bluetooth and open selfie interface on camera, double click REC for selfie.

9. TF Card Slot

Insert TF card to play music files

10. USB Port

Insert USB flash drive to play music files

11. 3.5mm Audio Output

Play audio on other devices via 3.5mm cable connection

CHARGING THE KARAOKE WIRELESS MIC/SPEAKER

The Karaoke Wireless Mic/Speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied charge cable to charge the speaker.

Connect the USB end to a computer USB port or a USB wall charger and the micro USB to the charge port on the karaoke mic. The red LED indicator will illuminate while the Karaoke Wireless Mic/Speaker is charging. The red LED indicator will turn off when fully charged.

When the battery is low, the Karaoke Wireless Mic/Speaker will start beeping periodically. When this occurs, please recharge the karaoke mic. When using your Karaoke Wireless Mic/Speaker with an iPhone, the top right corner will indicate your karaoke mic's battery life.

PROMPT NOTIFICATION

- The Karaoke Wireless Mic/Speaker will notify you during "Power On" with a "Power On" melody.
- The Karaoke Wireless Mic/Speaker will notify you during "Power off" with a "Power off" melody.
- The Karaoke Wireless Mic/Speaker will notify you when "Pairing Successful" with a confirmation beep.

PAIRING THE KARAOKE MIC/SPEAKER

1. Ensure the Karaoke Wireless Mic/Speaker is turned off. If it is not, please turn off the Karaoke Wireless Mic/Speaker first before pairing.
2. Press M / LED to make sure the Karaoke Wireless Mic/Speaker is in Bluetooth mode (the default mode when turned on).
3. Place the Karaoke Wireless Mic/Speaker and the Bluetooth® device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 3 feet apart.
4. Ensure Bluetooth is enabled on your device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
5. Once you have activated Bluetooth on your device, select the Karaoke Wireless Mic/Speaker "BRK-LEDK" from the list of available Bluetooth devices.
6. If required, enter the PIN code "0000" and confirm the entry.

Note: If pairing is unsuccessful, turn off the Karaoke Wireless Mic/Speaker first and re-pair following the aforementioned steps. Once you have paired the Karaoke Wireless Mic/Speaker with a device, the Karaoke Wireless Mic/Speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices. To pair to a different device you must first unpair the current device and then repeat the pairing procedure starting from step 1.

OPERATING THE KARAOKE WIRELESS MIC/SPEAKER

Playing music wirelessly
Once the Karaoke Wireless Mic/Speaker is paired to your

device, you can stream music wirelessly to the built-in speaker. Select the track you wish to listen to on your device to play through the speaker. Should you encounter any problems while streaming, please refer to your device's user manual.

TWO WAYS CONNECTION

In addition to the Bluetooth connection, you have the option to connect a device to the Karaoke Wireless Mic/Speaker with a 3.5mm audio cable. After the connection open a Karaoke APP on your phone. The built-in clear audio and vivid sound effects let you listen and sing anytime and anywhere.

PLAYING MUSIC FROM TF CARD & USB PORT

When a TF card or an USB flash drive containing music files is inserted into the Karaoke Wireless Mic/Speaker, these music files will automatically start to play. The playing of these music files will override any mode currently on.

RECORDING & PLAYBACK

Open the Karaoke APP on your mobile phone. Select your favorite song to perform and then press REC button on the Karaoke Wireless Mic/Speaker or on the Karaoke App. Follow instructions of the Karaoke APP to playback the recordings.

SPECIFICATIONS

Operating Distance:	Up to 33ft (10m)
Speaker Output:	3W
Frequency Range:	150Hz - 18kHz
Play Time:	Up to 2.5 hours
Battery Type:	Lithium-Ion
Battery Capacity:	1200 mAh
Charging Voltage:	DC 5V
Charging Time:	Up to 4 Hours
Charging Interface:	Micro USB
FCCID:	2AANZLEDK
BT ID:	D051448

CARE AND MAINTENANCE

- Do not expose the unit to excessive heat or humidity to avoid damage to the product's internal circuitry.

- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the unit in fire as they may explode or combust.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

WARRANTY INFORMATION

The condition of this warranty and our responsibilities under this warranty are as follows:

Supplier's warranty is non-transferable. And this warranty is limited to the original purchaser only.

- * You must be able to prove the date of original purchase of the unit with a dated receipt.
- * The warranty is not applicable if the product has been subject to physical abuse, improper installation, modification or repair by unauthorized third party.
- * The responsibility of supplier's products shall be limited to the repair of replacement of the product as its sole discretion.
- * Specifically exempt from any warranty are limited-life consumable components subject to normal wear and tear such as batteries, decorates and other accessories.
- * A supplier will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized repair, modification or disassemble.
- * Modification and repair of the unit should be done by authorized and qualified service personnel, Center or returned to the manufacturer.
- * This warranty gives you specific legal rights, and you may also have other rights which vary under local laws.

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

We offer a warranty on our products in accordance with the following conditions:

- 1) Breakout™ products are covered by a 3 month warranty. We will resolve damages or defects on Breakout™ products free of charge within 3 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 3 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.
- 2) The warranty does not cover batteries and other parts,

which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.

3) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. Breakout™ reserves the right to exchange the product for a replacement product of equal value if the product sent in cannot be repaired within a reasonable time or at a reasonable cost. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.

4) The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our product.

5) Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.

6) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability.

We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, and loss of earnings or interruption to business.

Asserting a warranty claim:
1) To make use of the warranty service for hardware issues, you must contact the Breakout™ Service Center by email at support@aglusa.com
2) Breakout™ will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and will be asked to send the product to Breakout™.

IMPORTANT: Breakout™ will only accept parcels that have an RMA number. Please observe the following when sending the product:

- 1) Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the product (cables, chargers, manuals, etc.) unless the Breakout™ Service Center specifies otherwise.
- 2) Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
- 3) You must enclose a copy of the sales slip as proof of purchase.
- 4) Once Breakout™ has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

Service outside of warranty
Breakout™ can refuse any service claim made that is not covered by the warranty.

If Breakout™ agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs. Breakout™ will not accept any packages that have not first been approved by Breakout™ by means of an RMA (Return Material Authorization).

Contact us with questions at:
Support@aglusa.com

FCC STATEMENT :

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.