

108g铜版纸，单面印刷折页 尺寸：315x140mm

EDGEWOOD

RUGGED

WATERPROOF WIRELESS SPEAKER



This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

EW-RSEA

USER MANUAL

RUGGED WATERPROOF WIRELESS SPEAKER

Thank you for your purchase of this Edgewood Rugged Waterproof Wireless Speaker. Please read this manual carefully before usage.

POWER

Please charge your Bluetooth speaker fully before its first use.

Charge Using the included Micro USB cable, insert the USB power cable into the micro USB port, and connect the other end of the USB cord into a powered USB source such as a computer, laptop or USB AC adapter (not included).

When your Bluetooth speaker is fully charged, the indicator light will turn red.

SPECIFICATIONS

- | | |
|------------------------|---|
| • Model: EW-RSEA | • IPX: IPX4 Waterproof |
| • Input : DC 5V 500 mA | • Size: 6.69" x 2.95" x 1.77" |
| • Battery: 1200 mAh | • Product Net Weight: 0.833 lb/0.378 kg |
| • Output power: 1x5 W | • Material: ABS-plastic/Grill |
| • BT ID: D051448 | • Accessories: USB Charging Cable |
| • FCC ID: 2AANZRSEA1 | |

PLAYING MUSIC VIA BLUETOOTH

- Turn your Bluetooth speaker on by sliding the power switch.
- The indicator light will turn blue and flash. This indicates that the speaker is in pairing mode and is searching for your Bluetooth device.
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named "EW-RSEA"
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password "0000")
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- You could control the VOL from your phone or audio players.
- Turn off the unit by sliding the power switch when not in use.

PLAYING MUSIC VIA AUX-IN

- Turn your Bluetooth speaker on by sliding the power switch.
- Plug one end of 3.5mm audio cable into the micro port.
- Plug the other end of 3.5mm audio cable into your device and enjoy the music.
- You could control the VOL from your phone or audio players.
- Turn off the unit by sliding the power switch when not in use.

Warning:

- This is not a toy. Please keep away from pets & children.
- Please don't fully submerge speaker in water
- Low battery may cause poor connection and/or may cause the Bluetooth function to not work.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.