

**CONTROLLING YOUR MUSIC**

Once your speaker is connected to a Bluetooth device (mobile phone, tablet, PC, or laptop etc.), you are free to control your music any way you want!

Press the UP and DOWN button for seconds to increase and decrease the volume. Pressing the Volume UP and DOWN buttons only increases or decreases the volume of the speaker, but it does not increase or decrease the volume of the Bluetooth device. Volume can also be adjusted from the Bluetooth devices (sound source).

To switch to the previous or next song simply press the UP and Down button on the speaker. This will switch to the previous/next song in the playlist of the Bluetooth device.

Press the Play/Pause button on the speaker to start or pause songs.

Please note that the UP, Down, and Play/Pause buttons can only control the music playing from the default music playing software on the Bluetooth devices. If the music playing software is not the default player, the music may not be able to be controlled via these 3 buttons. And the Play button may start another song in the playlist of the default player.

**ANSWERING CALLS**

You can use the WS-303 as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. To answer a call, press the TALK/Play button and talk as you would with your device if it was on "speakerphone".

To answer a call, press the TALK button and talk as you would with your device if it was on "speakerphone" mode. The built-in microphone will pick up your voice just like a phone.

To end a call, press the TALK button again. To refuse a call, press and hold the TALK button for 2 seconds. You can re-dial the last number called by double pressing the TALK button.

**USING THE LINE-IN AUDIO JACK**

If your device is not Bluetooth enabled, you can still enjoy your music simply by using the Line-in Audio Jack. Connect the speaker with the included audio cable to any device with a 3.5MM standard audio jack, then the speaker can be used as a wired speaker.

Please note, the Talk, Play/Pause, Previous&Next, Volume Up and Volume Down only work when connected wirelessly via Bluetooth. In case of wired connection, music can only be controlled on your device.

**INTRODUCTION**

Thank you for purchasing our Bluetooth wireless speaker WS-303. Before using the product, please read this manual.

This manual could help you operate the product in a correct way, and avoid damage to the product, and hazard to human and environment.

**TABLE OF CONTENTS**

<b>SPEAKER OVERVIEW</b>	1-2
<b>CHARGING YOUR SPEAKER</b>	3
<b>PAIRING YOUR DEVICE</b>	4
<b>CONTROLLING YOUR MUSIC</b>	5
<b>ANSWERING CALLS</b>	6
<b>USING THE LINE-IN AUDIO JACK</b>	6
<b>BATTERY STATUS ON IPONE AND IPAD</b>	7
<b>Micro SD/ TF card and FM</b>	8
<b>SPECIFICATIONS</b>	9
<b>SAFETY INFORMATION</b>	10-11



**BATTERY STATUS ON IPONE AND IPAD**

When the speaker is connected to iPhone/iPad via Bluetooth, the battery status of the speaker can be displayed on the top of the iPhone/iPad screen, after the Bluetooth symbol.

**Micro SD/ TF card and FM**

When you put in micro SD/TF card, the speaker will be switched to the mode of MP3 and play the music automatically. The music can be controlled by pressing the buttons.

Press the Mode button, it will be changed into FM mode. Continue to press the mode button, it'll switch between Bluetooth mode, MP3 mode and FM mode again. Pressing the Pause/Play button shortly, the speaker can search the channel automatically, or you can search the channel yourself by pressing the Volume up and Volume down buttons.

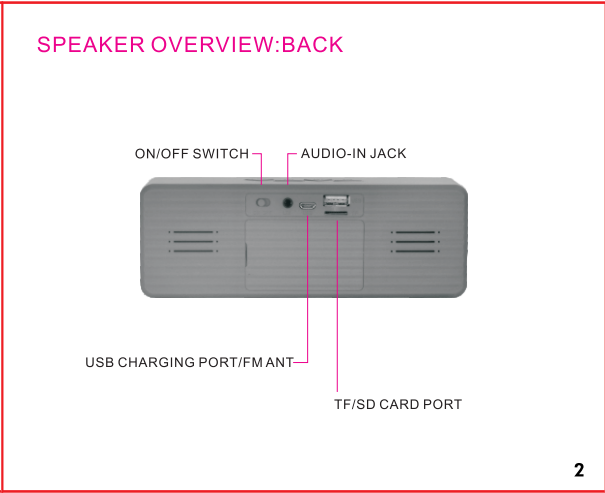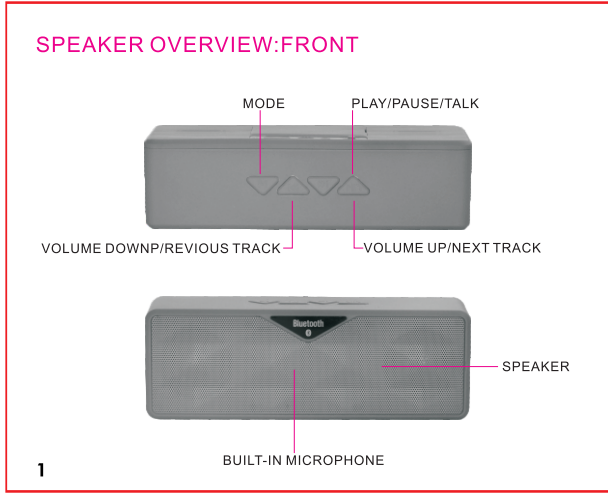

**SPECIFICATIONS**

Speaker driver	mono, 40MM, 30hm
Speaker output	3W*2
Frequency Response	180Hz-20KHz
Signal-to-Noise Ratio	≥80db
Distortion	≤1%
Playback time	5-8 hours
Battery Charging voltage	5V(500mA)
Working voltage	3.3-5V
Battery charging time	about 3 hours
Battery capacity	600mAh
Operating Frequency Range	2.4GHz-2.48GHz
Bluetooth transmission distance	10 meters
Bluetooth compliant	V2.1+EDR

**SAFETY INFORMATION**

**WARNING**  
Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

**Fire and Electric Shock Hazard**

- Do not expose your speaker to liquid, moisture, humidity, or rain. Do not use the speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into the speaker. Such actions could result in electric shock.
- Clean the speaker only with a dry cloth.
- Do not expose your speaker to extremely high or low temperatures.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block ventilation openings.

**Battery/Charging Hazard**

- Do not dispose your speaker in a fire. The battery could explode causing injury or death.
- Only charge the speaker in accordance with this User Manual.
- Do not charge the speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

**CHARGING YOUR SPEAKER**

Before your first use, or when the battery runs out, please charge the speaker with the Micro USB charging cable included in the package.

Plug the small Micro USB pin into the charging port on the back of the speaker, and the other end of the cable (the standard USB 2.0 plug) into the USB port of a computer, or a USB main charger purchased from the same store, and the charger must be designed and tested compatible with this speaker. In this case, please then plug the USB charger to an wall outlet. Using a third party charger could result in electric shock and could also damage the speaker.

The speaker can be charged while working. The battery of the speaker will be charged till the charging process completes. The speaker will be powered by the DC input directly and the battery will be in sleep mode after it is fully charged.

**PAIRING YOUR DEVICE**

- 1) Make sure the WS-303 is fully charged.
- 2) Enable Bluetooth your Bluetooth device (iPhone, iPad, tablet). Bluetooth controls are typically found in the tools or settings menu. Turn on Bluetooth connectivity and make sure your device is "visible" or "discoverable."
- 3) Turn on your new WS-303 by switching the button on the back of the speaker to "On".
- 4) After turning on the WS-303. This signals that the Speaker is in "pairing mode"
- 5) Choose "add new Bluetooth device" or "setup Bluetooth device" on your device. It will search for the WS-303.
- 6) As your Bluetooth device discovers possible items to connect to, it will list their names. Select the device named WS-303. This will connect your speaker to your Bluetooth device.
- 7) If the pairing attempt fails or times out (roughly 3 minutes), restart both devices and start the pairing process again (Steps 2 - 6).
- 8) Enjoy your music wirelessly anywhere you go!

**Automobile Accident Hazard**

- Do not leave or store the speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

**Fall Hazard**

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off the edge.

**CAUTION**

- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer. Or charge the speaker with a wall main charger supplied from the same store where you purchase this speaker. Other chargers may look similar, but using them could result in electric shock and could damage the speaker.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

**FCC**

**FCC NOTICE** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
1. This device may not cause harmful interference, and  
2. This device must accept any interference received, including interference that may cause undesired operation.

**FCC CAUTION**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

To locate the FCC and IC identification numbers, please look on the underside of the speaker.

**CE STATEMENT**  
This product is compliant with the CE directive.