

**Wisort Technology Limited**

**WS-507**  
Bluetooth Speaker

 
**WS-507**  
Waterproof  
Bluetooth Speaker



**INSTRUCTION MANUAL**

<p><b>INTRODUCTION</b></p> <p>You can use the speaker as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. To answer a call, press the TALK button and just talk to the speaker.</p> <p>This manual could help you operate the product in a correct way, and avoid damage to the product, and hazard to human and environment.</p>	<p><b>TABLE OF CONTENTS</b></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td><b>SPEAKER OVERVIEW</b></td><td style="text-align: right;">1-2</td></tr> <tr><td><b>CHARGING YOUR SPEAKER</b></td><td style="text-align: right;">3</td></tr> <tr><td><b>PAIRING YOUR DEVICE</b></td><td style="text-align: right;">4</td></tr> <tr><td><b>WATER RESISTANT FEATURES</b></td><td style="text-align: right;">4</td></tr> <tr><td><b>USING SUCTION CUP</b></td><td style="text-align: right;">5</td></tr> <tr><td><b>CONTROLLING YOUR MUSIC</b></td><td style="text-align: right;">6</td></tr> <tr><td><b>ANSWERING CALLS</b></td><td style="text-align: right;">7</td></tr> <tr><td><b>USING SIRI</b></td><td style="text-align: right;">7</td></tr> <tr><td><b>BATTERY STATUS ON IPHONE AND IPAD</b></td><td style="text-align: right;">8</td></tr> <tr><td><b>SPECIFICATIONS</b></td><td style="text-align: right;">9</td></tr> <tr><td><b>SAFETY INFORMATION</b></td><td style="text-align: right;">10-11</td></tr> </table>	<b>SPEAKER OVERVIEW</b>	1-2	<b>CHARGING YOUR SPEAKER</b>	3	<b>PAIRING YOUR DEVICE</b>	4	<b>WATER RESISTANT FEATURES</b>	4	<b>USING SUCTION CUP</b>	5	<b>CONTROLLING YOUR MUSIC</b>	6	<b>ANSWERING CALLS</b>	7	<b>USING SIRI</b>	7	<b>BATTERY STATUS ON IPHONE AND IPAD</b>	8	<b>SPECIFICATIONS</b>	9	<b>SAFETY INFORMATION</b>	10-11
<b>SPEAKER OVERVIEW</b>	1-2																						
<b>CHARGING YOUR SPEAKER</b>	3																						
<b>PAIRING YOUR DEVICE</b>	4																						
<b>WATER RESISTANT FEATURES</b>	4																						
<b>USING SUCTION CUP</b>	5																						
<b>CONTROLLING YOUR MUSIC</b>	6																						
<b>ANSWERING CALLS</b>	7																						
<b>USING SIRI</b>	7																						
<b>BATTERY STATUS ON IPHONE AND IPAD</b>	8																						
<b>SPECIFICATIONS</b>	9																						
<b>SAFETY INFORMATION</b>	10-11																						


**SPEAKER OVERVIEW**

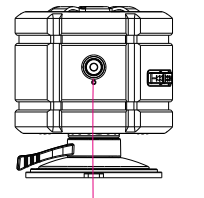

WATER-PROOF CHARGING PORT

1

**SPEAKER OVERVIEW**

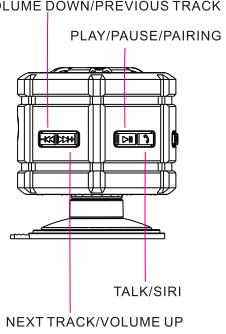 

TALK/SIRI

2

**CHARGING YOUR SPEAKER**


Before your first use, or when the battery runs out, please charge the speaker with the 3.5mm charging cable included in the package. The cable looks like an audio cable, but it is a charging cable and it does not have audio function.

Plug the small 3.5mm pin into the charging port on the back of the speaker, and the other end of the cable (the standard USB 2.0 plug) into the USB port of a computer, or a USB main charger purchased from the same store, and the charger must be designed and tested compatible with this speaker. In this case, please then plug the USB charger to an wall outlet.

Using a third party charger could result in electric shock and could also damage the speaker.

The LED indicator light will turn red when it is being charged. When it is fully charged, the LED indicator light will go off. A full charge takes about 3.5 hours.

The speaker can be charged while working. The battery of the speaker will be powered by the DC input directly and the battery will be in sleep mode after it is fully charged.



3

**PAIRING YOUR DEVICE**

- Press the Power button for 2-3 seconds to turn on your WS-507. (Press the same button again for 2-3 seconds to turn the WS-507 speaker off.)
- Activate Bluetooth on the phone or device you are pairing with (see your device's instruction manual for information on activating its Bluetooth settings).
- If the speaker is already connected to other devices, press and hold the PLAY/PAUSE button on your WS-507 speaker until the LED lights alternate between shining red and blue. And you can hear "pairing" sound.
- Go to your phone or other devices' Bluetooth settings and select WS-507 from the list.
- If asked for a password, please enter "0000".
- Play music on your device and it will be output to the speaker.

**WATER RESISTANT FEATURES**

- The WS-507 is IPX5 Water resistant. This speaker is not intended to be submerged in water, but it's resistant to rainfall, water jets and water splashing.
- IMPORTANT.** To ensure your WS-507 speaker is prepared for using in a wet environment, remove all cable connections.

 
4

**USING SUCTION CUP**


The WS-507 speaker can be fixed on glass, smooth wall, or other subjects with a smooth surface.

Before using the vacuum suction cup, please clean the suction cup and the surface to which the speaker is going to be fixed.


Make sure both surface is clean and dry.



Press the speaker to the surface softly to force out the air in the suction cup.



Push the latch on the suction cup in counter-clockwise direction (see picture), to lock the suction cup.



To remove the speaker from the wall, hold the speaker, and pull the latch in clockwise direction, to unlock the suction cup, and then pull the holder on suction cup to remove it.

5

**CONTROLLING YOUR MUSIC**

Once your speaker is connected to a Bluetooth device (mobile phone, tablet, PC, or laptop etc.), you are free to control your music any way you want!

Press and hold the Volume UP and Volume DOWN button to increase or decrease the volume. There will be a reminder tone "du du du" when the speaker is at maximum or minimum volume. Pressing the Volume UP and DOWN buttons only increase or decrease the volume of the speaker, but it does not increase or decrease the volume of the Bluetooth device. Volume can also be adjusted from the Bluetooth devices (sound source).

To switch to the previous or next track, simply press the Previous and Next button on the speaker. This will switch to the previous/next track in the playlist of the Bluetooth device.

Please note that the Volume up and Next buttons are one same button, and the Volume Down and Previous buttons are one same button. To press and hold the buttons will increase or decrease the volume. Pressing without holding the buttons will control the tracks, i.e. to switch to the previous or next track.

Press the Play/Pause button on the speaker to start or pause songs.

6

**ANSWERING CALLS**

You can use the speaker as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. To answer a call, press the TALK button and just talk to the speaker.

The built-in microphone will pick up your voice just like a phone.

To end a call, press the TALK button again. To refuse a call, double press the Talk button. You can re-dial the last number called by double pressing the TALK button.

**USING SIRI**

When the speaker is connected to an iPhone/iPad via Bluetooth, press and hold the TALK button for 3 seconds to activate the Siri function on iPhone/iPad. Then talk to the speaker after hearing the "Siri" sound.

 
Please note that iPhone/iPad may not be able to recognize human speech when the speaker is being used in a noisy environment. Siri may not work if iPhone/iPad is not connected to the internet.

7

**BATTERY STATUS ON IPHONE AND IPAD**

When the speaker is connected to iPhone/iPad via Bluetooth, the battery status of the speaker can be displayed on the top of the iPhone/iPad screen, after the Bluetooth symbol.

Please note that the battery status icon can be vertical or horizontal, depending on the Bluetooth device and its operation system.



BLUETOOTH BATTERY STATUS

8

**SPECIFICATIONS**

Weight :	223g(speaker only)
Speaker driver :	50MM, 4Ohm water resistant
Speaker output :	3W
Frequency Response :	120Hz-20KHz
Signal-to-Noise Ratio :	≥80db
Distortion :	≤0.1%
Battery life :	up to 3 hours(via Bluetooth)
Battery Charging voltage :	5V(500mA)
Working voltage :	3.3-5V
Battery charging time :	3.5-4 hours
Battery capacity :	550mAh
Interface :	3.5MM charging port
Operating Frequency Range :	2.4GHz-2.48GHz
Bluetooth transmission distance :	10 meters
Bluetooth compliant :	V3.0
Chipset :	ISSC

9

**SAFETY INFORMATION**

**WARNING**  
Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

**Fire and Electric Shock Hazard**

- Do not expose your speaker to liquid, moisture, humidity, or rain. Do not use the speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Clean the speaker only with a dry cloth.
- Do not expose your speaker to extremely high or low temperatures.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block ventilation openings.

**Battery/Charging Hazard**

- Do not dispose your speaker in a fire. The battery could explode causing injury or death.
- Only charge the speaker in accordance with this User Manual.
- Do not charge the speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

10

**Automobile Accident Hazard**

- Do not leave or store the speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

**Fall Hazard**

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off the edge.

**CAUTION**

- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer. Or charge the speaker with a wall main charger supplied from the same store where you purchase this speaker. Other chargers may look similar, but using them could result in electric shock and could damage the speaker.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

11

**FCC**


**FCC NOTICE** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
1. This device may not cause harmful interference, and  
2. This device must accept any interference received, including interference that may cause undesired operation.

**FCC CAUTION**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

To locate the FCC and IC identification numbers, please look on the underside of the speaker.

**CE STATEMENT**  
This product is compliant with the CE directive.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.