

Wisort Technology Limited
WS-707
 Bluetooth Speaker

WS-707
 Portable Rechargeable
 Bluetooth Stereo Speaker



INSTRUCTION MANUAL

INTRODUCTION

Thank you for purchasing our Bluetooth wireless speaker WS-707. Before using the product, please read this manual.


PRODUCT MAIN FEATURES

This manual could help you operate the product in a correct way, and avoid damage to the product, and hazard to human and environment.

TABLE OF CONTENTS


SPEAKER OVERVIEW	1-2
CHARGING YOUR SPEAKER	3
PAIRING YOUR DEVICE	4
CONTROLLING YOUR MUSIC	5
ANSWERING CALLS	6
USING SIRI	6
USING THE LINE-IN AUDIO JACK	7
OUTPUT AUDIO TO OTHER SPEAKERS	7
BATTERY STATUS ON IPONE AND IPAD	8
SPECIFICATIONS	9
SAFETY INFORMATION	10-11

SPEAKER OVERVIEW:TOP

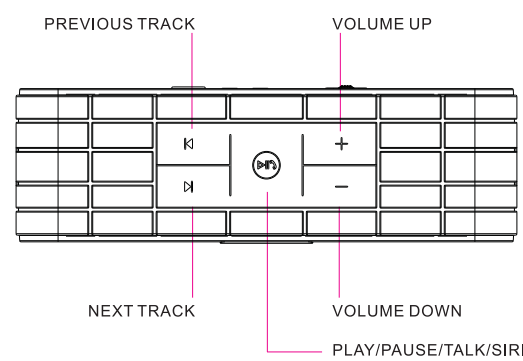

1

SPEAKER OVERVIEW:FRONT/BACK

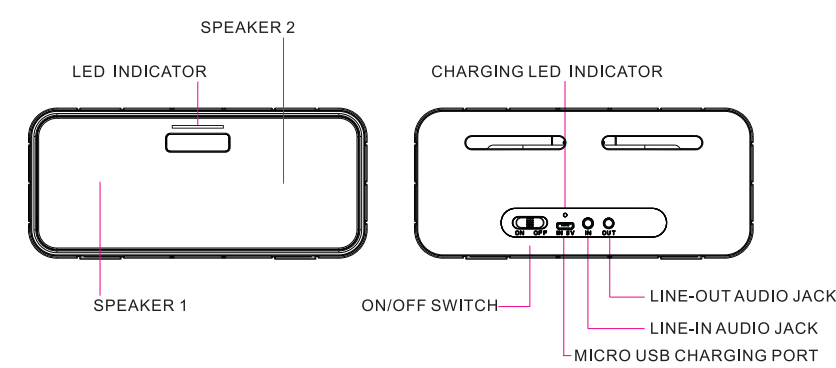

2

CHARGING YOUR SPEAKER

Before your first use, or when the battery runs out, please charge the speaker with the Micro USB charging cable included in the package.

Plug the small Micro USB pin into the charging port on the back of the speaker, and the other end of the cable (the standard USB 2.0 plug) into the USB port of a computer, or a USB main charger purchased from the same store, and the charger must be designed and tested compatible with this speaker. In this case, please then plug the USB charger to a wall outlet.

Using a third party charger could result in electric shock and could also damage the speaker.

The LED indicator light will turn red when it is being charged. When it is fully charged, the LED indicator light will go off. A full charge takes about 4-5 hours.

The speaker can be charged while working. The battery of the speaker will be charged till the charging process completes. The speaker will be powered by the DC input directly and the battery will be in sleep mode after it is fully charged.



3

PAIRING YOUR DEVICE

- 1) Make sure the WS-707 is fully charged.
- 2) Activate Bluetooth on the phone or device you are pairing with (see your device's instruction manual for information on activating its Bluetooth settings).
- 3) Turn on your WS-707 by switching the button on the back of the speaker to "On".
- 4) After turning on the WS-707, the LED lights should alternate between shining red and blue. This signal means that the speaker is in "pairing mode".
- 5) Choose "add new Bluetooth device" or "setup Bluetooth device" on your device. It will search for the WS-707.
- 6) As your Bluetooth device discovers possible items to connect to, it will list their names. Select the device named WS-707. This will connect your speaker to your Bluetooth device.
- 7) If the pairing attempt fails or times out (roughly 3 minutes), restart both devices and start the pairing process again (Steps 2 - 6).
- 8) Once paired successfully, the LED indicator lights will turn blue and blink twice every 3 seconds.
- 9) Enjoy your music wirelessly anywhere you go!

4

CONTROLLING YOUR MUSIC

Once your speaker is connected to a Bluetooth device (mobile phone, tablet, PC, or laptop etc.), you are free to control your music any way you want!

Press the Volume UP and Volume DOWN button to increase or decrease the volume. There will be a reminder tone "du du" when the speaker is at maximum or minimum volume. Pressing the Volume UP and DOWN buttons only increase or decrease the volume of the speaker, but it does not increase or decrease the volume of the Bluetooth device. Volume can also be adjusted from the Bluetooth devices (sound source).

To switch to the previous or next song simply press the Previous and Next button on the speaker. This will switch to the previous/next song in the playlist of the Bluetooth device.

Press the Play/Pause button on the speaker to start or pause songs.

Please note that the Previous, Next, and Play/Pause buttons can only control the music playing from the default music playing software on the Bluetooth devices. If the music playing software is not the default player, the music may not be able to be controlled via these 3 buttons. And the Play button may start another song in the playlist of the default player.

5

ANSWERING CALLS

You can use the WS-707 as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. To answer a call, press the TALK button and talk as you would with your device if it was on "speakerphone".

To answer a call, press the TALK button and talk as you would with your device if it was on "speakerphone" mode. The built-in microphone will pick up your voice just like a phone.

To end a call, press the TALK button again. To refuse a call, double press the TALK button. You can re-dial the last number called by double pressing the TALK button.

USING SIRI

When the speaker is connected to an iPhone/iPad via Bluetooth, press and hold the TALK button for 3 seconds to activate the Siri function on iPhone/iPad. Then talk to the speaker after hearing the "Siri" sound.

Please note that iPhone/iPad may not be able to recognize human speech when the speaker is being used in a noisy environment. Siri may not work if iPhone/iPad is not connected to the internet.

When the Siri conversation is finished, the speaker will continue playing audio.

6

USING THE LINE-IN AUDIO JACK

If your device is not Bluetooth enabled you can still enjoy your music simply by using the Line-in Audio Jack. Connect the speaker with the included audio cable to any device with a 3.5MM standard audio jack, then the speaker can be used as a wired speaker.

Please note, the PLAY/PAUSE, PREVIOUS & NEXT buttons only work when connected wirelessly via Bluetooth. In case of wired connection, music can only be controlled on your device. The speaker can still be connected to Bluetooth devices when the speaker is playing from Line-in audio. So the TALK/SIRI buttons still work if there is Bluetooth connection. The Volume UP and Volume Down buttons also work when the speaker is playing from Line-in audio.

OUTPUT AUDIO TO OTHER SPEAKERS

The speaker also has audio output function. It can output music to another speaker. Simply connect an audio cable to the output jack on the back of the speaker, and the other end to another speaker, or headphone, then 2 speakers can play the same music at the same time. You can connect more speakers in the same way.

7

BATTERY STATUS ON IPHONE AND IPAD

When the speaker is connected to iPhone/iPad via Bluetooth, the battery status of the speaker can be displayed on the top of the iPhone/iPad screen, after the Bluetooth symbol.

Please note that the battery status icon can be vertical or horizontal, depending on the Bluetooth device and its operation system.



BLUETOOTH BATTERY STATUS

8

SPECIFICATIONS

Dimensions	: 163*51*71 MM
Weight	: 430g(speaker only)
Speaker driver	: stereo, 40MM, 4Ohm
Speaker output	: 5W*2
LF diaphragm dimension	: 100*40 MM
Frequency Response	: 100Hz-20KHz
Signal-to-Noise Ratio	: ≥80db
Distortion	: ≤5%
Battery life	: Up to 10 hours
Battery Charging voltage	: 5V(1A)
Working voltage	: 3.3--5V
Battery charging time	: 4-5 hours
Battery capacity	: 1800 mAh
Interface	: Bluetooth, 3.5MM audio line-in & line-out jack, Micro USB charging port
Operating Frequency Range	: 2.4GHz-2.48GHz
Bluetooth transmission distance	: 10 meters
Bluetooth compliant	: V3.0

9

SAFETY INFORMATION

WARNING
 Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

- Fire and Electric Shock Hazard**
- Do not expose your speaker to liquid, moisture, humidity, or rain. Do not use the speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the speaker to moisture could result in electric shock.
 - Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
 - Clean the speaker only with a dry cloth.
 - Do not expose your speaker to extremely high or low temperatures.
 - Do not leave your speaker in direct sunlight for extended periods of time.
 - Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
 - Do not block ventilation openings.

- Battery/Charging Hazard**
- Do not dispose your speaker in a fire. The battery could explode causing injury or death.
 - Only charge the speaker in accordance with this User Manual.
 - Do not charge the speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
 - Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

10

Automobile Accident Hazard

- Do not leave or store the speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

Fall Hazard

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off the edge.

CAUTION

- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer. Or charge the speaker with a wall main charger supplied from the same store where you purchase this speaker. Other chargers may look similar, but using them could result in electric shock and could damage the speaker.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

11

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC

FCC NOTICE This device complies with part 15 of the FCC Rules.

- Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

To locate the FCC and IC identification numbers, please look on the underside of the speaker.

CE STATEMENT

This product is compliant with the CE directive. All returns must be made to the original place of purchase.



12