

USER GUIDE · GUIDE DE L'UTILISATEUR



BlueSYNC[®] TYM

REGISTER NOW



ENREGISTRER

This product comes with a 1 year limited warranty.

 
Register this product within 30 days of sale to activate a complimentary 2 year warranty extension and receive free advanced technical support.

Learn more and register now.

Ce produit a une garantie limitée de 1 an.

Enregistrez ce produit dans les 30 jours suivant son achat pour activer l'extension de garantie de 2 ans et bénéficier de notre service après-vente gratuit. Pour en savoir plus, enregistrez ce produit dès à présent.

G0groove.com/warranty

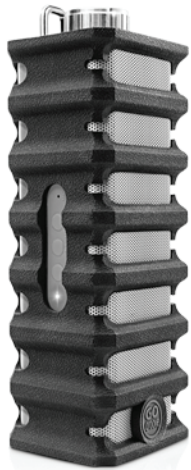

GOgroove® BlueSYNC® RGD



GOgroove® AudiOHM® HDX



GOgroove® BassPULSE®



See more exciting products at:
Voir plus de produits passionnants sur:
Para los productos mas fasinantes visitenos:
Weitere interessante Produkte an:
Scopri altri fantastici prodotti su:
查看更多精彩的产品:

AccessoryPower.com/promo



Need help with this product?
Besoin d'assistance sur ce produit?
¿Necesita ayuda con este producto?
Benötigen Sie Hilfe bei diesem Produkt?
Hai bisogno di aiuto per questo prodotto?
购买的产品，是否需要提供协助？

G0groove.com/support

Package contents
L'emballage contient
Contenidos del paquete
Packungsinhalt
Contenuto della confezione
包装内容



EN
1 BlueSYNCTYM
2 AC adapter
3 3.5mm AUX cable

FR
1 BlueSYNCTYM
2 Adaptateur secteur
3 Câble auxiliaire de 3,5 mm

 
ES
1 BlueSYNCTYM
2 Adaptador de corriente
3 Cable AUX de 3.5 mm

DE
1 BlueSYNCTYM
2 Wechselstromadapter
3 3,5mm Klinkenkabel

IT
1 BlueSYNCTYM
2 Adattatore AC
3 Cavo AUX 3,5mm

ZH
1 BlueSYNCTYM
2 AC 适配器
3 3.5 mm AUX 电缆

Product diagram
Schéma du produit
Diagrama de product
Produktabbildung
Schema del prodotto
产品图

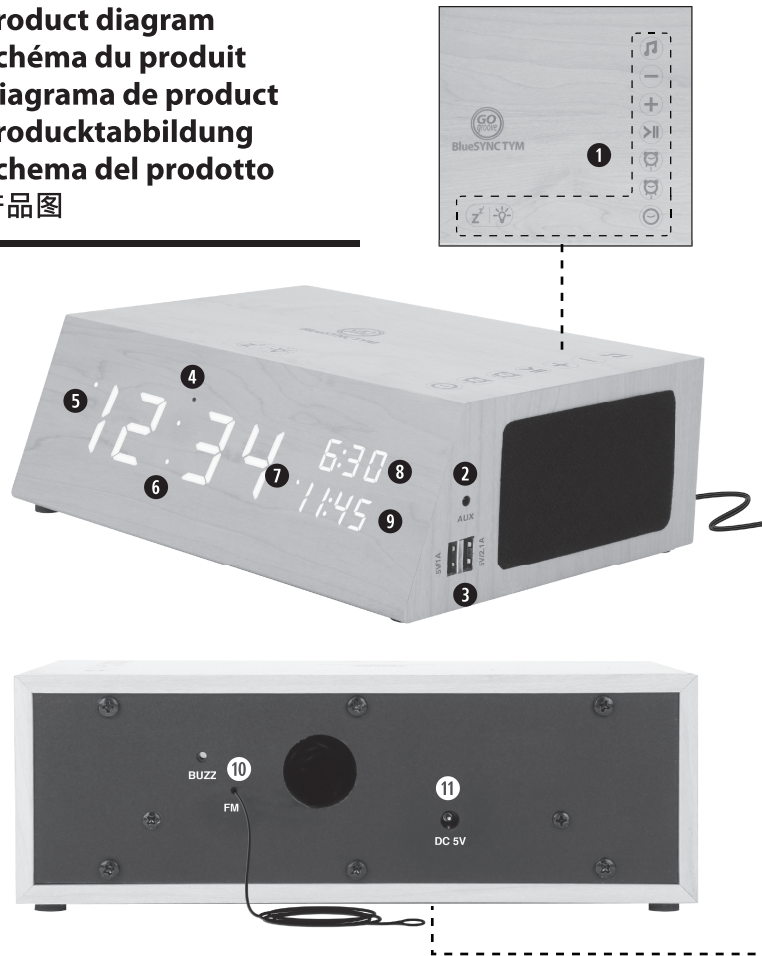

6

EN

- 1 Touch Buttons
- 2 AUX port
- 3 USB 2.1A / 1A charging ports
- 4 Microphone
- 5 Time FM indicator
- 6 Time display
- 7 Alarm FM indicators
- 8 Alarm 1 display
- 9 Alarm 2 display
- 10 FM antenna
- 11 DC 5V port
- 12 Back-up battery compartment

FR

- 1 Boutons tactile
- 2 Port Aux
- 3 Port USB de charge 2,1 A / 1A
- 4 Microphone
- 5 Indicateur d'heure FM
- 6 Affichage de l'heure
- 7 Indicateur d'alarme FM
- 8 Affichage Alarme 1
- 9 Affichage Alarme 2
- 10 Antenne FM
- 11 Port DC 5V
- 12 Compartiment arrière de la batterie

ES

- 1 Botones táctiles
- 2 Puerto AUX
- 3 Puertos de carga USB 2.1A / 1A
- 4 Micrófono
- 5 Indicador de tiempo FM
- 6 Visualización de la hora
- 7 Indicadores de alarma FM
- 8 Visualización de alarma 1
- 9 Visualización de alarma 2
- 10 Antena FM
- 11 Puerto DC 5V
- 12 Compartimento de la batería de reserva

DE

- 1 Touch-Tasten
- 2 AUX-Eingang
- 3 USB 2.1A / 1A Auflade-Eingänge
- 4 Mikrofon
- 5 Zeit FM-Anzeige
- 6 Zeitanzeige
- 7 Alarm-FM-Anzeigen
- 8 Anzeige für Wecker 1
- 9 Anzeige für Wecker 2
- 10 FM Antenne
- 11 5V Gleichstromanschluss
- 12 Ersatzbatterien-Fach

IT

- 1 Pulsanti touch
- 2 Porta AUX
- 3 Porte di ricarica USB 2.1A / 1A
- 4 Microfono
- 5 Indicatore ora FM
- 6 Display orario
- 7 Indicatori allarme FM
- 8 Display allarme 1
- 9 Display allarme 2
- 10 Antenna FM
- 11 Porta DC 5V
- 12 Vano batteria di scorta

ZH

 
- 1 触摸按钮
- 2 AUX 端口
- 3 USB 2.1A / 1A 充电端口
- 4 麦克风
- 5 时间 FM 指示灯
- 6 时间显示
- 7 闹钟 FM 指示灯
- 8 闹钟 1 显示
- 9 闹钟 2 显示
- 10 FM 天线
- 11 DC 5V 端口
- 12 备用电池盒




7

Operating instructions


Power

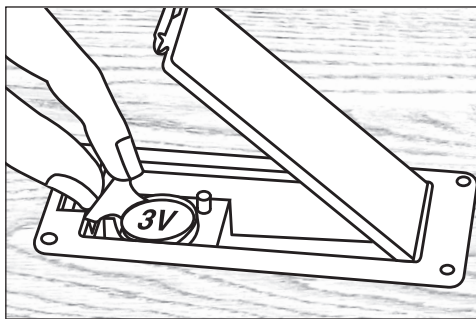

 
Open the bottom battery back-up compartment and remove the plastic tab from the button battery. This battery will keep the time during power outages or moving the clock from room to room.

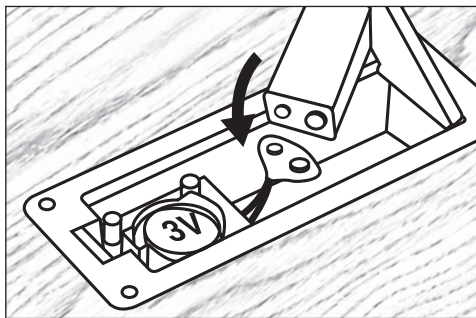

  Insert 9V battery(not included) into the bottom back-up battery compartment. During a power outage the display will turn off. To check the time, press any touch button to illuminate the display.

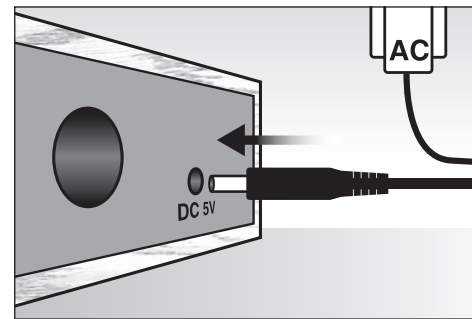



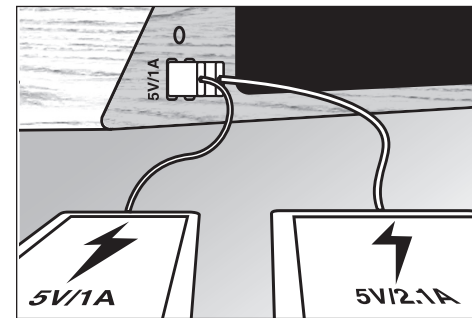



Connect the AC adapter to the rear DC 5V port.







Connect your device's USB charging cable to the 2.1A (tablet) or 1A (smartphone) port.

Time and alarm setting


Button	Press sequence	Time setting function
	Press and hold	3 seconds = Turn on time setting mode
	Press	Confirm blinking setting during time setting mode Check 12/24 time format, year and date
	Press and hold	3 seconds = Turn on alarm / enter alarm setting mode 6 seconds = Turn off alarm
	Quick press	Confirm blinking setting during Alarm 1 setting mode
	Press and hold	3 seconds = Turn on alarm / enter alarm setting mode 6 seconds = Turn off alarm
	Quick press	Confirm blinking setting during Alarm 2 setting mode
	Quick press	Time setting = Adjust blinking setting down
	Quick press	Time setting = Adjust blinking setting up
	Press and hold	Adjust LED brightness During alarm sounding = Silence alarm
	Quick press	During alarm sounding = Snooze



Time setting


Press and hold the  button 3 seconds to enter time setting mode.



Use the  and  buttons to adjust 12/24 hour format, hours, minutes, year, month and day. Press  button to confirm each setting.

Alarm setting


Press and hold the  button (1 or 2) for 3 seconds to enter alarm setting mode.

Use the  and  buttons to adjust alarm hours, minutes and wake up sound (beep or FM). FM wake up will use the last station tuned.





Press the  button (1 or 2) to confirm each setting.

When the alarm is sounding, quick press any button to enter  mode to silence for 10 minutes. During mode, the alarm display will blink. Press and hold the  button for 3 seconds to silence alarm until next day.

When the alarm is set, the time will show on the Alarm display.

Press and hold the  button (1 or 2) for 6 seconds to shut off, the time will be removed from the Alarm display.

Audio





Button	Press sequence	Audio function
	Press and hold	Turn audio mode on/off
	Quick press	Check/change audio source
	Press and hold	Decrease audio volume
	Quick press	Bluetooth = Previous track FM = Tune down
	Press and hold	Increase audio volume
	Quick press	Bluetooth = Next track FM = Tune up
	Press and hold	FM = Scan/store available FM stations
	Quick press	Bluetooth = Pause/Play music; Answer/End call FM = Seek to next FM channel

Press and hold the  button for 3 seconds to enter audio mode.

Quick press the  button to select Bluetooth, AUX or FM.

Bluetooth mode = Speaker will automatically enter pairing mode for 60 seconds. Pair your device (Use PIN 0000 if prompted).

AUX mode = Use the 3.5mm AUX cable to connect your device to the AUX port.

FM mode = Extend the FM antenna for best reception. On first use, press and hold the  button to scan available FM stations. Use the  button to auto-seek next station or  /  buttons to tune manually.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.