

### FCC CAUTION

Any changes or modifications not expressly approved by the part responsible for compliance could void this user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### SPECIFICATIONS PER SPEAKER:

Bluetooth Range: Up to 33ft  
Bluetooth Version: 5.3  
Playing Time: 5-6 hours (based on 30% max volume)  
Charge Time: 3 hours  
Frequency Response: 150Hz-18kHz  
Input: 5V/1A  
Rechargeable Li-ion Battery: 3.7V  
Battery Capacity: 2000mAh  
Output Power: 10W



5

### ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt. \*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at customerservice@xtremecables.com



#### WHAT'S INSIDE

2 Outdoor Wireless Speakers  
Type-C USB Charging Cable  
User Manual

## OUTDOOR WIRELESS SPEAKERS



6

### FEATURES

- 2 camouflaged rock speakers for surround sound audio at home!
- IPX5 rated for outdoor use near pools, on patios/decks, in any backyard, and your porch
- Play music from your Bluetooth enabled smart device up to 33ft away
- Built-in power button and aux input for seamless control over your music
- 5-6 hours of continuous playtime for 3 hours of charging
- Rechargeable with included Type-C USB cable



- 1- LED Indicator Light
- 2- On/Off Button
- 3- Type-C USB Charging Port
- 4- Aux Port
- 5- Waterproof Rubber Cover

### OPERATION

These wireless speakers has a built-in rechargeable battery. Be sure to fully charge the battery before initial use or when the speaker has not been used for an extended period of time.

2

- Turn on both speakers, and wait until both Bluetooth indicator lights start flashing blue/red.
- Both speaker will automatically pair and a chime sound will be heard. If both speakers don't pair, double click the ON/OFF button for each speaker and wait until both Bluetooth indicator lights start flashing blue/red.
- Go to Bluetooth setting on your media device, and look for "XTREME XBS9-1072-GRY" in the list. When the speaker is successfully paired, a sound will be heard and the Bluetooth indicator will light up blue.
- Now you can start playing music through your device.

**NOTE:** Speaker's pairing distance is 33ft. Make sure speakers and Bluetooth device are within this range during pairing process.

### USING THE AUX IN CONNECTION

- If your music device doesn't have Bluetooth, you can use the AUX IN connection (Aux cable not included).
- Open the silicone control panel cover on the right hand side of your wireless speaker.
- Connect the AUX in cable to the wireless speaker and connect the other end to your music device.
- Select your music on your music device and select Play.

**NOTE:** When using the AUX IN connection your wireless speakers will not be waterproof (Aux cable not included).

**NOTE:** When an AUX IN cable is connected your wireless speakers will automatically disconnect from your Bluetooth phone or device.

### CHARGING YOUR SPEAKER

- Open the silicone control panel cover on the right hand side of your wireless speaker.
- Connect the Type-C USB cable provided to the Type-C USB port on your wireless speaker.

- Connect the other end of the USB-A cable to a USB-A port on your computer, or a 5V 1 A USB-A wall charger (Wall charger not included).
- When your wireless speaker is charging the LED indicator will be red.
- When the wireless speaker is fully charged the red LED indicator will turn off.
- When charging is complete, remove the Type-C USB cable and make sure that the waterproof rubber cover is closed.

**Note:** When the battery is getting low, the low battery warning alert will sound. When you hear this, please re-charge the battery.

### SAFETY AND CARE INSTRUCTIONS

- This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local/state guidelines.
- Do not use abrasive cleaning solvents to clean the unit.
- Disconnect the USB cable once the product is fully charged.
- Do not expose to heat sources or leave in a location that is likely to get excessively hot.
- Do not let the product get wet when ports are exposed.
- Do not disassemble.
- Performance can be affected by the environment or when the product becomes discharged.
- Interruption can be caused by obstacles between the product and the Bluetooth device, by Wi-Fi or other high frequency signals, or if the product is brought out of range of the Bluetooth device.
- Charge fully before storing for a long period.

**Note:** Lithium-ion batteries will self-discharge over time. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.

3

4