风琴折叠说明书,尺寸80*110mm

SYLVANIA

Flashing Bluetooth Speaker

DC-1445 User Manual



SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

Product Specifications:

Working Time: 1.5 hours

Functions: Bluetooth, USB, TF, FM, AUX Material: plastic+metal Speaker Size: 45mm Speaker Power: 3W Battery Capacity: 300mAh Working Voltage: DC 3.7V Charging Time: 2.5 hours

Charging the Bluetooth Speaker:

- * Connect a Micro USB cable (included in the package) to the Micro USB charging port and connect the other side to a USB power outlet (5V adaptor is excluded).
- * The LED charging indicator will light up red, indicating that the speaker is being charged. When the LED indicator turns off, the speaker is fully charged. (To maximize the life of the battery, do not charge more than 3 hours.)
- * For best sound performance, please make sure the battery is fully charged before use.

Operating the Bluetooth Speaker:

- * Bluetooth Pairing
- 1. Turn the speaker's switch to "ON",you would hear audio message "power on" and "Bluetooth mode" which means the speaker is in pairing mode.
- Turn on the Bluetooth function on your mobile device, and search for the Bluetooth pairing name "Sylvania SP620", and then tap to connect it.
- After successful pairing, you would hear audio message "Bluetooth device connected".
- 4. If required, enter the password '0000' to confirm the pairing.

*Music Plaving

- 1. Short press the button M/M/ for play/pause
- 2. Short press the button | for next song, long press for volume up
- 3. Short press the button of for previous song, long press for volume down

*LED Light Mode

Press the button to change the LED light mode, there are 2 flashing modes, 1 solid mode and 1 off mode.

- * Switching Bluetooth / FM / AUX mode
- 1. Long press the button M/H/1 to switch to FM mode, then short press to search radio stations (plug the USB cable on DC 5V port as an antenna to insure the signal is

well), short press again to stop searching, short press button $| \blacktriangleleft |$ and $| \triangleright |$ for previous and next channel.

2. Long press the button M/MI/ to switch to Bluetooth mode.

*Hands-Free Calls

When there is a phone calling, short press the button Whil/ to answer and cancel call, long press to reject call, press two times to redial last number.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For service assistance and product information, please call: 1-800-968-9853. Curtis International Ltd. 7045BECKETT DRIVE,UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 day Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent the product must be rendered innoerable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than so no the specified rating on the label (e.g., 120V-60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to You.

For faster service, locate the model, type, and serial numbers on your appliance.