

VIVITAR
light-up speaker
with carry tag



USER'S MANUAL: V60099BT



Important Safety Precautions

When using your Vivitar Wireless Bluetooth Speaker, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not use your speaker near water. Clean using a soft cloth or paper towel.
3. Do not place your speaker on any wet surfaces.
4. Do not allow children or the infirm to play with your speaker without adult supervision.
5. Do not expose your speaker to excessive heat, flames or fire.
6. Always press all buttons or switches carefully. Do not manhandle your speaker.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your speaker to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
10. Do not drop, puncture or expose your speaker to excessive trauma.
11. Your speaker is not intended for commercial use.
12. Do not place near objects that generate a strong magnetic field.
13. Unplug your speaker when not in use for long periods of time or during lightning storms.



BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing your Vivitar Light Up Speaker. You can use your speaker with most smartphones and Bluetooth devices to stream music. In order to get the best results, please read this manual first before using your speaker.

Package Contents

 
- Vivitar Light Up Speaker
- USB-C Charging Cable
- User's Manual with Warranty Information

Specifications


Bluetooth Range: Up to 33 feet (10 meters)
Charging Input: 5V $\overline{\text{USB-C}}$ 1A max
Battery: 3.7V / 1200mAh
Speaker: 5W / 4 Ω
Play Time: 4 Hours (Music & Light)*

*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

A Quick Look at Your Device

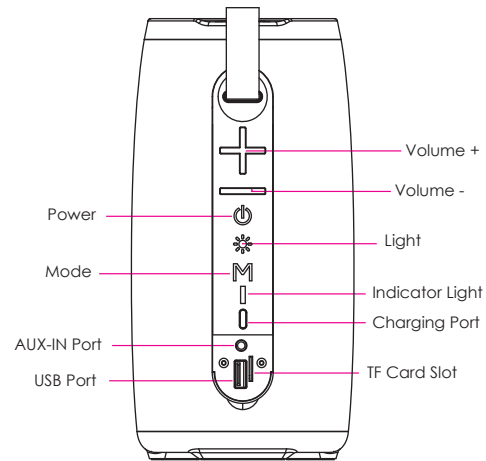


Charging Your Speaker

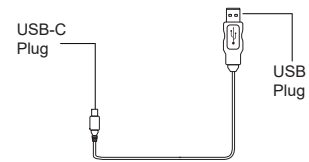 

1. The included USB charging cable has a USB-C plug and a standard USB plug.




 2. Insert the USB-C end of the included charging cable into the charging port on your speaker.



3. Insert the USB charging cable's standard USB plug into the USB ports of a computer or suitable USB charging adapter.

 - (Red) = Charging
- (off) = Charging Complete

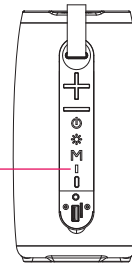

4. The LED indicator light turns red while the speaker is charging. It turns off once charging is complete.

Pairing Your Speaker with a Bluetooth Device

 


1. Press and hold the power button for approximately 3-4 seconds to power ON or power OFF your speaker. The multicolor LED light will be automatically turned on once the speaker is powered on.

Pairing Mode
Blue Flashing LED




2. The indicator light between the M button and charging port will slowly flash blue.

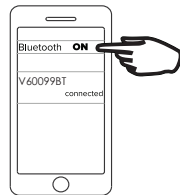

3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "V60099BT".

 Paired
Blue Solid LED



4. The indicator light between the M button and charging port will steadily shine blue to indicate that your speaker is paired with your phone.

Using Your Speaker



Press the power button to play or pause a track.



Press the + button to skip to the next track in a playlist. Press and hold the + button to increase volume.



Press the - button to go back to the last track in a playlist. Press and hold the - button to decrease volume.



Press the light button to switch different light modes. Press and hold the light button to turn off the LED light. Press the light button again to turn on the LED light.



Voice Assistant
double press



answer/end/reject call

Press the power button to answer and end a call. Press and hold the power button to reject an incoming call. Double press the power button to activate voice assistant on your connected smartphone.

Modes

Your speaker has various music modes. Press the Mode button to switch between USB,TF, AUX, and Bluetooth Mode.



USB/TF Mode

After inserting a USB drive into the USB port, your speaker will automatically activate USB mode and play any .mp3 audio files it finds on your USB drive. After inserting a memory card into the TF card slot, your speaker will automatically activate TF mode and play any .mp3 audio files it finds on your memory card. If your speaker does not change modes, remove your USB drive or TF card and re-insert it.

AUX Mode

Insert an auxiliary cable (not included) into the AUX-IN Jack to listen music from another device, your speaker will automatically turn on AUX mode.

Note: Some of your speaker functions and controls may be unresponsive on AUX mode.

Maintenance and Care

- Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on either USB charging cables while they are connected to your speaker. Connect and disconnect these cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold, high humidity or excessive moisture or water.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

VIVITAR®

©2023 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com