

Model: AP-2347

HYPE® QUICK START GUIDE


SPORT LITE WIRELESS LED EARPHONES

CHARGING THE EARPHONES

- ⚡ Charge the earphones before using it for the first time.

- ⌚ Plug in the cable to the micro USB port on left earphone and charge for at least 2 hours.

Connect the charging cable to charging port.

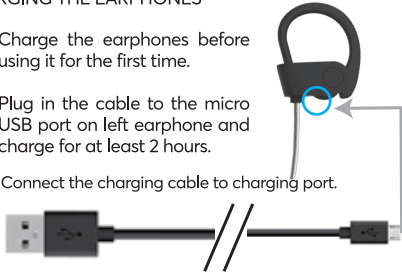

PAIRING YOUR EARPHONES

Your earphones will work best if it is within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

HYPE® QUICK START GUIDE


SPORT LITE WIRELESS LED EARPHONES

PAIRING YOUR EARPHONES (continued)

Make sure the earphones is turned off before attempting to pair it with a smart phone or tablet. Press and hold the "Power" button to turn on the earphones.



Press and hold the button on left earphone until you see the light flash red and blue. This indicates that your earphones is ready to pair.

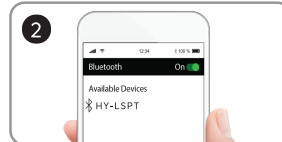

From your smart phone or tablet, find a list of nearby devices and choose "HY-LSPT". Enter "0000" if asked. The earphones will "beep" when pairing is complete!

LED LIGHT MODES

Your earphones have different LED light settings which include: On/Off, slow flash and fast flash. Hold the ON button for 3 seconds to switch between modes.

HYPE® QUICK START GUIDE

SPORT LITE WIRELESS LED EARPHONES

CONNECTION LOST?

- If pairing the earphones does not work, turn off the earphones and repeat the steps again in "Pairing your earphones."
- Make sure your earphones is within range of your smart device.
- If you hear a long beep, you need to recharge your earphones. Connection may be lost due to low battery.
- When charging your earphones, only use the enclosed USB cable.

MEDIA KEY FUNCTIONS

- Press & Hold - Turn device on/off
- Press once to receive an incoming call
- Press once to Play/Pause
- +
- Press once for next track
- Hold to increase volume
-
- Press once for next track
- Hold to decrease volume

HYPE® QUICK START GUIDE

SPORT LITE WIRELESS LED EARPHONES

SPECIFICATIONS

Bluetooth Version: V4.1
Wireless Distance: Up to 33ft (10m)
Play Time: Up to 2 hours
Talk Time: Up to 2 Hours
Standby Time: Up to 50 Hours
Battery Capacity: 80 mAh
Charging Time: Up to 2 Hours
FCC ID:
BT ID:

WARRANTY

This product is covered by a 3 month limited manufacturer's warranty. Contact us if you have any problems at support@dglusa.com.

WARNING

Keep away from water and moisture.
Keep away from heat sources.
Do not disassemble.

HYPE® QUICK START GUIDE

SPORT LITE WIRELESS LED EARPHONES

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

HYPE® QUICK START GUIDE

SPORT LITE WIRELESS LED EARPHONES

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.