

**the
Voice**

 
**MANUAL
KNOCKOUT**

Package •


Contents



**Knockout
Speaker**

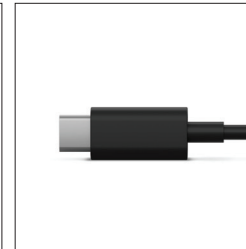

**USB
Charging Cable**

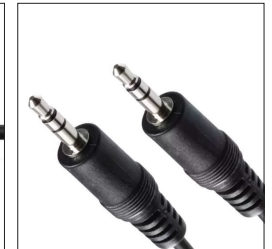 

**Auxiliary
Audio Cable**

Safety •

Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.

Care & Maintenance •

Read the following recommendations before using the Bluetooth Speaker.

- Do not expose the Bluetooth Speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the device in a fire as it will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may get damaged if you are not professional.

FCC •

Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

3

Controls •

Description

 


- 1 Volume increase + / Next Track / Station
- 2 Play/Pause / TWS / Scan / Phone button
- 3 Volume decrease - / Previous Track / Station
- 4 Light / Mode button
- 5 LED Indicators
- 6 Charging port
- 7 Charging LED indicator
- 8 AUX-in port
- 9 USB slot
- 10 On / Off switch
- 11 Micro SD (TF) card slot

4

Instruction For Use

LED Information

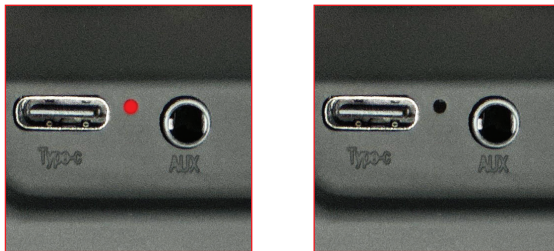

The LED light will turn red while charging and will turn off when the battery is fully charged

ON / OFF Device

Slide the On / Off switch to turn On / Off the device.

 


Instruction For Use

Pairing



After Turning On the Device
Wait for Blue
Flashing Light

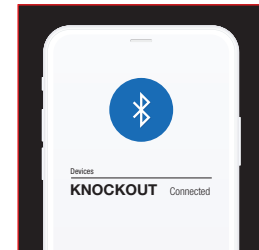

Search **KNOCKOUT**
in your Bluetooth Settings



Bluetooth Device
Connected

Note: The Bluetooth speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, disconnect / forget from your current connected device and please follow the steps outlined above. Once the Bluetooth speaker is paired with your device the music will transmit through the Bluetooth speaker. Please refer to your device's user manual for further information.

Instruction For Use •

Control Functions

🔊 Increase Volume	Press and hold the + button will increase the volume
🔊 Decrease Volume	Press and hold the - button will decrease the volume
⏸ Pause	Short press on the Play / Pause button will pause the music
▶ Play	Short press on the Play / Pause button will restart the music
◀ Previous track	A short press each time on the - button will return you to the previous track
▶ Next track	A short press each time on the + button will take you to the next track

Note: An indication tone will alert you when the volume is adjusted to maximum level.

Call Functions

☎ Answer a call	Press the Phone button once to answer an incoming call
☎ Reject a call	Long press the Phone button
☎ End a call	After your phone conversation, short press the Phone button
🔊 Increase Volume	Press and hold the + button will increase the volume
🔊 Decrease Volume	Press and hold the - button will decrease the volume
☎ Redial last number	Long press the Phone button

Listening to Music using USB / Micro SD (TF) Card Slot

1. Turn on the speaker.
2. Insert USB flash drive into the USB slot or Micro SD (TF) card into the Micro SD (TF) card slot accordingly.
Voice message "USB mode" or "TF Card mode" would be heard, and music would play automatically.
3. Short press the Next track button or Previous track button to move forward or backward on your playlist.
4. Short press Play/Pause button to Play or Pause a track.

Instruction For Use •

TWS pairing use (if you own 2 Knockout Bluetooth Speakers)

- Make sure both speakers are "ON" and not paired with any Bluetooth device. Voice message "Wireless mode" would be heard from each speaker.
- Choose either one as your master speaker.
- Short press the TWS button twice on master unit.
- Both units will wirelessly connect with each other, and you would hear an indication tone after they pair together successfully.
- Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "KNOCKOUT" – Pair it with this device.
- You might be prompted with "Pair with KNOCKOUT?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, an indication tone would be heard.
- You can now stream wireless music on your speaker through your source device.

(Note: TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, short press the TWS button twice on any one speaker.

Listening to Music using AUX-In

1. Turn on the speaker.
2. Plug the 3.5 mm Aux-in cable (included) into the AUX-In port of the speaker, voice message "Auxiliary mode" would be heard.
3. Plug the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
4. Select your favorite song at the source device to play.

(Note: While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device).

Listening FM radio

1. Turn on the speaker.
2. Plug the Type-C charging cable (included) to the DC 5V charging port of the speaker and leave the other end of the cable open. The Type-C cable serves as an antenna for better FM reception.
3. Long press the Mode button each time until it reaches FM radio mode with voice message "Radio mode".
4. Short press the Scan button for searching and recording all radio stations within frequency range 87.5-108MHz.
5. Short press the Next track/station button or Previous track/station button for listening next or previous already saved radio station.

Color Changing light Mode (LEDs are not replaceable)

Short press the "Light" button each time to change 6 different colour changing LED light patterns (including off light mode).

Troubleshooting

Symptom	Solution
Low sound level	<ul style="list-style-type: none">• Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.• Battery dead
No sound	<ul style="list-style-type: none">• Volume in minimum position.• The connected device is not in play mode.• Input source incorrect.
Sound distortion	<ul style="list-style-type: none">• Volume level too high

Product Specifications:

Bluetooth version: 5.0

Speaker output: 2x7W

Unit size: 7.72" (L) x 2.64" (D) x 4.06" (H)

Unit weight: ~1.1 lbs

Bluetooth range: 33 feet

FM frequency range: 87.5-108MHz

Power input: DC 5V

Charging time: About 3-5 hours

Play time: Up to 2 hours (moderate volume)

Built-In Rechargeable Lithium Battery: 3.7V / 1800mAh

USB / Micro SD (TF) Card: Supports up to 16GB, supports music file format: MP3, WAV, WMA, APE, FLAC

(Note: Battery life & charging time may vary based on usage & types of devices used.)

Warranty

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse; neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's/ Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling **1 (866) 815-4714**, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.



**the
Voice**

™ and © ITV Studios Netherlands Content BV. Licensed by ITV Studios.