

Front

270mm

# FOLDABLE WIRELESS HEADPHONES

## Instruction manual

### PACKAGE CONTENTS

Wireless Headphones  
USB Charging Cable  
Instruction Manual

### KEY FEATURES

Compatible with Bluetooth enabled devices  
Built-in microphone  
Volume control & media controls

### SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.


Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not use the unit at excessive levels as this may damage hearing.

Do not expose batteries, battery pack, or batteries to excessive heat, such as direct sunlight or open flame.

### FEATURES / PARTS

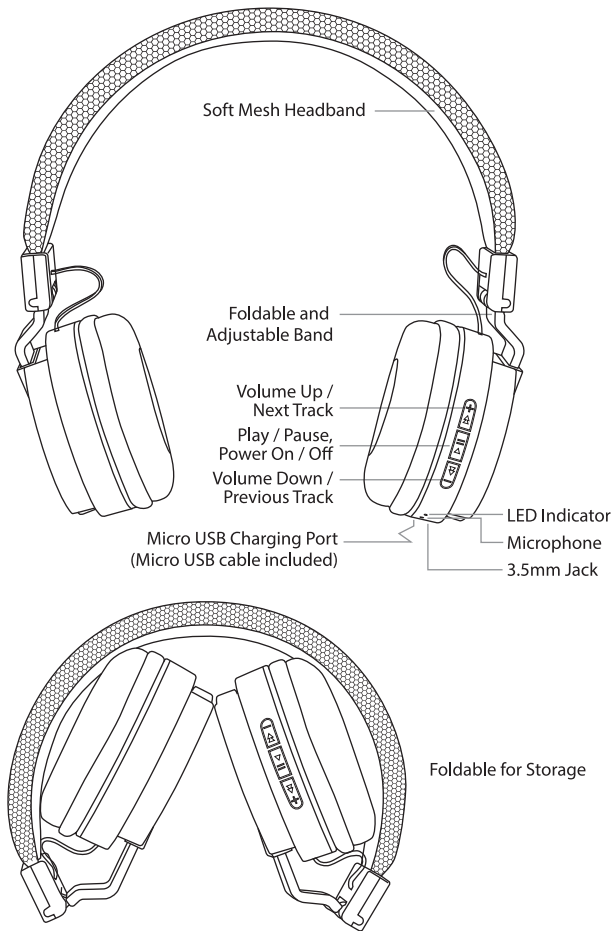

### CHARGING THE HEADPHONES

The headphones come with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the headphones.

Connect the USB cable to a computer USB port and the USB plug to the charging input on the headset. The red LED light will illuminate while the headphones are charging.

When the battery is fully charged, the LED light will turn off automatically. Disconnect the headset at this point. The headset will then be ready for use.

When the battery is low, it will have a warning "doo". When this happens, charge your headset.

### TURNING HEADSET ON / OFF

Power On: Press Power ON / OFF button for 3 seconds. You can hear the sound "Bluetooth music system has been turned on, Bluetooth mode"

Power Off: Press Power ON / OFF button for 3 seconds. You can hear the sound "Deng Deng Deng"

### PAIRING THE HEADPHONES

1. Ensure the headphones are turned off. If they are not, please turn off the headphones first before pairing.

2. Turn the headphones on, the LED indicator will keep flashing blue. This will indicate your headphones are now in pairing mode.

3. Place the headphones and the Bluetooth device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 33 feet apart.

4. Ensure Bluetooth is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.

5. Once you have activated Bluetooth on your device, select the earphones "BT-MS" from the list of available Bluetooth devices.

6. If pairing is unsuccessful, turn off the headphones first and repeat the aforementioned steps.

If pairing is successful, you can hear the sound "Bluetooth pairing successfully"

Once you have paired the earphones with a device, the headphones will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

Back

### LISTENING TO MUSIC

Once the headphones are paired to your device, you can stream music wirelessly to the earphones. Select the track you wish to listen to on your device to listen via earphones. If you encounter any problems while streaming, please refer to your device's user manual.

### USING HEADPHONES WITHOUT BLUETOOTH

Your earphones have a built-in audio input which will allow you to listen to music from non-Bluetooth devices using a 3.5 audio cable.

1. Insert one end of the audio cable into the headphones audio input.

2. Insert the other end into your device's headphone jack. You can hear the sound "AUX IN Mode"

3. Power on your device and begin playing music.

Microphone and function key may not be supported in this mode.

### MANUAL KEY FUNCTIONS

Your earphones are equipped with a few shortcut keys. Please note the following functions.

1. Answering a Call

When a call comes in, you will hear a ring tone. Press the Play / Pause Button to answer the call. Press the Vol- / Vol+ buttons to adjust volume on your call.

2. Ending a Call

During talking, press the Play / Pause Button again to end or disconnect the call.

3. Redial

To redial the last number you called, press the Play / Pause Button 2 times.

4. Reject a Call

When receiving a call, press and hold the Play / Pause Button to reject it.

5. Volume Control

When listening to music or on a call, you can adjust volume by holding the Vol+ or Vol- button accordingly.

6. Next Track

Press the V+ button to skip the current track.

7. Previous Track

Press the V- button to go back to the last track played.

### CARE AND MAINTENANCE

- Do not expose the unit to liquid, moisture or humidity to avoid damage to the product's internal circuitry.

- Do not use abrasive cleaning solvents to clean the unit.

- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.

- Do not dispose of the unit in fire as they may explode or combust.

- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.

- Do not let the unit fall from high places, as doing so may damage the internal circuitry.

- Do not attempt to disassemble the unit.

### TROUBLESHOOTING

1. If the Bluetooth does not function or powers off after powering on, the headset is low in power and needs to be recharged.

2. Headset and pairing device need to be within 16 feet of each other with no major obstacles in order to pair.

3. If the device paired successfully, but there is no sound, a. Check to make sure the device and headset are connected correctly.

b. Check whether volume is set at minimum.

c. Delete all paired Bluetooth devices from your device and pair the headset again.

4. Your headset is making unwanted noises:

a. Make sure the devices are within effective operating distance and no obstacles are blocking the signal. If anything is blocking the signal, the sound may distort or be fragmented in your headset.

b. The constant beep may be the low battery warning.

5. Some mobile devices support Bluetooth communication, but do not support Bluetooth music streaming.

### BATTERY MAINTENANCE

1. In order to prolong battery life, turn off your headset when not in use.

2. If the headset is not in use for a long period of time, store it in a dry, safe location. The headset will need to be charged every 2 months to maintain battery life.

SPECIFICATIONS	
Bluetooth:	V2.1
Operation Range:	Up to 33ft (10m)
Frequency:	20Hz - 20kHz
Input Voltage:	DC 5V
Play Time:	Up to 3.5 Hours
Charge Time:	Up to 2 Hours
Charge Interface:	Cable included

Made in China

**§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**§ 15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**§ 15.105 Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**\* RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.