



Bluetooth Visor Clip with Caller ID





Fully charge unit before use.

1. Turning on the unit

Press and hold the power button to turn on the Bluetooth Visor Clip, it will automatically pair to the external BT device, if previously paired. To shut off unit, press and hold power button.

2. Pairing Mode

To pair for the first time open Bluetooth settings on your phone. Search for other devices. Power on the speaker by pushing .

Then hold down the  on the speaker. Display will show "pairing", then flashes "-bt". LED will blink red and blue. Select pairing name "AA Speaker ID" from your phone. The Bluetooth Visor Clip will then say "connected" when complete.

3. Viewing Screen Displays

After turning on the Bluetooth Visor Clip, the screen may show "PAIRING" until it enters pairing mode. Once you have activated the device, the screen will be show "-bt-".

When there is an incoming call, you will see the calling number on the viewing screen. When a call is in progress, "CALLING" shows up. Ending the call "HANGUP" shows up. Turning off the speaker, "OFF" shows up.

4. Function of LED indicator

RED LED is on when the battery is charging.

RED LED is off when the battery is fully charged.

RED and BLUE LED blink alternately when the Bluetooth Visor Clip is in pairing mode.

RED LED blinks with sound alert when the battery has low power.

5. Button Functions



volume increase



volume decrease



Play / Pause / Answer Call



On / Off / Pairing / End Call

Specification

Bluetooth version	Bluetooth V3.0 + EDR
Transmission Power	Class 2
Operating Range	10 Meter
Frequency Range	2402-2480 MHz
Microphone Specification	-42db (0dB=1V/Pa,1KHz)
Talking Time	5 hours
Standby Time	120 hours
Charging Voltage	5V
Charging Current	200MA
Charging Time	2-3 hours
Accessories	Micro USB Cable, User's Manual, Visor Clip
Battery	5C Lithium Battery, 500 mAH
Speaker	2W/8Ω*1 Ø40mm
Color	Black
Weight	83.6g
Size	110.2*19.3*43.3mm

Toll Free: 877-405-2397

info@armorallelectronics.com

www.armorallelectronics.com

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body