
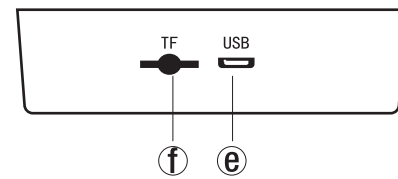


FineLife[®] MIRROR CLOCK WIRELESS SPEAKER

1. Product Function:

- [⏻]: Switch button/music play or pause;
Long press: power on/off;
Short press: Music play/pause
- [⏮]: Short press: previous song;
Long press: volume down
- [⏭]: Short press: next song;
Long press: volume up
- [LED]: Short press changes the mode:
music + clock mode -> music mode
-> clock mode;
Long press: Time adjust mode when
it is clock mode; Long press again to
exit the time adjust mode
- [USB] output: Connecting with computer via USB cable for charging
- [TF]: TF card support, inserting the TF card to play music. (Up to 32GB, TF card not included)

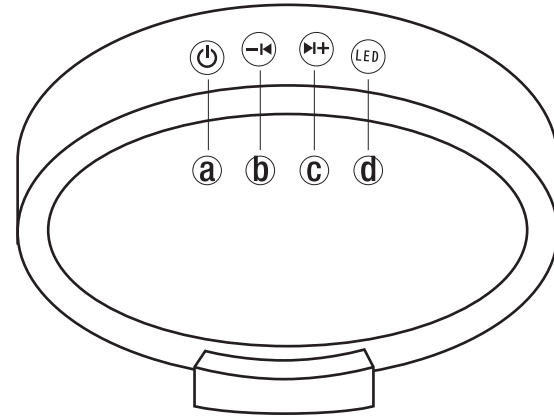

2. Icon Functions:

- [🔋]: It will flash when power is low, please charge it. When connecting the USB cable to the clock, it will be light up to show it is charging, it will turn off when charged.
- [🎵]: Flash fast when searching the Bluetooth device; Light on when the Bluetooth is successfully connected or music is paused; flash slowly when playing music.
- [🕒]: Icon light will be on when the alarm clock is turned on, light off when the alarm clock is turned off.



3. Instructions

- Open the Bluetooth device (such as phone, computer), search "NV-05713" and connect it.
- After 10 minutes, it will be turn off automatically if no connection is made from Bluetooth.
- It is in music + clock mode when powered on, short press [LED] button to change between modes (music + clock mode -> music mode -> clock mode).
- Low battery: The battery icon will flash.
- If you don't use product for long time, please charge the speaker one time per 2 months in order to protect the battery life.

4. The adjustment of clock and alarm clock

In the clock mode(Long Press [LED] button to adjust mode), the sequence to adjust:

- Time
 - Hour (Button [⏭] / [⏮] to adjust, short press [LED] to next)
 - Minutes (Button [⏭] / [⏮] to adjust, short press [LED] to next)
- Alarm Time (Clock icon [🕒] with flash)
 - Hour (Button [⏭] / [⏮] to adjust, short press "LED" to next)
 - Minutes (Button [⏭] / [⏮] to adjust, short press "LED" to next)
- Alarm ON / OFF (Clock icon [🕒] and all digits flash together)
 - ON (Short Press [⏭] button, ON will show)
 - OFF (Short Press [⏮] button, OFF will show)

You will go through all Clock functions (1 to 3) when you short press [LED] button. You may exit the Clock functions by long press [LED] or not pressing for 30 seconds. Once the alarm is set, the alarm will buzz when at the alarm time set.

Press any button to stop the alarm . It will automatically stop after 5 minutes.

5. Technical parameters

- Power: DC 5V /1000MA
- Built-in Battery: 3.7V/600mAh
- Output Power: 4Ω 2W
- Frequency Response: 100Hz-18KHz
- Signal-to-noise Ratio: ≥80dBA
- Bluetooth Standard: V2.1+EDR

FCC Caution

- 15.19 Labelling requirements. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.
- 15.21 Information to user. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 15.105 Information to the user. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.