

SPINNER

APPAREIL ANTISTRESS

AROULEMENT (TY-889)

MANUAL (ENGLISH)

Charging the BluetM Spinner

- Please make sure battery is fully charged before initial use.
- To charge your Xtreme Bluetooth spinner\ connect the supplied Micro USB cable into the Micro-USB charging port and (onned the other end to a USB power outlet (5V ahptor not HDR@. a red uo hdoto wdl uumhte to indicate that the speaker is charging. Allow approximately 3-4 hours charging time to fully charge the speaker.

Operating the Bluetooth Spinner

1. Turn the Bluetooth Spinner ON by switching the power switch to the ON position. The spinner 3 color LED indicators will flash indicating that the device is Pairing mode.
2. Enable Bluetooth search mode on your smartphone and select pairing name "BT-SPEAKER" on your Bluetooth device list.
3. To Power down the spinner, switch the power switch to the "OFF" position. The LED indicator will remain off.
4. to pair the spinner to a different bluetooth device later on, it must be unpaired from the initial device first.

MAN UAL (FRANÇAIS)

Chargement du haut-parleur Bluetooth

- Assurez-vous que la batterie est complètement chargée avant l'utilisation initiale
- Pour charger votre spinner Xtreme Bluetooth, connectez le câble Micro USB fourni au port de chargement Micro-USB et connectez l'autre extrémité à une prise USB (adaptateur 5V non indus). Un indicateur LED rouge s'allume pour indiquer que le haut-parleur est en (ours de chargement. Laisser environ 3 à 4 heures de temps de charge pour charger complètement le haut-parleur.

Utilisation du haut-parleur Bluetooth

1. Allumez le Bluetooth Spinner en mettant l'interrupteur d'alimentation en position ON. Les indicateurs LED de 3 LED de la filature dignotent indiquant que l'appareil est en mode couplage.

- 2, Aidez le mode de recherche Bluetooth sur votre smartphone et sélectionnez le nom d'appariement "BT-SPEAKER" sur votre liste de périphériques Bluetooth.
3. Pour éteindre la centrifugeuse, mettez l'interrupteur d'alimentation sur la position "OFF": L'indicateur LED reste éteint.
4. Pour coupler le spinner à un périphérique Bluetooth différent plus tard, il doit être partiellement désactivé du périphérique initial.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.