


|    |           |        |
|----|-----------|--------|
| 版本 | 更改内容      | 日期     |
| A  | 更改内容      | 200321 |
| B  | 更改logo为R标 | 200424 |
| C  |           |        |

F-510 说明书

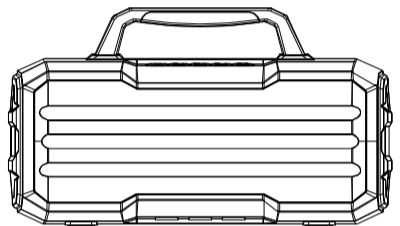

**Waterproof Bluetooth Speaker**

F-510


**Product Specifications**

Bluetooth Version: V5.0

- Output Power: 5W\*2 (RMS)
- Driver Size: 3 inches 4Ω 10W\*2
- S/N Ratio: ≥ 70dB
- Size: 298\*102\*168.8mm
- Water Resistant Level: IPX5

**Pack Contents:**

1. Wireless Speaker x 1
2. Instruction Manual x 1
3. USB Charging Cable x 1

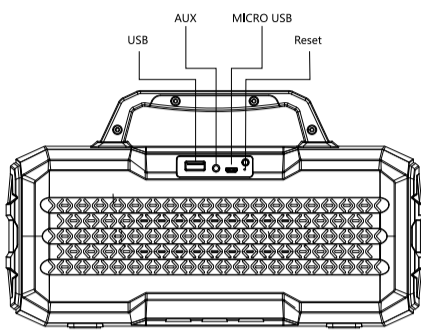

**Charging the Speaker**

Before using the speaker for the first time, charge it for at least two hours.

- 1.Plug the USB cable into the port on the speaker, plug the other end into the USB port on a computer / AC USB power adaptor.
- 2.Red LED will turn on to indicate that the unit is charging.
- 3.Red LED will turn off when fully charged.

**Power ON/OFF**

1. Long press "M" to turn on the bluetooth speaker, and the machine prompts "POWER ON"
2. The prompt sounds and enters the Bluetooth mode
3. Long press "M" again to turn off the bluetooth speaker. The machine prompts "POWER OFF"

**Pairing the Speaker**

1. Place the speaker near the Bluetooth enabled device.
2. Long press the Power button to start the Bluetooth speaker, speaker prompt sounds, the speaker is now in pairing mode.
3. Follow the instructions of "FODIO F-510", enter the PIN "0000" if needed.
4. When the connection is successful, there will be a voice prompt.
5. Once the speaker is on, it will trying to paid with the last connected device, if connection falls speaker enters pairing mode.
6. To re-enter Bluetooth pairing mode if already connected to a device, press and hold the play/pause button for three seconds

**Bluetooth operating instructions:**


1. After the Bluetooth connection is successful, press "M" to play music, press again to pause music
2. Press the "V-" to decrease volume, and long press for previous song.
3. Press the "V+" to increase volume, and long press for next song.

**AUX operating instructions:**

1. Power ON, insert the 3.5mm audio cable into the AUX port, and automatically switch to AUX. You can also press the "M" to switch to AUX mode to play music, and voice prompt AUX status.
2. Press the "V-" to decrease volume.
3. Press the "V+" to increase volume.
4. Press the "M" to play / pause music.

**USB operating instructions:**

1. Turn on the speaker, insert the USB flash drive into the USB port, and automatically switch to USB. You can also press the "M" to switch to USB mode to play music, and voice prompt USB status
2. Press the "V-" to decrease volume, and long press for previous song.
3. Press the "V+" to increase volume, and long press for next song.
4. Press the "M" to play / pause music.

 fiodio@cesz.com

MADE IN CHINA



制作工艺:

展开尺寸: 350 x 120mm 折后尺寸 : 70 x 120mm

材质: 105G单铜

印刷: 黑白印刷

表面处理: 折页 说明书和线材一起装进磨砂袋里

色相正确、印迹牢固、套印准确、各色套印

不露杂色，套印误差 ≤ 0.1mm

**FCC Statement**


This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

|   |   |       |        |        |         |          |  |                         |          |     |
|---|---|-------|--------|--------|---------|----------|--|-------------------------|----------|-----|
| 技术要求(包装物料)  | 默认公差尺寸表   |       |        |        |         |          |  <p><b>深圳市鼎诚泰富电子科技有限公司</b><br/>SHENZHEN DCTF CEAUDIO ELECTRONICS CO LTD</p> | 初创日期                    | 20200320 |     |
|   | 尺寸 (mm)   | >0-10 | >10-20 | >20-50 | >50-100 | >100-200 |  | >200                    | 文件比例     | 1:1 |
| <ol style="list-style-type: none"> <li>1.材料: 按图纸</li> <li>2.工艺: 按图纸</li> <li>3.尺寸: 所有标注尺寸均为必须管控 尺寸</li> <li>4.公差: 依照图表公差表</li> <li>5.外观: 外观要求参照样板, 符合《WS检验标准》</li> <li>6.其它: 所有材料要符合RoHS环保要求</li> </ol> | 纸张厚度标准:   |       |        |        |         |          | MODEL_NAME (机型名称) <b>P-510</b>   |                         |          |     |
|   | <ul style="list-style-type: none"> <li>•铜版纸类印刷品: 纸张克重依据印刷行业行业标准</li> <li>•坑纹纸类印刷品: 破裂强度及边压强度依据印刷行业行业标准</li> </ul> |       |        |        |         |          | PART_NAME(零件名称)<br><b>P-510</b>  | 说明书                     |          |     |
|   |   |       |        |        |         |          | PART_NO.(物料编号)   | <b>416-0P510091-02R</b> |          |     |
|   |   |       |        |        |         |          | PO No. 生产订单号   | DF211207-01             | 美工       | 业务  |
|   |   |       |        |        |         |          | NUMBER 用量  | 1PCS                    | 核对       | 审核  |