

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license.

Brookstone® trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license. Manufactured and Marked by Southern Telecom, Inc. under license.


Southern Telecom
Brooklyn, NY 11220 Model No.: BSSK9065

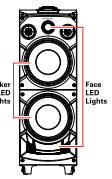

1-877-688-4839 (Toll Free)
Monday - Friday, 8AM - 10PM (EST)

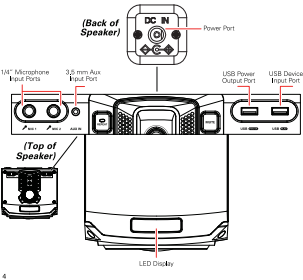


TABLE OF CONTENTS	
Compliance Information.....	1
Before You Begin.....	2
Additional Warnings.....	3
In the Box.....	3
Getting Started	
Location of Controls.....	4
Connecting to Power.....	6
Turning ON/OFF.....	6
Switching Input Modes.....	6
Bluetooth Pairing.....	7
Adjusting Playback & Volume.....	7
Using with a Wired Device.....	8
Using the USB Input.....	9
Using the USB Power Output.....	9
Using Microphones.....	9
Using the LED Lights.....	10
Using the Remote Control.....	11
Using Mega Bass, EQ & Tone.....	11
Warranty Information.....	12

<p>Warranty Information</p> <p>3-Year Limited Warranty Territory: United States/Canada</p> <p>LIMITED WARRANTY TO ORIGINAL CONSUMER</p> <p>This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:</p> <ul style="list-style-type: none"> To obtain warranty service: Visit our website at www.southerntelecom.com Click on Product Support Select the Brand of your device Select Service Request and fill out the form to begin your inquiry <p>Or call the Customer Support number below:</p> <p>1-877-688-4839 (Toll Free) Monday - Friday, 8AM - 10PM (EST)</p> <p>Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.</p> <p>Warranty service not provided: This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.</p>	<p>FCC Information</p> <p>This device complies with Part 15 of the FCC Rules.</p> <p>Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Radiation Exposure Statement</p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.</p>
---	---

<p>Rating Label Definitions</p> <p>⎓ Direct current symbol.</p> <p> This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license.</p>	<p>Using the Remote Control</p> <ul style="list-style-type: none"> [0] Button: Enter or basic standby [2] Button: Switch input mode [FACE LIGHT] Button: Press to switch face light mode, press + hold to turn face lights ON/OFF [MUTE] Button: Mute or unmute audio [SPK LIGHT] Button: Press to switch speaker light mode, press + hold to turn speaker lights ON/OFF [BASS] Button: Adjust bass [MID] Button: Turn mic priority ON/OFF [TREBLE] Button: Adjust treble [VOL+] and [VOL-] Buttons: Adjust volume [M] Button: Pause and resume playback [Fwd] and [Rev] Buttons: Skip tracks [Mn] and [Mx] Buttons: Fast forward or backward [EQ] Button: Switch between EQ modes [M.BASS] Button: Turn Mega Bass ON/OFF [DSB] Number Buttons: Select a track [REPEAT] Button: Repeat one or all tracks [UNPAIR] Button: Disconnect a Bluetooth pairing <p>Using Mega Bass, EQ & Tone</p> <p>You can adjust the speaker's sound by using the buttons on the speaker or the remote control.</p> <ul style="list-style-type: none"> Press the [Mega Bass] button on the speaker or the [M.BASS] button on the remote control to turn Mega Bass ON or OFF. The speaker's LED screen will display "Bass" or "Off". Press the [EQ] button on the speaker or remote control to switch between EQ modes such as Rock, Pop and Jazz. The LED display will show the current EQ mode. Press the [Tone] button on the speaker to switch between adjusting volume (V), bass (B) and treble (T) and use the [Volume] dial to adjust, or use the [BASS], [TREBLE] and [EQ] buttons on the remote control. The LED display will show the mode or level.
--	---

<p>Using the LED Lights</p> <p>The LED lights will automatically turn ON when the speaker is powered on.</p> <ul style="list-style-type: none"> Press the [Speaker] button on the speaker or the [SPK LIGHT] button on the remote control to flip through speaker LED light modes. Multiple LED modes will react to the beat of your music. For best results, turn up the volume. Press and hold the [Speaker] button to turn the speaker LED lights ON or OFF. Press the [Face] button on the speaker or the [FACE LIGHT] button on the remote control to flip through face LED light modes. Press and hold the [Face] button to turn the face LED lights ON or OFF. 	<p>Before You Begin...</p> <p>READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE</p> <p>To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies with this device.</p> <ul style="list-style-type: none"> THIS DEVICE IS NOT A TOY. Do NOT allow children or pets to use or play with this device. Do not disassemble, modify, or repair the device. Do not expose the device to extreme temperatures (heat or cold), open flames, humid, or wet conditions. Do not submerge in water. Do not allow any of the ports on the speaker or any of the connectors of the supplied power adapter or cables to be exposed to dust or water, or come into contact with any conductive materials such as liquids, metallic powders, etc. <p>Questions & Customer Support</p> <p>For any issues concerning this product, please visit our website at SouthernTelecom.com and click on Product Support.</p> <p>In the Box</p> <ul style="list-style-type: none"> BSSK9065 - Wireless Speaker (x1) AC Adapter (x1) Remote Control (x1) Instruction Manual (x1) 
--	---

<p>Location of Controls</p>  <p>(Back of Speaker)</p> <ul style="list-style-type: none"> DC IN Power Port 1/4" Microphone Input Port 3.5 mm Aux Input Port USB Power Output Port USB Device Input Port <p>(Top of Speaker)</p> <ul style="list-style-type: none"> LED Display 	<p>Using the USB Power Output</p> <p>Plug the USB connector of your device's charging cable (not included) into the USB power output port on the speaker. Your device will begin charging when the speaker is powered ON or in basic standby mode, and will stop charging when the speaker is powered OFF or enters standby mode.</p> <p>Using Microphones</p> <p>Plug the 1/4" connector of the wired microphone into one of the microphone input ports on the top of the speaker. Switch the mic ON.</p> <ul style="list-style-type: none"> Adjust mic echo or volume using the [MIC ECHO] and [MIC VOL] dials on the speaker. Adjust microphone echo using the [Echo] dial on the speaker. Adjust overall speaker volume with the [Volume] dial on the speaker or the [VOL+] and [VOL-] buttons on the remote control. Press the [MID] button on the speaker or the [MID] button on the remote control to turn Microphone Priority ON or OFF. When Mic Priority is on, the speaker will automatically lower the music when you sing into the microphone. <p>Note: In order to avoid loud feedback, keep the microphones behind the speaker and pointed away from the speaker, and switch them off when not in use.</p>
---	--

