

Specifications

photive BTW-10

Dimensions:	87 MM (diameter) *61MM (height)
Weight:	155g(speaker only)
Speaker driver:	Single channel , 50MM, 40hm
Speaker output:	3W*1
LF diaphragm dimension:	25*40 MM
Frequency Response:	180Hz-20KHz
Signal-to-Noise Ratio:	≥80db
Distortion:	≤0.1%
Battery life:	Up to 2 hours(via audio input) Up to 1.5 hours(via Bluetooth) **Battery life will vary based on the volume your speaker is set to. Listening to the speaker at higher volumes will reduce battery life
Battery Charging voltage:	5V(500mA)
Working voltage:	3.3 ~ 5V
Battery charging time:	1-1.5 hours
Battery capacity:	400 mAh
Interface:	Bluetooth, 3.5MM audio line-in jack, Micro USB charging port
Operating Frequency Range:	2.4GHz-2.48GHz
Bluetooth transmission distance:	10 meters
Bluetooth compliant:	V3.0

6. Volume down
7. Micro USB: Use a computer USB port / power adapter to recharge the speaker. When battery is low, it will take 1.5-2 hours to fully recharge the battery, Charging the red indicator light, filled with red indicator light
8. Audio input (Line-in)
9. Microphone: It is recommended to use within a distance of less than 50cm / 20 in
10. Mountaineering buckle

1. button :

Press and hold button for 3 seconds to ON/OFF

2. Pick Up Key:

- * Under Bluetooth connected status ,short press button to answer the call when the call comes in.
- * Press and hold the TALK button for 2 seconds to refuse to talk.
- * Under Bluetooth connected status ,short time press the pick up key for two times continuously will redial the previous outdialing phone number.
- * press and hold the button for 3 seconds to activate the Siri function on iPhone/iPad. Then talk to the speaker after hearing the "Sir" sound.

3. Last Song


- * Under Bluetooth connected status ,short time press for last song.
- * press and hold the button for 3 seconds to activate Bluetooth automatic pairing .

4. Next Song

- * Under Bluetooth connected status ,short time press for next song.

5. Volume up


FUNCTIONS

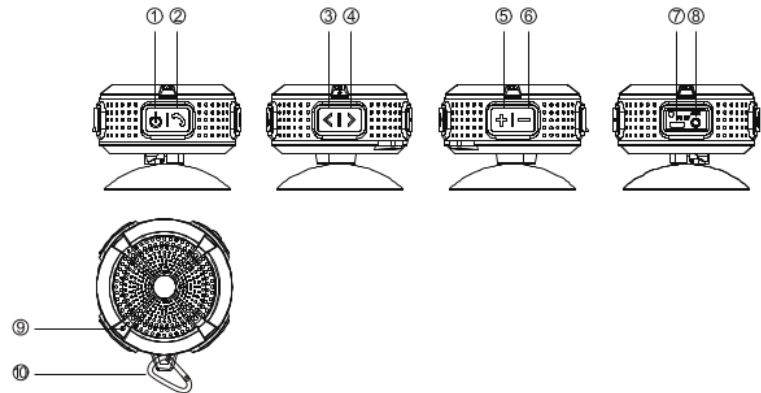

Instruction Manual

photive BTW-10

Portable Single channel
Bluetooth Speaker

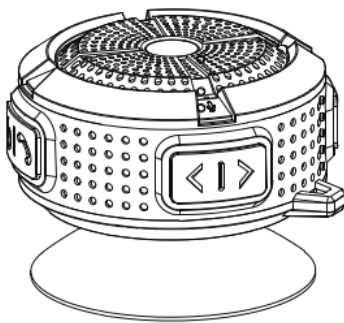

Using the Line-In Audio Jack

photive BTW-10

If your device is not Bluetooth enabled you can still enjoy your music simply by using the Line-In Audio Jack. Connect the speaker with the audio cable that is included in the package to any device with a 3.5MM standard audio jack. Once connected the speaker can be used as a wired speaker.

Please note: the TALK, PREVIOUS & NEXT, VOLUME UP and VOLUME DOWN buttons only work when connected wirelessly via Bluetooth. In the case of a wired connection, music can only be controlled on your device.

Battery Status on iPhone® and iPad®

When the speaker is connected to an iPhone® or iPad® via Bluetooth, the battery status of the speaker can be displayed on the top of the iPhone®/iPad® screen, after the Bluetooth symbol. This makes it easy to know when to plug in your speaker to keep the music going or to charge up the battery.



Safety Information

photive BTW-10

⚠ WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not expose your speaker to liquid, moisture, humidity, or rain. Do not use the speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Clean the speaker only with a dry cloth.
- Do not expose your speaker to extremely high or low temperatures.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block ventilation openings.

Battery/Charging Hazard

- Do not dispose your speaker in a fire. The battery could explode causing injury or death.
- Only charge the speaker in accordance with this User Manual.
- Do not charge the speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

photive BTW-10

Automobile Accident Hazard

- Do not leave or store the speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

Fall Hazard

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off the edge.

⚠ CAUTION

- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer. Or charge the speaker with a wall main charger supplied from the same store where you purchase this speaker. Other chargers may look similar, but using them could result in electric shock and could damage the speaker.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

FCC

photive BTW-10

FCC NOTICE This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions;

- 1.This device may not cause harmful interference, and
- 2.This device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

To locate the FCC and IC identification numbers, please look on the underside of the speaker.

CE STATEMENT

This product is compliant with the CE directive. All returns must be made to the original place of purchase.



photive™

© 2014 Photive South Plainfield, NJ 07080
iPad is a trademark of Apple Inc., in the U.S. and/or other countries. iPhone is a trademark of Apple Inc., in the U.S. and/or other countries. Siri is a trademark of Apple Inc., in the U.S. and/or other countries. All other trademarks and trade names are those of their respective owners.
Made in China

1 Year Limited Warranty

For Warranty & Support Please e-mail support@photive.com

FCC INFORMATION (additional)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

