 


533.4mm

(Front)



Connecting with the Optical Input
Insert the connector of an optical audio cable (not included) into the Optical Input jack on the input panel, connect the other end to the optical output jack on your media-playing device.

Powering the System
Insert the pin of the supplied 12V/1.2A power adapter into the power jack on the back of the subwoofer.

Plug the power adapter into a working wall socket and press the [Power] switch to the ON position. The speaker will turn on in standby mode and the [LED] [AUX] LED indicator will turn RED.

Bluetooth Pairing

1. Power the system ON and take it out of standby mode by pressing the [STANDBY] button on the control panel or the [Power] button on the remote control.
2. Switch to Bluetooth mode by pressing the [MODE] button on the control panel or the [BT] button on the remote control. The [BT] LED indicator will flash BLUE.
3. Set your mobile device to search for Bluetooth devices. When it appears, select **SBT5300** from the list of found devices.
4. Once successfully paired, a tone will be heard and the [BT] LED indicator will turn **SOLID BLUE**.

Standby Mode
When powered on, the system will be in standby mode. In this mode it will be inoperative and use very little power. When in standby mode the [LED] [AUX] LED indicator will be **SOLID RED**.

- Press the [STANDBY] button on the control panel or the [Power] button on the remote control to take the system out of standby mode.
- Press the [STANDBY] button or [Power] button to put the speaker in standby mode.

Volume Adjustment

- Adjust volume with the [VOL+] and [VOL-] buttons on the input panel or the [1] and [4] buttons on the remote control.
- Press the [MUTE] button on the remote control to mute/unmute volume.

Changing Inputs
The corresponding LED indicator on the subwoofer's control panel will turn on when that mode is switched to.

- Press the [MODE] button on the input panel to cycle through the different input modes.
- Press the [Optical], [AUX], [Bluetooth], [S-1CH], [S-5CH] buttons on the remote control to switch to their corresponding inputs.

[Optical] Button:
Change to optical input

[AUX] Button:
Change to auxiliary input

[Bluetooth] Button:
Change to Bluetooth input

[S-1CH] Button:
Change to S-1 input

Controlling Playback (Bluetooth Only)
Once successfully paired to a Bluetooth device, you can control playback with the controls on your paired device, the control panel on the subwoofer, or the remote control:

- Press the [M] button on the remote control to pause/resume playback.
- Skip tracks with the [PREV] and [NEXT] buttons on the control panel of the subwoofer or the [4] and [3] buttons on the remote control.

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

FCC Statement
This device complies with the FCC rules for Class B digital devices. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio Frequency Warning
Do not use this device in an airplane or other aircraft. Do not use this device in a motor vehicle, while driving, or while operating any heavy machinery. Do not use this device while operating any heavy machinery. Do not use this device while operating any heavy machinery.

Bluetooth
Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners.

90 Day Warranty

The manufacturer warrants that this product is defective, or does not perform properly, or does not meet the manufacturer's specifications for a period of 90 days from the date of purchase. This warranty is limited to the original purchaser of the product. It does not cover damage to the product caused by misuse, accident, or unauthorized repair. It does not cover damage to the product caused by fire, theft, or flood. It does not cover damage to the product caused by lightning, power surge, or other electrical disturbance. It does not cover damage to the product caused by use of non-approved accessories. It does not cover damage to the product caused by use of non-approved cables. It does not cover damage to the product caused by use of non-approved software. It does not cover damage to the product caused by use of non-approved firmware. It does not cover damage to the product caused by use of non-approved firmware.

Customer Service Dept. 24
Call Number: 1-800-850-8888
Hours: 9:00 AM - 5:00 PM (EST)

Sharper Image
2018 Sharper Image®. Name and logo are registered trademarks. Manufacturer, marketer, and distributor under license by Southern Telecom, Inc., Brooklyn, NY 11203. © Sharper Image. All Rights Reserved.

SHARPER IMAGE

Home Theater
5.1 Ch Sound System

SHARPER IMAGE

User Manual
SBT5300

177.8mm

533.4mm

(Back)

Before You Begin...

CAUTION
READ THIS USER MANUAL AND SAVE FOR REFERENCE THIS IS NOT A TOY, please keep away from children and pets

1. Read and keep these instructions. Read all warnings.
2. Follow all instructions.
3. Do not use this apparatus near water.
4. Clean only with a dry cloth.
5. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Use only with a circuit breaker, trip breaker, or fuse specified by the manufacturer, or sold with the apparatus. When a circuit is used, use caution when moving the apparatus combination during lightning storms or when exposed to lightning.
11. Unplug the apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. WARNING: The main plug is used as a disconnect device; the disconnect device shall remain readily operable.
14. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.

Getting Started

Questions & Customer Support
For questions, troubleshooting or any other assistance, please visit our website at SouthernTelecom.com and click on **Product Support**

In the Box

- Sound Bar (x1)
- Satellite Speaker (x4)
- Subwoofer (x1)
- RCA-RCA Cable (x1)
- RC-AUX Cable (x1)
- Remote Control w/CR2032 battery (x1)
- User Manual (x1)

Technical Specifications

 
 
Subwoofer
Dimensions: 283 x 167 x 157 mm
Output: 80W
Power: 120V, 2.3A, 60Hz
Center Speaker
Dimensions: 148 x 51.49 x 124.14 mm
Driver: 2" x 2"
Power: 20W

Satellite Speaker (each)
Dimensions: 119 x 126 x 25.4 mm
Driver: 2" x 1"
Power: 15W
Output: 3W

Location of Controls

- [Power] Button: Enter/leave standby mode
- [Mute] Button: Mute/unmute volume
- [1] and [4] Buttons: Adjust volume
- [Optical] Button: Change to optical input
- [AUX] Button: Change to auxiliary input
- [Bluetooth] Button: Change to Bluetooth input
- [S-1CH] Button: Change to S-1 input
- [BT] Button: Bluetooth mode ONLY


Location of Controls (cont'd)

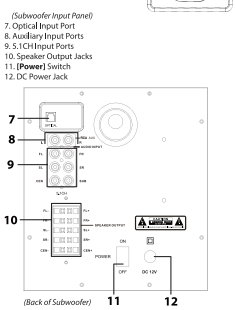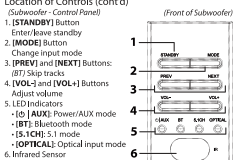

Setup

Placing Your Speakers
When setting up a 5.1 system it is important to place the speakers in a specific orientation for optimal listening. If the speakers are NOT placed properly you may suffer a poor listening experience (excessive bass, lack of mid-range, etc.). A few general things to note about speaker placement:

 - The shape of a room and the distance between the speaker and nearby surfaces (walls, floors, ceilings) can affect sound quality. Bass tones are most susceptible to distortion/alteration if a speaker or subwoofer is placed too close to a wall.
- The material of objects in a room can affect sound quality (such as heavy curtains, or a large couch).
- It is recommended that the two front left and right speakers be equidistant from each other and the primary listening position.

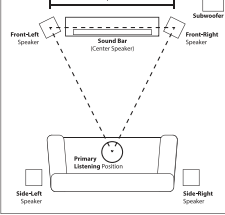


NOTE: The above map is just an example of a 5.1 setup. Please make sure that the subwoofer is in a position so that all the speakers can be plugged into the input panel.

The red-dotted triangle shows a perfectly equal distance between the left and right speakers and the primary listening position.

Connecting the Speakers

 Once your speakers have been placed and positioned they need to be connected to the subwoofer.



Satellite Speaker
The satellite speakers have speaker cable already connected to them ending in exposed wire tip where the cable splits in two. Note that one of the wires is black and the other has a white stripe.

Insert the exposed tip of the black wire of one of the satellite speakers into the **BLACK** FL spring clip jack on the **back of the input panel**. Insert the exposed end of the white-striped wire into the **RED** FL spring clip jack. This satellite speaker is now the **Front-Left speaker (FR, Front-Right, SL, Side-Left, SR, Side-Right)**.

Repeat the above a process for the next 3 satellite speakers.

 
Center Speaker
Take the supplied speaker cable and insert the white-striped wire tip into the **RED** spring clip jack on the back of the sound bar. Insert the black wire's tip into the **BLACK** spring clip jack on the back of the sound bar.




On the other end of the speaker cable, take the white-striped wire tip and insert into the **RED** CEN spring clip jack on the input panel of the subwoofer. Insert the tip of the black wire into the **BLACK** CEN spring clip jack on the input panel of the subwoofer.

Connecting AUX Inputs

Insert the red and white connectors of an RCA-RCA cable or an RCA-3.5 mm cable into the L and R jacks on the input panel on the back of the speaker:



 Plug the connectors on the other end of the RCA-RCA cable to the corresponding colors on the device's Audio Out panel or, if using an RCA-3.5 mm cable-to the headphone jack on your media-playing device:



Connecting 5.1 Inputs

If setting up a device that has a full 5.1 output, continue to connect the cables as described above with the corresponding left and right outputs connecting to the connections on the input panel.

FL - Front Left Speaker
FR - Front Right Speaker
SL - Side Left Speaker (or sometimes Back Left Speaker)
SR - Side Right Speaker (or sometimes Back Right Speaker)
CEN - Center Speaker
SUB - Subwoofer

177.8mm