

## EE2763 – Mini Pod Speaker

Instruction manual

Please read all of the instructions carefully and retain for future reference.

### [3 MM CAPS] Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Keep the product and its accessories out of the reach of children.

Keep small parts away from children as these may present a choking hazard.

Children under 8 years should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or damaged; the unit should be recycled.

Keep the product and its accessories away from heat sources, direct sunlight, humidity, water and any other liquid, or sharp edges that could cause damage.

Ensure the speaker is well ventilated.

Do not leave any objects susceptible to magnetism (cash cards etc.) near the product.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not put objects into any of the openings.

This product is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time – this may also damage the product.

**NOTE:** It is advised that the product is not used whilst charging, as this could reduce the life of the battery.

### Battery Safety

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Do not expose cells or batteries to heat or fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station.

Contact the local government offices for further details. This product is fitted with a 3.7 V 400 mAh li-ion rechargeable battery (non-removable).

UP Global Sourcing UK Ltd. hereby declares that this unit is in compliance with the essential requirements and other provisions of directive 2014/53/EU.

The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK or [www.intempo.co.uk/declaration-letters.html](http://www.intempo.co.uk/declaration-letters.html)

## **[3MM CAP] Care and Maintenance**

Wipe the product with a soft, lint-free cloth.

### **Do not:**

Use any abrasive cleaning solvents to clean the product.  
Expose the product to extremely high or low temperatures.  
Drop the product.  
Attempt to disassemble the product.  
Dispose of the product in a fire as it will result in an explosion.

## **Getting Started**

Remove the product from the box.  
Remove any packaging from the product.  
Place the packaging inside the box and either store or dispose of safely.

## **In the Box**

Mini Pod Speaker  
USB Charging Cable  
Instruction Manual

## **Description of Parts**

1. Mini Pod Speaker
2. Play/Pause/Handsfree button
3. Skip/Volume + Button
4. Skip/Volume – Button
5. Mode Button
6. On/Off Switch
7. LED Indicator Light
8. LED Charging Indicator Light
9. Micro USB Charging Port
10. Hands-free Microphone
11. USB Port
12. Micro SD Port
13. Micro USB charging cable
14. Micro USB connector
15. USB connector

## **Instructions for Use**

### **Charging the Battery**

The Mini Pod Speaker are fitted with a 3.7 V 400 mAh li-ion battery. It is recommended that the battery is charged fully before first use; this will take approximately 1.5 hours. Connect the micro USB end of the USB charging cable into the micro USB charging port on the Mini Pod Speaker and the other end to a compatible USB port. Whilst charging, the LED indicator light will illuminate red. Once the battery has charged fully, the LED indicator light will turn off.

Once the Mini Pod Speaker are fully charged, carefully disconnect both ends of the USB charging cable and store it safely for future use.

## **Using the Mini Pod Speaker**

### **Basic Functionality**

Turn on the Mini Pod Speaker by switching the On/Off Switch to the ON position.

Adjust the volume of the Mini Pod Speaker using the 'Skip/Volume +' and 'Skip/Volume -' buttons. To increase the volume, press and hold the 'Skip/Volume +' button. Decrease the volume by pressing and holding the 'Skip/Volume -' button.

Pause the track by pressing the 'Play/ Pause/ Handsfree' button; push it once more to resume playing the track.

To switch to the next track, press the 'Skip/Volume +' button. Play the previous track by pressing the 'Skip/Volume -' button.

Switch the On/Off Switch to the OFF position to turn off the Mini Pod Speaker.

### **Modes**

Ensure that the Mini Pod Speaker are turned on before using any of the following modes.

#### **Bluetooth Mode**

##### **Pairing with a Bluetooth Compatible Device**

**STEP 1:** When the Mini Pod Speaker are switched on, the LED indicator light will flash, signalling that the Mini Pod Speaker is ready to be paired with a Bluetooth compatible device.

**STEP 2:** Search for the Mini Pod Speaker using a Bluetooth compatible device. Select 'EE2763' to connect and pair to the speaker.

**STEP 3:** Once a connection has been made, the LED indicator light will remain solid to signal that the Mini Pod Speaker are now paired with the Bluetooth compatible device.

**STEP 4:** To unpair or remove a Bluetooth compatible device from the Mini Pod Speaker, turn off the Bluetooth function on the Bluetooth compatible device or unpair through the device's settings. The Mini Pod Speaker can now be paired with a new Bluetooth compatible device.

**NOTE:** Once the Bluetooth compatible device has been paired with the Mini Pod Speaker, sound can be controlled using either the Mini Pod Speaker or the relevant controls on the Bluetooth compatible device.

##### **Making Phone Calls via a Bluetooth Compatible Device**

Once the Bluetooth compatible device has been paired with the Mini Pod Speaker, phone calls can be made.

**STEP 1:** Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The built-in microphone on the Mini Pod Speaker will now act as a hands-free device.

**STEP 2:** To connect or disconnect a call using the Mini Pod Speaker, press the 'Play/ Pause/ Handsfree' button.

**STEP 3:** To reject an incoming call, press and hold the 'Play/ Pause/ Handsfree' button.

**STEP 4:** To redial the last number called, press the 'Play/ Pause/ Handsfree' button twice.

**NOTE:** The volume of the phone call can be controlled using either the Mini Pod Speaker or the Bluetooth compatible device.

#### **Micro SD/USB Mode**

**STEP 1:** To use MICRO SD mode, insert a MICRO SD card (not included) into the MICRO SD card slot. The speaker will automatically change to MICRO SD mode.

**STEP 2:** To use USB mode, insert a compatible USB drive into the USB port. The speaker will automatically change to USB mode.

**[3 MM CAP HEIGHT, KEY LINE BOX]**

**Note:** Once connected, sound can be controlled using the speaker.

No USB drive should be inserted whilst using MICRO SD mode or vice versa, as this could interfere with playback.

The speaker will only recognise MP3 audio files; if other files are present on the MICRO SD card or USB drive, this may prevent the speaker from playing.

## Specifications

Product Code: EE2763

Bluetooth Version: 5.0

Wireless Distance: Up to 25m\*

Speaker Output: 2 x 3 W

Impedance: 4  $\Omega$

Sensitivity: 85 dB

Frequency Response: 20 Hz-20 kHz

Charging Voltage: 5 V **[DC SYMBOL]**

Battery: 3.7 V 400 mAh

Bluetooth Frequency: 2.4 GHz

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.