

**DAEWOO**

Model NO.: STP-103



**USER MANUAL**

↙ **This manual contains important safety precautions and information of correct use.  
Please be sure to read this manual carefully before use so as to avoid any accidents.**

Do not place the product in hot, wet or dusty environment, especially during summer, do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions.  
Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when following situations take place.

-The battery icon shows lower or empty.

-System automatically shut down and turns off soon after restart.

-Operation keys do not respond properly.

-The devices shows  on the notification bar.

# Specification


## Hardware

10.1"Capacitive Touch screen (1024x600pixel)
Capacitive multi-touch (5 touch) point function
CPU : Dual core cortex A9 family 1.2GHz
RAM : DDR3 1GB
Wi-Fi (IEEE802.11 b/g/n) for internet connection
USB host for OTG function
G-sensor
Micro SD card slot recognizing up to 32GB
Built-in speaker & Built-in MIC
5V power adaptor
Compatible with keyboard mouse
Dimension : 263 x 163.6 x 11.5 mm

## Software

Android 4.2.2
Google browser
Wi-Fi connection
e-Book function (all e-book formats supported by application)
1080P HD file playback
VOIP phone function with Wi-Fi connection
Possible to view/edit MS office files by application
Video : AVI, RM/RMVB, FLV, MPG4-1, MPEG2 etc.
Audio : MP3, WMA, AAC, WAV etc.
Photo : JPEG, BMP, GIF, PNG, TIFF

# Nomenclature

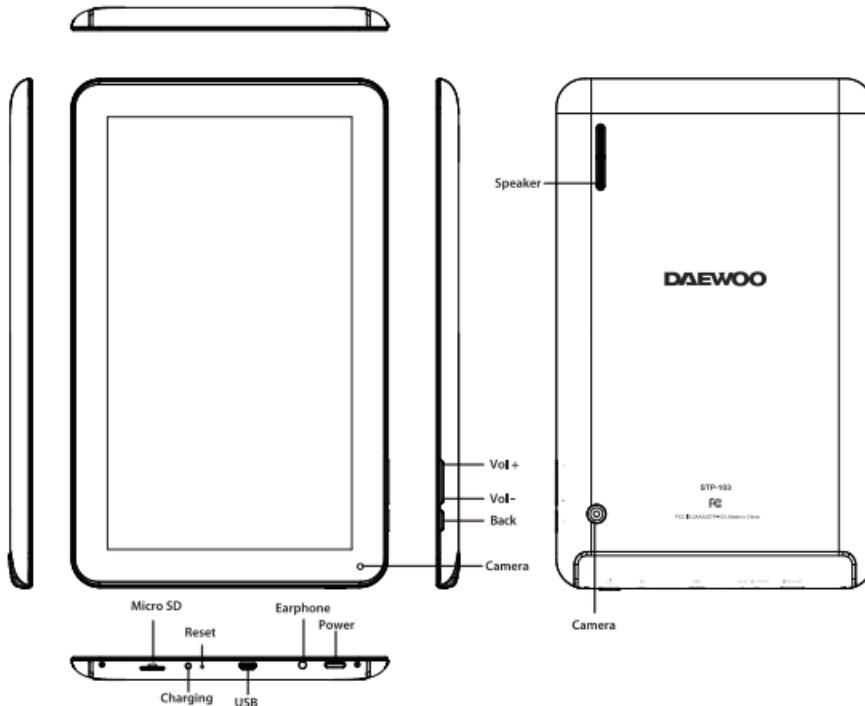

## **Important Notice**

- If the device is freezing or stuck, press the reset button(a small hole) or long press power button for 10seconds.
- When the performance is slow after using some applications, it is recommended to close running application in setting menu.

## **Caution**

- For charging, be sure to use the power adapter(DC5V) that is provided in the package, otherwise, the device may be damaged and does not work.
- The device is equipped with high performance processor. It may heat in case of using long or while charging.

# 1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.  
Short press power button to turn on/off the screen.(Standby mode. Refer to 3. below)

# 2. Desktop


After turning on the device, desktop displays with shortcut icons and notification bar



### 3. Standby mode(Screen off mode) / Unlock the screen

Short press the power button to turn on/off the screen (standby mode on/off).

After standby mode off, slide the lock icon in order to unlock the screen.

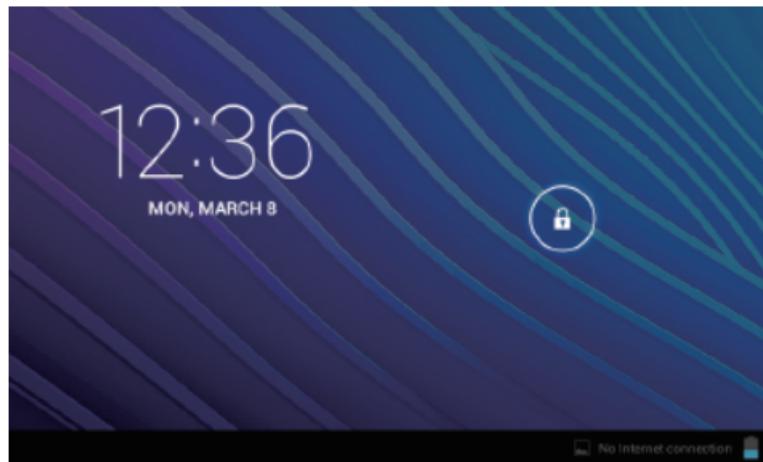


# 4. System settings

On the desktop, press settings icon



# Press system settings


## 1. Wireless & networks

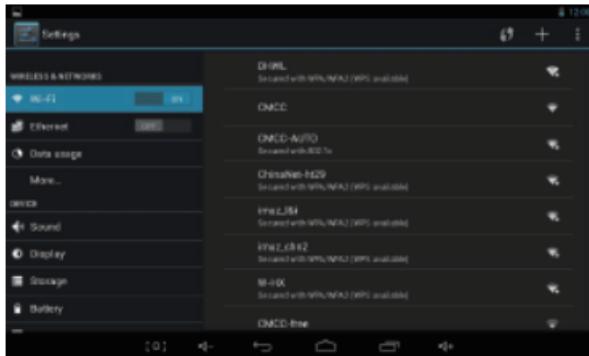

Wi-Fi – Press Wi-Fi to turn on/off


Wi-Fi settings - Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

## 2. Sound

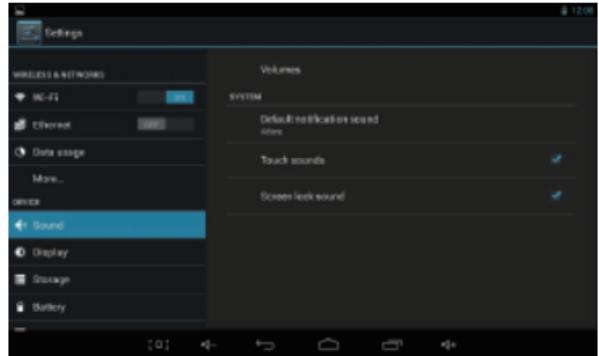


Set up each setting as you like.

## 3. Display

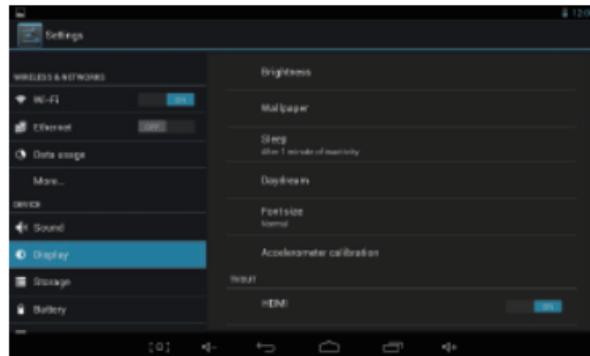

Set up each setting as you like.

## 4. Storage

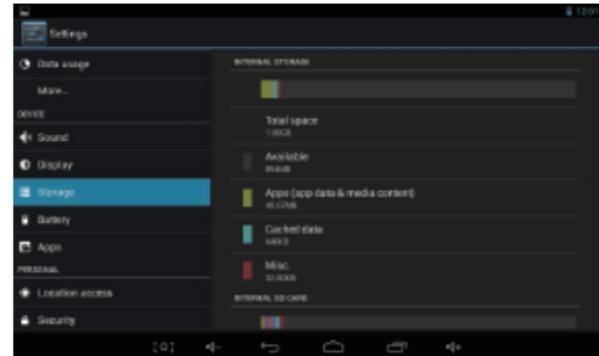

Check device memory and microSD card status.  
Unmount SD card – Unmount the SD card for safe removal.


## 5. Battery

Check battery usage status.




## 6. Apps

Manage downloaded or running applications.

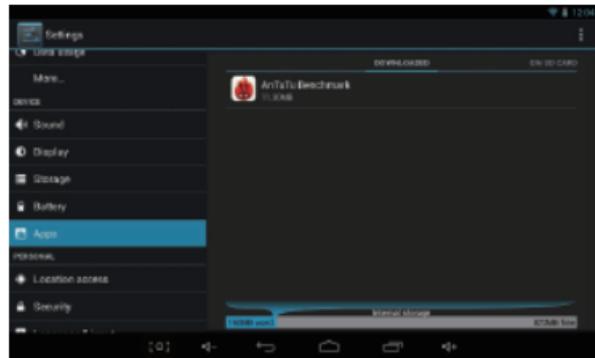

Downloaded

All installed applications are listed.

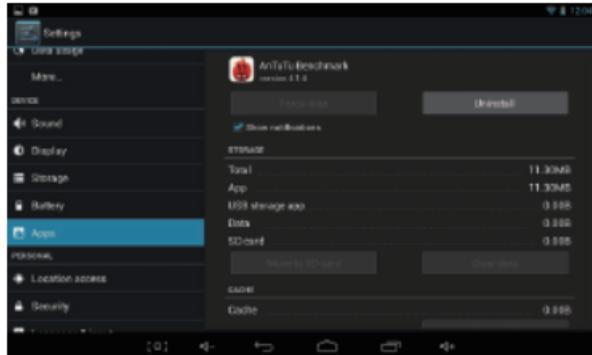

Keep pressing an application to manage.  
Press Uninstall to uninstall the selected application.



Running services  
View and control currently running services.

## 7. Location access

Access to my location – Let apps that have asked your permission use your location information

Wi-Fi & mobile network location – Let apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google.

## 8. Security

Screen lock – Protect your device from unauthorized use by creating a personal screen unlock pattern.

Make passwords visible – Show password as you type.

Unknown sources - If you want to allow installation of non-Market Applications,

Press Unknown sources and press OK.




Install from SD card – Install encrypted certificates from SD card.

## 9. Language & input

Language – Choose your preferable language.

Keyboard & input method – Change keyboard & keyboard settings.

On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

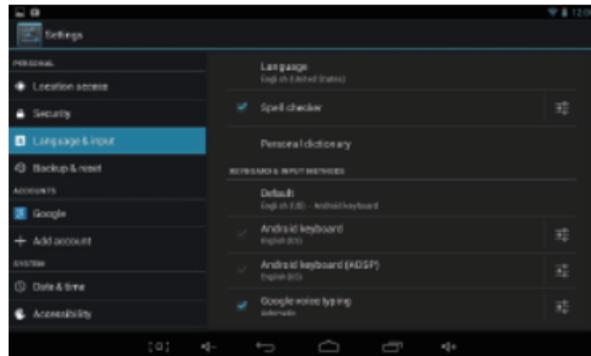

## **10. Date & time**

Set date & time and format

## **11. Developer options**


Set options for application development


## **12. About tablet**

See status, legal information, ETC

# How to connect/disconnect the device to/from the computer

On main desktop, connect the device to the PC,  
drag notification bar on the desktop

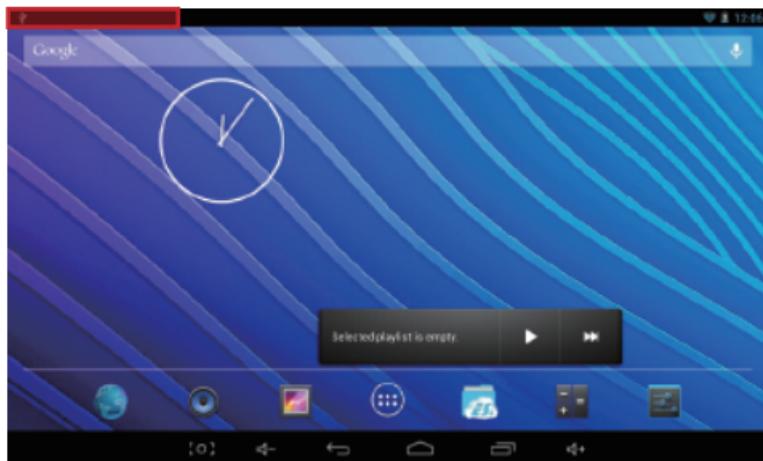

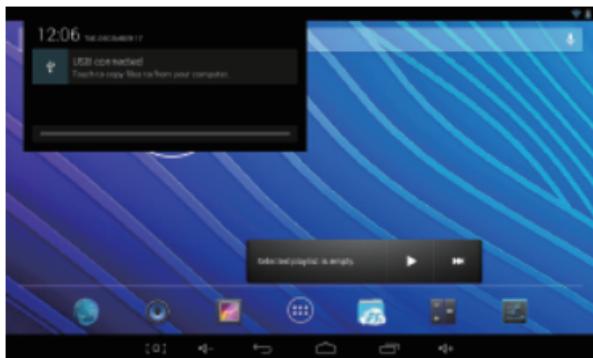

Press "USB connected", select "Turn on USB storage". The device is recognized at Explorer of the computer. Now you can use it as an external storage.



After finishing your work,  
Press "Turn off USB storage" to unmount it.

# How to install Applications(.apk file) into the device

## **Method 1.**

1. Connect the device to the internet. See above [1.Wireless & networks] in order to connect internet.
2. Run "Market" and search the applications you want to install.
3. Follow the instruction on the screen for installation.

## **Method 2.**

1. On your computer, search application file(.apk) that you want to install into the device.
2. Download the file(.apk) into your computer.
3. Connect the device to the your computer.  
See above [How to connect/disconnect the device to/from your computer].
4. Copy and paste .apk file into the device and disconnect it from your computer.
5. Run "ES file explorer" and find .apk file that was copied into the device.
6. Press the file to install and follow the instruction on the screen.

### **Note**

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications.


If you do not meet these requirements, then you do not have permission to download adult applications.

In case of any problems including legal issues from the breach by end-user's own decision, the manufacturer shall not be responsible.

# How to make desktop icons

Press the  icon of desktop and the pop-up displays.



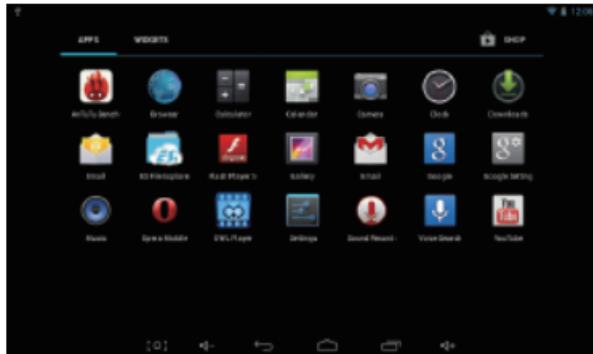

### ***Shortcuts***

Long press your desired APK icon and put it on the desktop.



### ***Widgets***


Press Widgets and press your desired icon to put it on the desktop.

### ***Wallpaper***

Long press the desktop, press Wallpapers and select one of categories of wallpaper.  
Select one you desire and press Set wallpaper.

# Change Input Method

If your device was installed with more than one input method, long press MIC icon of keyboard, and the pop-up displays.

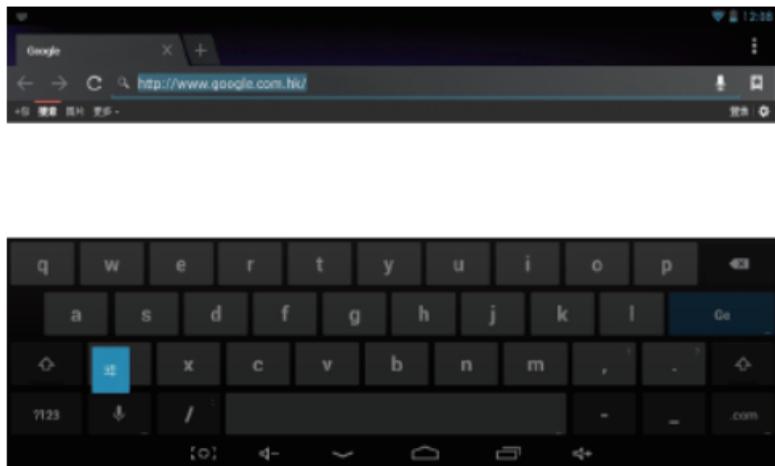

Select the installed keyboard, then the keyboard will appear with your desired language you installed.

# Specification

OS	Android 4.2.2	
CPU	Dual core cortex A9 family 1.2GHz	
SDRAM	DDR3 1GB	
Display	10.1"1024 x 600 Capacitive touch panel	
Multi-touch screen	Yes : 5 point multi-touch	
Built-in flash memory	8 GB	
IO PORTS	Audio port	3.5Ø earphones
	USB port	1 x 5pin micro USB port (support USB host and OTG)
	DC port	2.5Ø 5V 2A
	Micro SD	Micro SD card
	OTG port	Same with USB port
	Button	Power, VOL-, VOL+, Reset , Back
Speaker	1.5W, Frequency response : 20Hz – 20k Hz, N/S : >85%	
G-sensor	Yes	
Camera	0.3M pixel (front); 5.0M pixel (rear)	
Wi-Fi	802.11b/g/n	
Power	Adaptor 5V -2A	
Battery	3.7V Li-Polymer	
Dimension	263 x 163.6 x 11.5 mm	
Charging time	by charger	approx. 3~4 hours

## FCC statement

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

\*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device is acting as slave and operating in the 2.4 GHz (2412 ~2462 MHz) band.

Ad Hoc function is supported but not able to operate on non-US frequencies. Do not use the device with the environment which below minimum -10 °C or maximum over 50°C .

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.