

## **ET-632A elements depict**

Production use 3.0V Battery for source, have two keys and two outside temperature searching wire, press °C / °F /RESYNC key can change the temperature's units, press for 3 seconds for register receiver station, press ON/OFF key for 3 seconds for turn on. the temperature searching wire detect range from 0°C to 300°C . the detect temperature will show on the LCD. Have one LED light, when sending it will blink.

Send style it consist by one code and 433.92MHZ rocker which consist by two triode and one 433.92MZH filter. Every 8 seconds code will produce a bunch of square wave to adjust 433.92MHZ' rocker, then by the antenna send RF signal.