




Watch Online Video  
and Mirror Screen  
on TV

## Quick Installation Guide


Connect OVO to your TV and together with your smartphone, you can watch playlist organized via cloud service, OVO-Q, on your TV; or mirror screen from smartphone to TV, and play more contents to TV from 3rd party Apps through DLNA.

**[Note]** We provide OVO-Q in App version and Web version. Below lists the OVO-Q-compatible devices and browsers: App OVO-Q supports iOS 5 and above, and Android 2.3 and above; Web OVO-Q supports Chrome, Firefox, Safari, and Windows IE9 above. Content availability varies by region.

- What's in the box: OVO, Power cord
- OVO at a glance

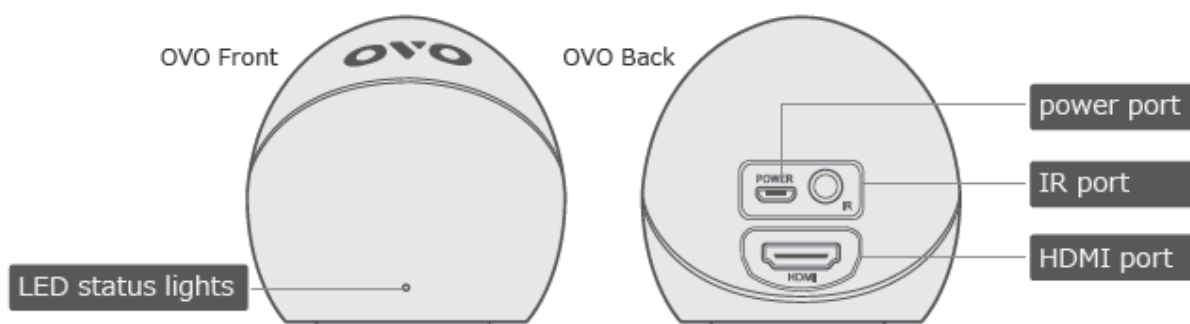

Dimensions : 61.85 mm(h), 63.32 mm(w), 72.78 mm(d) Weight : around 77grams

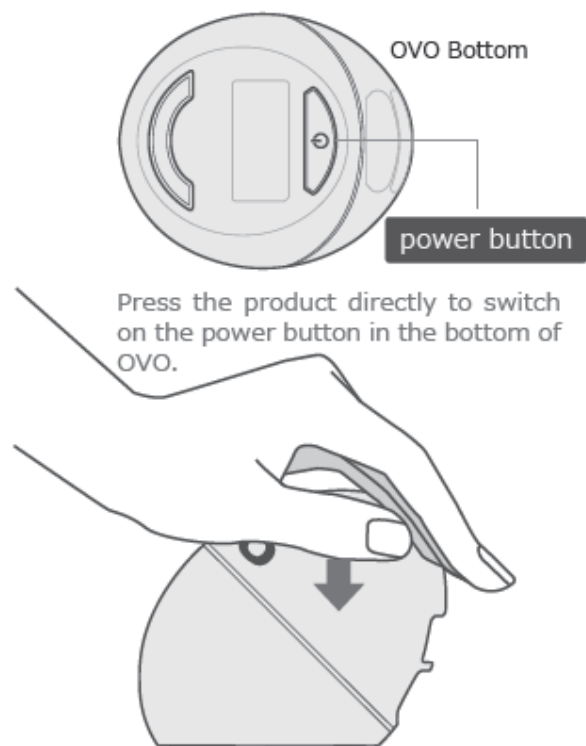

Press the product directly to switch on the power button in the bottom of OVO.

- **LED status lights**

LED lights up when OVO is powered on.  
LED goes off after 10~20 seconds when OVO is powered off.

- **HDMI Port**

Connect the standard Type A HDMI cable to the HDMI port on your TV.

- **Power Port**

Connect to power outlet via Micro USB cable.  
Input: 100-240V~50/60Hz, Micro USB 5V1A DC.

- **IR Port**

While you can always turn your smartphone into a remote controller through OVO-Q, we do not rule out of the possibility to provide an independent controller with an IR receiver under customized circumstances.

- **Built-in Wi-Fi Technology**

Connect OVO to your wireless network. OVO and your smartphone should connect to the same Wi-Fi network.

- **What you need**


1. TV: with HDMI input.
2. Wireless Network: 802.11b/g/n Wi-Fi name and password.
3. A wifi-enabled smartphone: iPhone iOS 5 and above or Android 2.3 and above.
4. Cloud service OVO-Q account (free): We provide App and Web interface.
5. HDMI cable: standard Type A.

## Chapter 1: Connect OVO

OVO is connected to TV via HDMI port to transmit audio and video signal to your TV. Before setting OVO, please check the connecting port behind your TV and prepare the proper cable.

### Step 1: Connect HDMI cable

1. Please connect one end of HDMI cable to HDMI port on the backside of TV.
2. Connect the other end of HDMI cable to HDMI port on the backside of OVO.

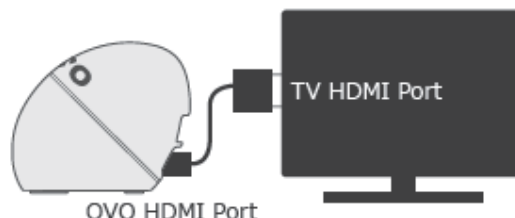

### Step 2: Connect power cord

Connect the power cord to OVO backside and connect the other end of power cord to the power outlet.

**[Note]** Do NOT cover OVO with anything because it might interfere the transmission of Wi-Fi signal. Do NOT put OVO on top of any electronic device.

### Step 3: Turn on your TV

1. Turn on your TV and make sure the input settings on TV is HDMI. Refer to the manual that comes with your TV for information about input settings.

2. OVO helps you select and set up your Wi-Fi network connection if it's your first time to use OVO. Please refer to Chapter 2 about the initial setup information.

**【Note】** When your Wi-Fi network changes, you should change the OVO settings accordingly. See Chapter 2.

## 2 Chapter 2: Initial Setup

OVO helps you select and set up your Wi-Fi network connection. Have your Wi-Fi network name and password (if you use one) and your smartphone ready when setting up OVO. Please make sure you have already finished all settings of Chapter 1.

### Wi-Fi Settings

#### Step 1: Download OVO-Q

Visit <http://ovoq.tv/setup> on your mobile device to download and install OVO-Q (or scan QR code on TV screen to download)

#### Step 2: Connect smartphone's Wi-Fi network to OVO

Go to the settings on your smartphone and switch Wi-Fi network to the name showing on your TV screen. The default Wi-Fi name will be OVO\*\*\*.

#### Step 3: Launch OVO-Q and choose your Wi-Fi network for OVO

Launch OVO-Q App on your smartphone and you will see the Wi-Fi list on your smartphone screen. Choose the Wi-Fi network you want to connect OVO to. Key in the password if necessary.

### OVO-Q Account Settings

- Sign-up or log-in the OVO-Q account and then you can add or edit your playlist.
- Make sure your OVO and smartphone are connecting to the same Wi-Fi network. Your OVO-Q account will be paired to OVO automatically.
- Firmware update will be checked and notified automatically. Or you can manually update the firmware version through OVO settings on OVO-Q.



## 3 Chapter 3: Watch

### Play videos

**【Note】** Make sure your OVO has been connected with HDMI cable, power cord, and turn on your TV (see Chapter 1). Also, your OVO and smartphone should connect to the same Wi-Fi network.

**Autoplay:** Press OVO to turn on and it will autoplay the videos in your playlist.

**Manual Control:** You can also play other videos by manual control.

**Re-load:** You can re-organize your playlist even when OVO is playing videos. And then press OVO twice to re-load and play the latest playlist.

**Turn Off:** While OVO is on, press OVO to turn it off (the shutdown process takes around 10 seconds).

## Edit your playlist

You can edit your playlist by using App or Web OVO-Q.

**[Note]** Since we use open API or license of 3rd party Apps, we can't guarantee the connection to the service if the API is closed, or the license is terminated by online content providers. Some content providers may stop maintaining the support for former mobile operation systems.

## OVO Features

When OVO-Q connect to OVO successfully, OVO-Q will reveal OVO Features entrance where you can access more functions to control OVO.



- In Apps, you can mirror your smartphone screen to TV screen by Mirror Screen, and play the files in your smartphone by My Media; also, there are more content for you to choose from a growing number of 3rd party Apps, and play to TV through DLNA.

**[Note]** Mirror Screen adopts Wi-Fi Display technology. Devices compatibility and connection varies from different with device. You can get the compatible list at <http://www.ovomedia.tv>. Refer to the manual that comes with your device about the connecting information.

## Chapter 4: Troubleshooting

Check following tips for a quick troubleshooting. For additional information, see OVO Official Website at <http://www.ovomedia.tv>

**If OVO isn't responding, first make sure:**

1. The power cords for OVO and your TV are securely connected to a working power source.
2. The HDMI cable between OVO and your TV are pushed all the way in, and your TV is turned on and set to the correct HDMI input.
3. OVO is connected to your Wi-Fi network (see Chapter 2), and your network and internet connections are on and working properly.
4. OVO is connected to your OVO.Q ID (see Chapter 2).

If you still have trouble, try resetting your equipments by disconnecting OVO, TV, wireless networking device, and your router from the power outlet. Wait 30 seconds, and then reconnect everything in the order of: wireless networking equipment, router, TV, and OVO.

### Resetting OVO:

If you need to reset OVO to factory default, please press OVO for 5 seconds.

**[Note]** After this process, you'll need to set up you network and account information again.



## Product Information Guide

This Product Information Guide contains safety, handling, and the one-year limited warranty for OVO.

Read all safety information below and operating instructions before using OVO to avoid injury.

### Important Safety Instructions

**WARNING:** Failure to follow these instructions could result in fire, electric shock, or other injury or damage to OVO or other property. Read and follow these instructions to use OVO safely.

- Read and keep these instructions.
- Head all warnings and follow all instructions.
- Do NOT use OVO near water.
- Clean only with a dry cloth.
- Do NOT install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and at the point where they exit from OVO.
- Only use attachments/accessories specified by the manufacturer.
- Unplug OVO during lightning storms or when unused for long periods of time.

**WARNING:** To reduce the risk of fire or electric shock, do not expose OVO to rain, liquid, moisture, excessive heat, or naked flame.

- Refer all servicing to qualified service personnel. Servicing is required when OVO has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into OVO, or OVO has been exposed to rain or moisture, does not operate normally, or has been dropped.
- When connecting or disconnecting OVO, always hold the plug by its sides. Keep fingers away from the metal part of the plug.
- Do not use OVO outdoors. OVO is an indoor product.
- Do not expose OVO to dripping or splashing.
- Information such as model number, electrical rating, and other classifications is located on the bottom of OVO.

### Do Not Make Repairs Yourself

**WARNING:** Do not attempt to open OVO or disassemble it. You run the risk of electric shock and voiding the limited warranty. No user-serviceable parts are inside.

### About Handling

Your OVO may be damaged by improper storage or handling. Be careful not to drop OVO when moving the device.

### About Operating and Storage Temperatures

When OVO is in use, it's normal for the case to get warm. Keep the operating temperature between 0~40 degrees C. Keep the storage temperature between -20~60 degrees C.

### OVO One (1) Year Limited Warranty

Ovomedia Creative Inc. ("Ovomedia") warrants OVO (which includes the OVO device and the ancillary parts packaged with it) against defects in materials and workmanship under normal use for one year from the date OVO is first purchased by an end user.

This Limited Warranty is only valid and enforceable in countries where the OVO is sold through Ovomedia approved sales channels. This Limited Warranty only applies to hardware components, and Ovomedia does not provide any warranty for damage caused by normal wear and tear, accidents, misuse (including failure to follow product documentation and plugging the device or other included parts into the wrong type of port), neglect, disassembly, alterations and external causes such as but not limited to extreme thermal or environmental conditions (including but not limited to moisture and heavy dust). This Limited Warranty does not guarantee that use of the OVO will be uninterrupted or error free.

#### Exclusive Remedy

If a defect arises and you return your OVO during the one-year warranty period, Ovomedia will, in its sole discretion and to the extent permitted by law, (1) replace the defective OVO with a new

or refurbished device with functionality at least equivalent to the defective device, (2) repair the defective OVO using new or previously used parts that are equivalent to new in performance and reliability. If Ovomedia replaces any OVO, the replaced device will continue to be warranted for the remaining time of the original warranty period. All returned parts for which you have received a replacement will become the property of Ovomedia. To make a warranty claim, please contact Ovomedia at <http://www.ovomedia.tv/>.

In order to qualify for the remedy above, you must provide your name, contact information, and the serial number of your OVO. In certain situations, you may also be required to provide a purchase receipt.

### The Limited Warranty

Written above is the only express warranty Ovomedia provides for the OVO, and the above remedy is your sole remedy. To the maximum extent permitted by applicable law, Ovomedia expressly disclaims all other warranties and conditions of any kind, whether statutory or implied, regarding the OVO, except that any implied warranties of merchantability, fitness for a particular purpose, and non-infringement are limited in duration to the one-year period of the express warranty above.

Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

You expressly understand and agree that, to the maximum extent permitted by applicable law, Ovomedia and its subsidiaries and affiliates (collectively, "Ovomedia Parties") shall not be liable to you under any theory of liability (whether contract, tort (including negligence) or otherwise) for any indirect, incidental, special, consequential or exemplary damages that may be incurred by you in connection with OVO or these terms, including any loss of data, whether or not a Ovomedia party or its representatives have been advised of or should have been aware of the possibility of any such losses arising.

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

No employee or representative of Ovomedia or its affiliates or any third party is authorized to make any modification, extension or addition to this Limited Warranty. If any term of this Limited Warranty is held to be illegal or unenforceable, the remaining terms of this Limited Warranty will remain in full force and effect.

This warranty gives you specific legal rights, and you also may have other rights which vary from State to State.

### Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

## Industry Canada statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

## Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

## 以下警語適用台灣地區

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

## 產品資訊指南

這份「產品資訊指南」包含安全性、使用及OVO的一年有限保固內容。在您開始使用OVO之前，請先詳讀以下所有的安全需知和操作指示，以免受到傷害。

### 重要的安全指示

**【警告】**若沒有依照以下的安全指示來操作，可能會導致火災、電擊，或對OVO或其他財物造成傷害或損毀。

請閱讀並依照以下指示，來安全地使用OVO。

- 請閱讀並保存以下指示。
- 請注意所有警告，並依照所有指示操作。
- 請勿在靠近水的場合使用OVO。
- 僅使用乾燥的布料來進行清潔。
- 請勿安裝在接近熱源的場所，例如暖爐、電熱器、爐火或其他產生熱氣的產品（包含擴大機）旁。
- 請保護電源線不被踩踏或擠壓，尤其在插頭部位及從OVO延伸出來的部位。
- 僅使用製造商所指定的附件或配件。
- 請在雷雨或長時間不使用的狀態時，拔下插頭。

**【警告】**請勿讓OVO暴露雨中、液體、濕氣、高熱或火源之下，以避免火災或電擊的危險。

- 請由合格的專業人員進行維修服務。OVO遇到以下的毀損時需要進行維修：電源線或插頭毀損、液體潑灑或物件掉落在OVO上，或是OVO曾暴露在雨水或濕氣中導致無法正常運作，或者OVO因摔落導致外殼脫落。
- 當連接或中斷OVO的電源時，請務必手持插頭的兩側。請勿用手指接觸插頭的金屬部分。
- OVO是室內產品，請勿在戶外使用OVO。
- 請勿讓液體滴落或飛濺在OVO上。
- 型號、電子規格和其他分類的相關資訊位於OVO底部。

### 請勿嘗試自行維修

**【警告】**請勿嘗試打開OVO或將其拆解，這樣會有遭受電擊的危險，並會使得有限保固失效，內部沒有使用者可自行維修的組件。

### 關於使用與處理

您的OVO可能會因不當的保存或使用而毀損。請小心不要在移動設備時摔落OVO。

### 關於操作與保存溫度

當您在使用OVO時，其外殼產生微熱是正常的現象。操作溫度請勿超出0°C~40°C之間，保存溫度請勿超出-20°C~60°C之間。

### OVO產品一年的有限保固責任

Ovomedia Creative Inc. (「Ovomedia」) 對原廠包裝的OVO (包括OVO產品以及隨附的配件) 於正常使用下出現的材料以及工藝技術瑕疵提供保固，保固期自最終用戶首次購買日起算為期一年。

本有限保固責任效力僅限於透過Ovomedia授權的銷售通路所購買的OVO產品，且僅限於硬體零件的有限責任保固。本保固不適用於以下原因的毀損：正常損耗、意外、不當使用 (包括未遵未產品使用說明、以及將產品或零件等其他物品插入不正確的插槽中)、疏忽、不當拆裝、變更以及外在因素包括但不限於熱氣以及環境狀況 (包括但不限於溼度及重度落塵)。此有限保固並不保證產品在使用時絕不中斷且絕無錯誤訊息。

### 唯一賠償

在一年保固期限內退回您瑕疵的OVO，Ovomedia將在法律允許的範圍內自行決定 (1) 提供全新或是與新品功能相當的翻新品以更換瑕疵的OVO，或是 (2) 使用新的零件或是在性能及可靠方面與全新零件相當的翻新零件以維修您瑕疵的OVO。任何替換或維修產品的保固期將適用原產品剩餘的保固期，被汰換的產品及零件所有權屬於Ovomedia Creative Inc.，如何執行您的保固權益請上官網查閱 <http://www.ovomedia.tv/>。

為確保上述的賠償權利，請您務必提供姓名、聯絡資訊、及您的OVO產品序號，在某些狀況下，可能需提供購買憑證。

### 有限保固

上述聲明是Ovomedia提供給OVO的唯一明示保固以及唯一賠償。在適用法律允許的最大範圍內，任何明示或默示之保固或條件，包括但不限於有關適銷性、適合作某特定用途、及不侵害第三方權利，皆不在Ovomedia之保證範圍內。

您確實了解並同意，在適用法律允許的最大範圍內，Ovomedia及其子公司與分公司 (統稱Ovomedia團隊) 對於可能因您而產生的任何間接的、附帶的、特殊的、隨之發生或是懲戒性的損害概不負責 (不論是合約、過失侵權或其他)，包括OVO相關或其他不論是Ovomedia團隊或代表已經被告知或是應該知曉的損害可能性提升的狀況，如任何資料的遺失。您確實了解並同意，在適用法律允許的最大範圍內，Ovomedia團隊所承擔與OVO相關的責任或有限保固責任將不超過您實際購買OVO的金額。

Ovomedia員工或代表、或子公司或分公司、或第三方單位皆未獲授權對此有限保固作任何修改、延長或補充。如任何條款被視為不合法或不可強制執行，其他條款的合法性與可執行性不因此而受到減弱。您亦享有國家、省及地方法律所賦予的不受本保固限制的其他權利。



