



p2

p3

p4

p5

p6

p7

Safety Instructions
Read all instructions before you use this device and follow all instructions. If physical injury, loss of data or damage is caused by failure to follow instructions, the warranty does not apply.

Overview
Diagrams showing the front and back views of the projector with labels for various ports and buttons like IR Receiver, Lens, USB, HDMI, and Power Button.

Remote Control
Diagram of the remote control with labels for buttons such as Power, Mute, Home, and various function keys.

Initial Setup
1 Pairing the Remote
The remote control has been tested before leaving the factory. If it cannot be performed soon after the battery is installed, please perform the pairing again.

2 Select Language
Select the preferred language and press [Enter] button to confirm.
3 Set Up Network
Select the preferred Wi-Fi network and press the [Enter] button to connect.

User Interface
1 Home
Screenshots of the projector's user interface showing options for TV Window, Settings, Network, and Users.

p8

p9

p10

p11

p12

p13

Auto Focus
Use the remote control to move the select border to [Auto Focus] and press [Enter] button. The image will be clear.
HDMI
Connect the external audio/visual signals with HDMI cable. Move the select border to [HDMI] and press [Enter] button to switch the signal source.
Eco Mode
When the projector is equipped with an AC portable power station or the environment does not require high brightness, you can select [Eco] and press [Enter] button to increase the use time of the portable power station or reduce the brightness.
Settings
Select [Settings] and press [Enter] button to enter the setting page and adjust the functions.

Network
Select [Network] and press [Enter] button to select preferred network or check the network connection status.
Users
Select [Users] and press [Enter] button to check the users' basic information. You can add new users or modify their basic information here.
TV Window
- Select TV Window and press [Enter] and [Enter] button to switch the contents of different users.
- Select TV Window and press [Enter] button to show the full screen.
- On full screen, you can press [Enter] button to show the channel list. Use [Enter] and [Enter] button to switch channels.

2 Settings
- Network
- Accounts & Users
- Display Settings
- Device Preferences
- Projection Settings
- Bluetooth Settings
- HDMI
- One-click Acceleration

Popular Features
1 Marketplace
You can find more apps from third-party marketplace.
2 One-click Acceleration
Press and hold [Enter] button to reduce lag and latency.

Phone Projection
1 Go to the bottom of the homepage and click [Phone Projection] to download the recommended projection software.
2 Connect the mobile phone to the same network as the projector.

3 Tap [Phone Projection] on the phone and select the device to start the projection function.

p14

p15

p16

p17

p18

p19

Bluetooth Mode
1 Press [Bluetooth] button on the remote control to switch the Bluetooth mode.
2 Go to the Bluetooth settings on your phone and select your projector name to pair your phone and projector.

3 You can enjoy phone's music on your projector.
Level Calibration
After positioning the projector, go to "Settings" > "Projection Settings" > "Level Calibration" to calibrate the level.

FAQ
1. There is no picture.
Please check whether the light is flashing red. If it is flashing, please turn off the device and check whether the air ventilation is too dirty or the air inlet and outlet are blocked. After troubleshooting, restart the device after about 15 minutes.
2. The remote control does not work.
Please replace the battery before reinserting or replace with a new battery.
3. The projector does not turn on using the remote control.
Please check whether the IR receiver is shielded. Remove the shielding and press the power of the remote control again. The power button sends IR and RF signal. Please make the remote control aim at the IR receiver of device or set the signal reflect from the wall to the receiver.

4. The image is blurred.
Please position the projector again. Press the [Enter] button to perform focus.
5. The hanging installation screen is update down.
Go to "Settings" > "Projection Settings" > "Projection Mode" to check whether the projection mode is correct.
6. The device can only be placed on the side and the display screen is trapped.
Go to "Settings" > "Projection Settings" > "Auto keystone correction" and turn off the function. Go to "Manual keystone correction" to adjust the horizontal and vertical.
7. The device cannot connect to the Ethernet.
Please check whether the Ethernet is plugged in correctly and pass through the router to the device. If your Internet is DHCP without router, please use Wi-Fi connection.

FCC Compliance Statement
This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) if this device does cause interference, the user must stop using the device.
Warning: Do not use this device near flammable or explosive materials. Do not use this device near medical equipment. Do not use this device near aircraft. Do not use this device near power lines. Do not use this device near overhead power lines. Do not use this device near overhead power lines. Do not use this device near overhead power lines.

Specification
Display technology: TI DLP
Brightness: 3000 LED Lumens
Resolution: 1920x1080 (Support 3840x2160 4K Decoded)
Throw ratio: 1.2:1
Focus mode: Auto Focus
Keystone correction: Vertical ±40° (auto/manual) Horizontal ±40° (manual)
Speaker: 5W*2
Limited Warranty
12 Month Warranty for Quality-Related Issues
OVO warrants its products to be free from defects in material and workmanship, under normal use, for 12 months from the date of purchase. If a product proves to be defective in material or workmanship during the warranty period, OVO will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include re-manufactured or refurbished parts or components. This warranty is valid only for the first consumer purchase. For information about receiving service under warranty, please refer to the Customer Service page. You will need to provide your product's serial number.
What the warranty does not cover:
1. Any product on which the serial number has been defaced,

p20

p21

p22

p23

p24

p25

2. Damage, deterioration, or malfunction resulting from:
- Accident, misuse, neglect, fire, water, lightning, or other acts of nature, manufacturer product modification, or failure to follow instructions supplied with the product.
- Operation of the product for other than the normal intended use or not under normal conditions.
- Repair or attempted repair by someone not authorized by OVO.
- Any damage to the product due to shipment.
- Removal or installation of the product.
- Causes external to the product, such as electric power fluctuations or failure.
- Use of supplies or parts not meeting OVO's specifications.
- Normal wear and tear.
- Any other cause which does not relate to a product defect.
3. Removal, installation, and set-up service charges.

Customer Service
For technical support or product service, please visit:
Service Center: ovoid.com/support
Contact Us: ovoid.com/contact

安全事項
1. 閱讀說明書，請詳細閱讀說明書。若因未遵守使用說明書而導致人身傷害、資料損壞或損壞，不在保固範圍之內。
2. 不要直接看光源，強光可能傷害您的眼睛。
3. 避免直接看鏡頭，以免對人體造成傷害。避免產品過熱、變色、甚至起火。
4. 不要堵塞散熱孔，保持50公分以上的距離。
5. 避免將產品放在陽光、熱氣、潮濕或變化的環境中。
6. 禁止電氣產品接觸液體。
7. 禁止使用水清潔。請用乾布清潔。
8. 請勿自行拆解或維修。若有問題請洽客服中心。

產品介紹
Diagram showing the projector's features and ports: IR Receiver, Lens, USB, HDMI, Audio In, Audio Out, DC In, Power Button, and Keypad.

遙控器
Diagram of the remote control with labels for buttons: Power, Mute, Home, Settings, Eco Mode, Manual Focus, Voice Search, Return, and various function keys.

初設設定
1 遙控器配對
2 選擇語言
3 設定網路

p26

p27

p28

p29

p30

p31

3 設定網路
4 登入註冊
使用介面
1 首頁

自動聚焦
使用遙控器，選取 [自動] 鍵進行自動聚焦，即可使影像清晰。
HDMI
請將 HDMI 線插入外部顯示機或電視，使用遙控器，選取 [HDMI] 鍵即可切換訊號來源，即可播放外部顯示機或電視影片。
網絡模式
當產品接駁 110V 交流之行動電源或環境不需要高亮度時，使用遙控器，選取 [自動] 鍵進行節能模式，即可降低行動電源的耗電或降低亮度。
設定
當您需要設定上的使用者時，使用遙控器，選取 [設定] 鍵進入設定頁面，選取 [設定] 鍵即可開啟功能功能調整。
網路
使用遙控器，選取 [設定] 鍵進入網路頁面，做網路選擇，或是重置網路狀態。

藍牙模式
1 按下遙控器 [藍牙] 鍵選擇「藍牙」，投影機進入藍牙模式，等待連線。
2 開啟手機中的藍牙功能，點選投影機名稱完成藍牙配對。
3 享受投影機播放音樂的樂趣。

水平儀校正
1 按下遙控器 [藍牙] 鍵選擇「藍牙」，投影機進入藍牙模式，等待連線。
2 開啟手機中的藍牙功能，點選投影機名稱完成藍牙配對。
3 享受投影機播放音樂的樂趣。

2 設定
- 網路設定
- 用戶登入
- 顯示設定
- 投影機設定
- 藍牙配對設定
- HDMI
- 一鍵加速

常用功能
1 應用商店
2 一鍵加速

p32

p33

p34

p35

p36

p37

手機投影
1 安裝下方App
2 將手機連接到投影機相同網路
3 在手機上點選投屏，並從彈出清單選擇設備，即可進行投屏。

疑難排解
Q1 工作中突然沒有畫面
Q2 投影畫面模糊
Q3 使用遙控器無法開機
Q4 投影畫面不清晰

藍牙模式
1 按下遙控器 [藍牙] 鍵選擇「藍牙」，投影機進入藍牙模式，等待連線。
2 開啟手機中的藍牙功能，點選投影機名稱完成藍牙配對。
3 享受投影機播放音樂的樂趣。

水平儀校正
1 按下遙控器 [藍牙] 鍵選擇「藍牙」，投影機進入藍牙模式，等待連線。
2 開啟手機中的藍牙功能，點選投影機名稱完成藍牙配對。
3 享受投影機播放音樂的樂趣。

疑難排解
Q1 工作中突然沒有畫面
Q2 投影畫面模糊
Q3 使用遙控器無法開機
Q4 投影畫面不清晰

疑難排解
Q1 工作中突然沒有畫面
Q2 投影畫面模糊
Q3 使用遙控器無法開機
Q4 投影畫面不清晰

p38

p39

p40(封底)

Table with 2 columns: Feature and Support. Rows include: 網路連接, 亮度, 工作溫度, 真實點對點, 投射比, 喇叭, 梯形校正, 喇叭, 喇叭.

技術規格
顯示技術: TI DLP
亮度: 3000 LED Lumens
工作溫度: 5~35°C
真實點對點: 1080P (1920x1080)
投射比: 1.2:1
喇叭: 自動對焦
梯形校正: 垂直自動/手動校正±40度, 水平自動校正±40度
喇叭: 5W*2

支援服務
您可以透過以下管道獲得協助，我們將竭誠為您服務
支援中心: ovoid.com/support
聯繫電話: feedback@ovov.com
服務時間: 星期一至五 9:00-18:00

保固資訊
保固資訊
OVO 保固資訊
OVO 保固資訊

支援服務
您可以透過以下管道獲得協助，我們將竭誠為您服務
支援中心: ovoid.com/support
聯繫電話: feedback@ovov.com
服務時間: 星期一至五 9:00-18:00

保固資訊
保固資訊
OVO 保固資訊
OVO 保固資訊