



MUSIC BOX RECORD PLAYER™
WIRELESS SPEAKER



Operation Manual

FP-PD

EDITION COVER

110

<p>BATTERY SAFETY INFORMATION</p> <p>When the battery is left in the ED-4 it will deliver 30 seconds of talk time during a charge. When the battery is charged, talk time is doubled. If you do not charge your telephone, the battery will last up to 10 days.</p>	<p>DANGER To avoid personal injury or damage to your telephone, do not attempt to disassemble the telephone. Do not attempt to remove the battery or the speaker from the telephone. If you attempt to do so, you may damage the telephone.</p>	<p>• When charging the telephone, please use the on/off and charging cable or a telephone jack or the power supply or a device that can provide a power source.</p>	<p>• Do not connect or attach the speaker or the battery to a power source, plug or directly to a car's cigarette lighter.</p>	<p>• Do not place the speaker or battery near a fire or direct sunlight. Heating the device or the battery can cause damage and result in bleeding, ignition or the battery can catch fire.</p>	<p>• Do not attempt to charge the battery if it has not recharged within the specified time. Doing so may cause the battery to become overcharged.</p>	<p>• Do not attempt to modify, change, or reshape the battery.</p>	<p>• Do not use your device if the battery begins to emit odors, overheat, or catch fire.</p>	<p>• Do not short circuit the battery or premises lines/junctions.</p>	<p>• Do not drop or hit the telephone or damage the speaker or the battery contacts.</p>

FCC Statement

FCC ID: 2ABDQ-AZ100
IC: 2095A-AZ100

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important Safety Instructions

1. Read these instructions.

2. Keep these instructions.

3. Heed all warnings.

4. Follow all instructions.

5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized plug. A polarized plug has one blade wider than the other. This plug will fit into a polarized outlet only one way. If you cannot insert the plug fully into the outlet, contact a qualified electrician to replace the obsolete outlet.

10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments recommended by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the apparatus. When a cart is used, use caution to avoid tipping over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Information for User

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician to help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Fisher-Price

Manufactured for and distributed by:
Fisher-Price[®]
PO Box 3000
East Aurora, NY 14052-3000
U.S.A.
Edition: NJ 0837
Mode in China

www.fisherprice.com