



MUSIC BOX RECORD PLAYER™ WIRELESS SPEAKER



Operation Manual
FP-BTT

BT ID: D031935
FCC ID: 2AAVAFP

©2016 Mattel, Inc. All Rights Reserved.

刀线不印刷
材质：150g铜板纸印刷。
说明书需要装订成书的形式

BACK COVER

FRONT COVER

1

2

3

4

5

6

Thank you for purchasing the Music Box Record Player™ Wireless Speaker. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Music Box Record Player™ Wireless Speaker
- USB Charging Cable
- AUX Cable
- Operation Manual

KEY FEATURES

- Play music wirelessly
- Media shortcut controls
- Rechargeable Lithium-ion battery
- Built-in microphone and answer button

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.


Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not use the speaker at excessive levels as this may damage hearing.

Do not expose batteries, battery pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.

PRODUCT DIAGRAM

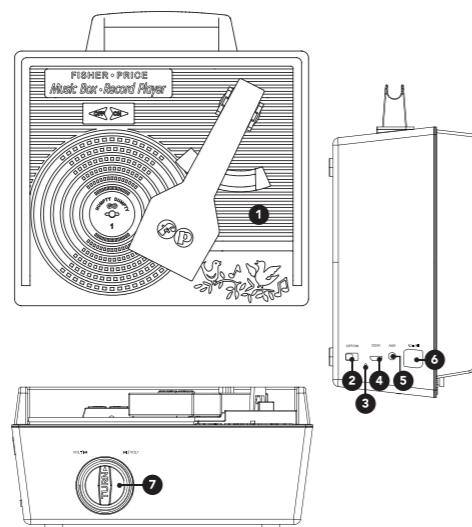

PRODUCT FEATURES

1. Built-in Rechargeable Battery
2. Power On/Off Switch
3. LED Indicator Light
4. Micro USB Charging Port
5. Optional AUX-in Port
6. Answer Call / Play / Pause Button
7. Volume / Track Control Knob

PAIRING THE SPEAKER TO A BLUETOOTH® ENABLED PHONE

1. Make sure the speaker is turned off.
2. Keep your speaker and mobile phone or tablet within 3 feet of each other during the pairing process.
3. Slide the Power On/Off Switch to the "On" position.
4. The LED light will flash blue, which indicates the speaker is in pairing mode.
5. 4. Make sure Bluetooth® is enabled on your mobile phone. If you are unsure how to do this, please refer to the user manual of your mobile device, or contact the manufacturer of your mobile phone.
5. Using your mobile device, search for Bluetooth devices within range. Select "FP-BTT" from the list.
5. If prompted for a PIN code, enter "0000" from your mobile device and select "OK" to complete pairing. Depending on which mobile phone or tablet you have, it may not be necessary to enter a PIN and your speaker and your mobile phone or tablet will pair automatically.

Note: If pairing is unsuccessful, turn off the speaker first and re-pair following the aforementioned steps. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

LISTENING TO MUSIC

Once the speaker is paired to your device, you can stream music wirelessly to the speaker. Select the track you wish to listen to on your device. Should you encounter any problems while streaming, please refer to your device's user manual.

USING SPEAKERS WITHOUT BLUETOOTH

Your speaker has a built-in AUX input which will allow you to listen to music from non-Bluetooth devices using a 3.5mm AUX cable.

1. Insert one end of the AUX cable into the headphones AUX input.
2. Insert the other end into your devices headphone jack.
3. Power on your headphones and your device and begin playing music.

The microphone feature may not be supported in this mode.

Before using AUX mode, please disable Bluetooth on your mobile phone or tablet. If your AUX cable is connected while Bluetooth is enabled, the speaker will continually beep to remind you to disable Bluetooth.

MEDIA AND VOLUME CONTROL

While listening to music, turn the Volume / Track Control Knob quickly to the right or left to skip to the next track or previous track.

To increase or decrease volume, turn and hold the Volume / Track Control Knob to the left or right. The volume will slowly increase or decrease. Release the knob when the volume reaches an ideal volume.

If you cannot hear music coming from the speaker, you may need to increase volume from your mobile phone or tablet connected to the speaker, or recharge your speaker.

ANSWERING CALLS

While listening to music, if a call comes in, press the Answer Call Button quickly to pause music and answer the call.

To end the call and return to playing music, press the Answer Call button again.

To play or pause music while streaming, you can press the Play / Pause button accordingly.

CHARGING THE SPEAKER

The speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the speaker.

1. Connect the USB cable to a computer USB port or a certified wall charger that does not exceed 1 Amp.
2. Connect and the micro USB plug to the Charging Port of the speaker.
3. The red LED light will illuminate while the speaker is charging.
4. When the battery is fully charged, the LED light will turn off automatically.
5. Disconnect the speaker at this point. The speaker will then be ready for use.

When the battery is low, the LED will flash red ever 30 seconds and issue a warning beep. When this happens, charge your headset.

BATTERY SAFETY INFORMATION

The speaker comes with a built-in rechargeable battery. Do not disassemble the speaker to remove the battery or attempt to separate it from the device.

• When charging the speaker, please use the enclosed USB charging cable or otherwise ensure that the battery charging conditions are met.

• Do not connect or attach the speaker or the battery to a power supply plug or directly to a car's cigarette lighter.

• Do not place the speaker or batteries near a fire, or into direct sunlight. Heating the device and/or the battery can cause additional heating, breaking, or ignition of the battery inside the device.

• Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite.

• Do not attempt to modify, change, or replace your battery.

• Do not use your device if the battery begins to emit odor, overheats, or begins to leak.

• Do not touch any leaking materials or breathe fumes emitted.

• Do not allow children and animals to touch the battery.

• The battery contains dangerous substances, do not open the battery, or insert anything into the battery.

• Please only use the charger provided by Hype®.

• Do not attempt to charge the device if the battery has discharge or emits any substances. In that case, immediately distance yourself from the battery in case of fire or explosion.

• Lithium-ion batteries are considered to be hazardous materials. Please follow all local, state and federal laws in regards to recycling, handling and disposing of Lithium-ion batteries.

WASTE DISPOSAL

To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

CARE AND MAINTENANCE

- Do not expose the unit to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.

- Do not use abrasive cleaning solvents to clean the unit.

- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.

- Do not dispose of the unit in fire as they may explode or combust.

- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.

- Do not let the unit fall from high places, as doing so may damage the internal circuitry.

- Do not attempt to disassemble the unit.

In the event that the unit does not function properly, return it to the store where it was purchased.

SPECIFICATIONS

Bluetooth:	V4.1+ EDR
Play Time:	Up to 2 Hours
AUX Input:	3.5mm AUX Cable(Cable Included)
Operation Range:	Up to 33ft
Frequency:	100HZ-20KHZ
Battery:	Built-in Lithium-Polymer
Charge Time:	Up to 2 Hours
Charging Interface:	Micro USB (Cable Included)

WARRANTY INFORMATION

The condition of this warranty and our responsibilities under this warranty are as follows:

Supplier's warranty is non-transferable. And this warranty is limited to the original purchaser only.

* You must be able to prove the date of original purchase of the unit with a dated receipt.

* The warranty is not applicable if the product has been subject to physical abuse, improper installation, modification or repair by unauthorized third party.

* The responsibility of supplier's products shall be limited to the repair or replacement of the product as its sole discretion.

* Specifically exempt from any warranty are limited-life consumable components subject to normal wear and tear such as batteries, decalors and other accessories.

* A supplier will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized repair, modification or disassembly.

* Modification and repair of the unit should be done by authorized and qualified service personnel. Center or returned to the manufacturer.

* This warranty gives you specific legal rights, and you may also have other rights which vary under local laws.

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

We offer a warranty on our products in accordance with the following conditions:

1) Hype® products are covered by a 12 month warranty. We will resolve damages or defects on Hype® products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.

2) The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.

3) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. Hype® reserves the right to exchange the product for a replacement product of equal value if the product sent in cannot be repaired within a reasonable time or at a reasonable cost. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.

4) The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our product.

5) Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.

6) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to

usage restrictions, data loss, and loss of earnings or interruption to business.

Asserting a warranty claim:

1) To make use of the warranty service for hardware issues, you must contact the Hype® Service Center by email at support@dglusa.com

2) Hype® will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and will be asked to send the product to Hype®.

IMPORTANT: Hype® will only accept parcels that have an RMA number.

Please observe the following when sending the product:

- 1) Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the product (cables, chargers, manuals, etc.) unless the Hype® Service Center specifies otherwise.
- 2) Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
- 3) You must enclose a copy of the sales slip as proof of purchase.
- 4) Once Hype® has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

Service outside of warranty

Hype® can refuse any service claim made that is not covered by the warranty.

If Hype® agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs. Hype® will not accept any packages that have not first been approved by Hype® by means of an RMA (Return Material Authorization).

Please feel free to contact us with questions at: support@dglusa.com

Manufactured for and distributed by:

DGL Group, Ltd
Edison, NJ 08837
Made in China



The Fisher-Price™ logo are trademarks of Mattel. ©2016 Mattel. All rights reserved. Distributed by DGL Group, Ltd. iPad® and iPhone® are registered trademarks of Apple, Inc. All rights reserved. Android® is a registered trademark of Google Inc. Bluetooth® is a registered trademark of SIG, Inc. All rights reserved. Other trademarks and trade names are those of their respective owners.

www.fisherprice.com

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

7

8

9

10

11

12