

#### "BRICK XL" BLUETOOTH WIRELESS SPEAKER



#### INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

#### **Getting Started**

- Remove the speaker from the box.
- . Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

#### Package Contents

- Bluetooth Wireless Speaker
- LISB rechargeable cable with Aux nin
- Instruction Manual

#### Key Features

- Wireless Connectivity using Bluetooth®2.1+EDR Technology
- Use as Hands-Free speaker phone, with a built-in microphone
- Compatible with all Bluetooth enabled devices such as Smart Phones, Tablets, etc.
- . Built-In TF Card Slot to play music from TF Card respectively
- Wireless Streaming Range 26 to 33 Feet

#### SAFFTY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any ot-
- Do not operate the unit if it has been exposed to water, moisture or any other liguids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- . Do not use the unit with wet hands.
- . Do not put objects into any of the openings
- Keep the unit free from dust, lint etc.
- . Do not use this unit for anything other than its intended use.
- . Keen the unit out of reach of children
- This appliance is not a toy.
- Do not use the handset at excessive levels as damage to hearing may occur.
- · Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place such as supshine fire or the like

#### Description of Parts (Front & Ton View)





Description of Parts (Rear View)

# INSTRUCTIONS FOR USE

## Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, device would turn OFF automatically. Please recharge the battery every time it drains out. Plug the Micro USB end of the included USB rechargeable cable with Aux pin into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. It takes up to 3 hours to fully charge the device. Once the device is fully charged, LED

## Turning ON/OFF the Speaker

Refore Turning ON the device please ensure that the unit is fully charged To Turn ON the device – Slide the On/Off button to "ON" position. To Turn OFF the device - Slide the On/Off Button to "OFF" position

#### Connect using Bluetooth Technology (manually)

- . Turn On the Speaker. You would hear a start-up tone, and Blue LED light would flash rapidly, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet).
- Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "SL BRICK" Pair it with this device.
- If required, enter the password "0000" to pair with the device
- . Wait for few seconds and you will hear "Beep" sound from the speaker, indicating pairing has been successful.

• You can now stream wireless music on your speaker through your source device.

## Talking using the Bluetooth Speaker

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the helow functions

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the MFB once to answer an incoming call.
Reject incoming call	Incoming Call	Long press the MFB button
End Call	Incoming Call	After your phone conversation, short press the MFB button
Increase Volume	During a call	Press and hold the + button to increase the volume
Decrease Volume	During a call	Press and hold the - button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the MFB button twice

## Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from

,		
Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button to increase the volume
Decrease Volume	Playing music	Press and hold the - button to increase the volume
Pause	Playing music	Short press the MFB button will resume the music
Play	Pausing	Short press the MFB button will resume the music
Previous track	Playing music	Short press the - button will return you to the previous track
Next track	Playing music	Short press the + button will take you to the next track

(Note: The above functions only can be used in Bluetooth mode only. An indication tone will alert you when the volume is adjusted to the maximum level. In Aux mode besides the volume increase/decrease, you will need to control through your source device.)

# Stream music from TF Card

- . Turn ON the device.
- Insert the TF Card preloaded with songs, into the TF Card Slot of the speaker respectively.
- Speaker would automatically start playing songs from the TF Card
- To Skip Track Forward Short press the + button
- To Skip Track Backwards Short press the button
- . To Pause the Track Short press the MFB button

. To Play the Track - Short press the MFB button Note: TF Card are not included

#### Specifications

- Bluetooth® Version: 2 1+EDR
- Wireless Streaming Range Distance: 26 to 33 Feet
  Power Input: DC 5V
- Built-In Rechargeable Battery: 300mAh . Built-in 3.7V rechargeable Lithium battery
- Charging Time: Up to 3 Hours
- Play time: about 60 mins (max volume), about 2 hours (50% volume)
- (Note: Battery life & charging time may vary based on usage & types of devices used.)

#### Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years. . Do not expose the unit to liquid, moisture or humidity to avoid the product's inte-

- rnal circuit being affected. . Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- . Don't dispose of the unit in fire as it will result in an explosion
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged. Don't attempt to disassemble the unit as it may get damaged if you are not profes-

# Limited Warranty:

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All the materials and workmanship are warranted to the original consumer purchaser for a period of one (1) year from the original purchase

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of the defects in material or workmanship. This warranty is effective only if the product is purchased and operated in INDIA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modifi-ed or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with sale of our products.

WARRANTY PERFORMANCE: During the above one (1) year warranty period, a product with defect will be either repaired or replaced with a reconditioned compa-rable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the warranty period or thirty (30) days which ever is longer.

WARRANTY LIMIT: The maximum liability of the company shall not exceed the actual purchase price paid by the purchaser

SERVICE AND REPAIR: If the service is required for the product, the purchaser should contact Acetron Enterprise Pvt Ltd Customer Service at support@acetron.in or by calling +91 22 65340119.

Disputes if any shall be subject to Mumbai Jurisdiction only

# **USB Port:**

- 1. USB Port is Insert the U disk can play the music inside only. Not transfer data via the connection to the computer.
- 2. Micro USB is connecting to DC 5V USB cable to charge the speaker only. Not transfer data via the connection to the computer.

# **FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.