

English:







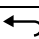 
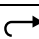 




OPERATION

Plug the USB receiver into the USB port of the devices, such as computers, televisions, TV boxes. It takes about three seconds to install the drive automatically. The extended cable is for television connection, to ensure a more stable connection with the TV

SPECIFICATION

Size	354 (L)*131 (W)*19.5 (H)
Weight	310±20g
Keys	89
Connectivity Technology	Wireless
Keyboard Interface	USB Interface
Working Voltage	3V
Working Current	≤5mA
Touchpad Working Current	≤15mA
Sleep Mode	Shallow sleep(after 20s' idle, wake it up by clicking or touching); Deep sleep(after 15mins' idle, wake it up by clicking)
Working Distance	8M(without barrier)
Lifespan of Keyboard Cap	≥5 million times
Batteries	2 AAA batteries required
Compatibility	Windows OS/ Android OS/Google OS/Mac OS/Vista

FUNCTIONS OF MULTIMEDIA COMBINATION KEYS






Fn+F1		Homepage
Fn+F2		Switch to other applications
Fn+F3		Windows setting
Fn+F4		Search
Fn+F5		Operation center
Fn+F6		Secured data encryption
Fn+F7		Previous page
Fn+F8		Next page
Fn+F9		Music Player
Fn+F10		Previous track
Fn+F11		Play/Pause
Fn+F12		Next track

Combination keys such as Fn+F3、Fn+F4 can function for the Windows 10 system only.








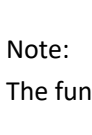 
Other combination keys are available for all Windows systems including Windows 10

In Android Smart TV, functions of combination keys from F1 to F8 are not available

OTHER SPECIAL KEYS

	Left Mouse Button		Volume +
	Volume -		Mute
	Touchpad On/Off		

FUNCTIONS OF TOUCHPAD

	One finger slides	Move the cursor.
	One finger clicks	Click at the place where the cursor stays
	Two fingers slide vertically. Two fingers slide horizontally.	The scrollbar slides vertically. The scrollbar slides horizontally.
	Two fingers move oppositely	Zoom in or zoom out the display area.
	3 fingers swipe up	Show Windows Menu
	3 fingers swipe down	Show Desktop
	3 fingers swipe left	Back
	3 fingers swipe right	Forward

Note:

The function that the scrollbar moves horizontally is only available for the

software supporting it, such as web, wps and etc.

FUNCTIONS OF CURSOR CONTROL KEYS

Fn+	◀	=HOME
Fn+	▶	=END
Fn+	▲	=PgUp
Fn+	▼	=PgDn

CONSIDERATION:

If the keyboard fails to connect, you can try to connect again:

Insert the USB receiver into the USB port of the computer or the TV

Ensure that the keyboard is filled with 2 AAA batteries.

Press and hold ESC and k together until the red indicator light flashes and

it begins to connect. The distance between the receiver and the touchpad should

be within 20 cm. The keyboard starts to serve when the red indicator light stops

flashing and the connection is completed.

Connection Current: <30mA

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.