

Content

1	General Information.....	4
1.1	Profile4
1.2	Safety Information4
1.3	Safety warning and Attentions4
2	Your phone.....	8
2.1	Phone overview.....	.8
2.2	Functions of Keys8
2.3	Technical specifications9
3	Getting started.....	10
3.1	Installing the SIM Cards and the Battery10
3.2	Installing Memory Card.....	.12
3.3	Charging the Battery13
3.4	Powering On/Off the Mobile Phone15
3.5	Linking to the Network.....	.16
3.6	Dialing Calls16

3.7	Using the Headset	17
4	Input method	17
4.1	Icons for Input Methods.....	18
4.2	To Shift Entry Methods.....	18
4.3	Numeric Input	18
4.4	English input and numeric input:	18
4.5	Inserting a Symbol	20
5	Using the menu.....	20
5.1	STK.....	20
5.2	Contacts	21
5.3	Call logs	21
5.4	Tools.....	22
5.5	Message	23
5.6	Media	24
5.7	My files	26
5.8	Browser.....	26
5.9	Settings	26

Profiles.....	26
6 Appendix.....	31
6.1 Appendix 1: Troubleshooting	31

1 General Information

1.1 Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

1.2 Safety Information

If your phone has lost or been stolen, notify the telecommunication office the SIM card is disabled (network support is required). This can avoid economic loss caused by unauthorized use.

Please take measures as following to avoid your phone being unauthorized use:

- Set PIN code of SIM card
- Set phone password

1.3 Safety warning and Attentions

Safety warning

› ROAD SAFETY COMES FIRST

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while

driving. In some countries, dialing or receiving calls while driving is illegal!

➤ **SWITCH OFF IN AIRCRAFT**

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky. Please make sure that your mobile phone is powered off in flight.

➤ **SWITCH OFF BEFORE ENTERING RISKY AREAS**

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

➤ **OBSERVE ALL SPECIAL REGULATIONS**

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

➤ **INTERFERENCE**

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

➤ **QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile

phone on your own may bring great danger and violates the warranty rules.

› **ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries.

› **USE SENSIBLY**

Use only in a normal and proper manner.

› **EMERGENCY CALLS**

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

Note: Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications such as first aid. Please consult the local network operator.

Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

- › Keep the mobile phone and all its fittings beyond children's reach.
- › Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- › Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.
- › Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of

electronic circuits and damage the battery and some plastic parts.

- Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

2 Your phone

2.1 Phone overview

2.2 Functions of Keys

The mobile phone provides the following keys:

- ◆ Dial key
Press it to originate a call by entering the called number or selecting a contact from the contacts; or press it to receive an incoming call; or press it in standby state to show the latest call records
- ◆ End key
Press it to end a call being dialed or end an ongoing call; or press it to exit the menu and return to the standby state; or hold it for two or three seconds to power on or off the mobile phone.
- ◆ Direction key
Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate. In standby state, press a direction key to enter the specified function page.
- ◆ OK key
Press it to confirm your selection.
- ◆ Left and right soft key
The bottom line on the screen displays the functions of the Left and Right soft key.
- ◆ **Number keys, * key and # key**
Press number keys 0 through 9 in input or edit state can input numbers and characters;

Note: Holding number key 1 on standby will call the voice mailbox service center. The voice mailbox center number, however, must be preset.

The # key and the * key represent different functions in different states or different function menus.

Hold the # key up to 2s in standby state to switch between silent and normal mode.

Press the # key in edit state to switch between input methods.

In edit interface, you can press * key to select a symbol.

Quickly and continuously press the * key can input "P","W" or "+". "P" and "W" are used for calling the extension; "+" is used for dialing an international call.

2.3 Technical specifications

Phone

Dimensions: 92.6*46.5*18.3MM

Weight:0.072KG

Lithium battery

Rated capacity: 650mAh

Continuous standby duration:5 days

Continuous conversation duration: 4-5 hours

Please refer to their labels for other data related to the battery and the charger.

3 Getting started

3.1 Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.

Handling prudently while installing or taking out SIM card, as friction or bending may damage SIM card.

Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.

Installation

- ◆ Hold the End key for a while to power off the mobile phone.
- ◆ Push the back cover above the battery downward and remove it.
- ◆ Take the battery away.
- ◆ Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing download, till the SIM card cannot be further pushed in.
- ◆ With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

Using code

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK key.

◆ Phone lock code

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 1122 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

◆ PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.
- Then input the new PIN and press the OK key.
- Input the new PIN again and then press the OK key.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

Note: The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.

◆ **PUK**

The PUK code (Personal Unlocking Key) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

◆ **PIN2**

The PIN2 code (4 to 8 digits), supplied with SIM card, is required to access some functions such as “call costs setup” and “fixed dialing setup”. Please contact the network operator to verify whether your SIM card supports these functions. If you input wrong PIN2 for three times, the PIN2 will be locked. To unlock the PIN2, input the correct PUK2 as follows:

- Input the correct PUK2 according to the screen prompt to unlock the PIN2.
- Then input the new PIN2 and press the OK key.
- Input the new PIN2 again and then press the OK key.

◆ **PUK2**

The PUK2 code (Personal Unlocking Key2), supplied with SIM card by the vendor. If not, contact the network operator. If you input wrong PUK2 for ten times, the PIN2 will be invalid and the corresponding functions cannot be used. Please contact the network operator to replace the SIM card.

3.2 Installing Memory Card

The Memory Card is a pluggable mobile storage card inside the mobile phone.

To install the Memory Card, Insert the Memory card into the Memory card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing download, till the

Memory card cannot be further pushed in.

Note: The Memory Card is a miniature object. Keep it out of the reach of children for fear that children swallow it!

3.3 Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked. A new battery will have maximum performance after the first three full charge/discharge cycles.

Battery level indication:

- ◆ Your mobile phone can monitor and display the battery state.
- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- ◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

Using a travel adapter:

- ◆ Install the battery into the mobile phone before charging the battery.
- ◆ Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- ◆ Insert the plug of the travel charger to an appropriate power outlet.
- ◆ During the charging, the battery level grids in the battery icon keep flickering till the battery is fully

charged.

- ◆ It is normal of the battery to become hot during the charging period.
- ◆ The battery icon does no longer flicker when the charging process ends.

Note:

Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.

Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.

Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- ◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- ◆ Power off the mobile phone before removing the battery.
- ◆ The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery is in charging status.

- ◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- ◆ Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.
- ◆ The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

Note: To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.

Warning: Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!

3.4 Powering On/Off the Mobile Phone

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to input the phone lock code. The original code is 0000.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN. The PIN is

provided by the network operator for new opening SIM card.

Access the idle screen.

To power off the mobile phone, hold the End key for a while.

3.5 Linking to the Network

After the SIM card and the mobile phone are unlocked successfully, the mobile phone would search for an available network automatically. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

3.6 Dialing Calls

In the idle screen, press number keys to input the area code and the telephone number, and then press the Dial key to dial a call. To end the call, press the End key.

◆ Dialing a call to a number in the contacts

Enter the contacts and use the up or down direction keys to find the telephone number you want to call.

Press the Dial key .Choose SIM1 or SIM2 card and press OK to dial.

Redialing the last number

In the idle screen, press the dial key to show the recent calls.

Press the up or down direction keys to select a number you want to dial and then press the Dial key.

◆ Answering incoming calls

Press the Dial key or the Left soft key to answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the Right soft key once or the End key.

Note: If the caller can be identified, the mobile phone will present the calling number. If the calling number exists in the contacts, the mobile phone will present both the name and the phone number of the caller. If the caller cannot be identified, the mobile phone will present the calling number only. You can answer an incoming call when using a function list or browsing the phonebook.

3.7 Using the Headset

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

4 Input method

This mobile phone provides multiple input methods, including numeric input, English input in both

upper and lower case, Spain and Smart Spain input method, Portugal and Smart Portugal input method, you can use these input methods when editing the phonebook, short messages, the memorandum, files and greeting text.

4.1 Icons for Input Methods

After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

English and Smart English input: sabc ,sABC, Abc, abc, ABC .”

Portugal and Smart Portugal input: “sPt, spt, sPT, Pt, pt, PT.

Spain and Smart Spain input : “sSp, ssp, sSp, sSp, sSp, SSP.”

.Numeric input: “123”

4.2 To Shift Entry Methods

Press the # key to switch between input methods.

4.3 Numeric Input

You can input numbers with the numeric input method. Press a number key to input the corresponding number.

4.4 English input and numeric input:

The keyboards for English input and numeric input are defined in the following table:

Key	Character or Function	Remarks
Number key 1	., ? ! 1:;'-\@/%&()[]{}<>"\$+=#*^_~	

Number key 2	ABCabc2	
Number key 3	DEFdef3	
Number key 4	GHIghi4	
Number key 5	JKLjkl5	
Number key 6	MNOmno6	
Number key 7	PQRSpqrs7	
Number key 8	TUVtuv8	
Number key 9	WXYZwxyz9	
Number key 0	0	
* key	Press it to input a symbol	
# key	Press it to switch between input methods	
Left direction key	Press it to move to the left	
Right direction key	Press it to move to the right	
Left soft key	Equivalent to OK or Option	
Right soft key	Equivalent to Back or Del.	
End key	Press it to return to the standby interface	

English input:

- Each key is used to represent multiple characters. Quickly and continuously press a key till the character you want appears. Input the next character after the cursor moves.
- To input a blank, switch to the English input mode (in upper or lower case) and then press number key **0**.
- To clear wrong inputs, press the **Right soft** key.

4.5 Inserting a Symbol

Press the * key to enter the **Symbols** interface, use direction keys to select a symbol you want.

5 Using the menu

5.1 STK

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when

supported by network and SIM card.

5.2 Contacts

The mobile phone can store up to 300 telephone numbers. The number of telephone numbers that an SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook.

After selecting a telephone number in the contacts, select **Options** to perform the following operations:

- ◆ **Add contacts:** add new contact to phone, SIM1 /SIM2 card.
- ◆ **Write message:** Send SMS message or MMS message to a selected contact.
- ◆ **Edit before dialing:** Edit the telephone number before dialing.
- ◆ **Delete:** Delete the selected telephone number from the contacts.
- ◆ **Delete multiple:** Delete multiple telephone number from the phonebook.
- ◆ **Copy:** Duplicate the telephone number from the mobile phone to phone, SIM1 /SIM2 card.
- ◆ **Import/Export:** You can import/export contacts through this function.
- ◆ **Send vCard:** Select and send contacts information to other recipients via SMS/mms message or Bluetooth.
- ◆ **Settings:** To view speed dial, own number, service number and memory status through this function.

5.3 Call logs

You can use the function of access missed calls, dialed calls, received calls, rejected calls and so on;

5.4 Tools

Alarm

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing and the time can be set.

Calculator

The calculator can add, subtract, multiply and divide. To use the calculator:

- ◆ Press the up, down, left and right key to select $+$, $-$, \times , \div , respectively.
- ◆ Press left soft key to clear the figure.
- ◆ Press OK key to get the result.

Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

Bluetooth

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

5.5 **Message**

If the short message memory is full, a blinking message icon appears on the top of the screen. To normally receive short messages, you need to delete some of the existing short messages.

If the destination user has received the short message you sent and the short message delivery report function is activated, the phone will give off a message report alert tone.

Write message

Access this menu to create a text message or a multimedia message.

Inbox

Received Messages are listed in this menu.

Drafts

Draft messages are listed in this menu.

Outbox

The messages which are sent failed are stored in the Outbox.

Sent box

Sent messages are listed in this menu.

Broadcast message

This network service enables you to receive a variety of text messages, such as broadcast messages about weather forecast or road conditions. At present, few networks provide this service. Please consult the network operator.

Voice mail server

You can set voice mail through this function.

Templates

You can create pre-defined messages in this interface.

Settings

You can set parameters of SMS, MMS and Browser info through this function.

5.6 Media

Camera

The phone is provided with a camera, which supports the photographing functions. Roll the phone to align the camera to the picture and then press OK key to capture photos. Pictures will be saved in the file system of the phone or the memory card. In the camera interface, pressing the Left soft key can access Options. And you can switch to video mode, This function enables you to record dynamic pictures.

Music

You can use this function to play audio files. By pressing the direction key can you control the playing process of audio player: play/pause (OK key) , switch to last song/next song (press left or right direction key) , play list (left soft key), fast forward (press and hold right direction key) and rewind (press and hold left direction key). In audio player interface, you can press up and down direction key to tune volume.

FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. Before using it, you should insert the earphone as antenna.

Image

You can view images through this function.

Recorder

The phone support WAV and AMR. The AMR takes the compression algorithm. So in the same memory condition, it has longer recording time than WAV.

Video

This function enables you to play video files. By pressing the direction key can you control the playing process of video player: play/pause (OK key) , switch to last video/next video (press left or right up or down direction key), fast forward (press and hold right direction key) and rewind (press and hold left

direction key). In video player interface, you can press up or down direction key to tune volume.

5.7 My files

The phone provides a certain space for users to manage files and supports the T-Flash card. The capacity of the T-Flash card is selectable. You can use the file manager to conveniently manage various directories and files on the phone and the T-Flash card.

Choose **File manager** to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. When the mobile phone is powered on for the first time or when you have not changed the directory, the root directory contains the default folders only.

You can use this function to format all the data in the memory. The system will re-create a default folder. The formatted data cannot be recovered. Therefore, think twice before using the formatting function.

5.8 Browser

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way.

Note: Consulting the local network operator for related fee and specific setup.

5.9 Settings

Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user

profiles fall into four scenarios: **Normal, Silent, Meeting and Flight mode.**

When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode.

Phone Settings

- ◆ **Display:** Users can access this item to set wallpaper, idle display, contrast, backlight and keypad backlight time etc.
- ◆ **Time & date:** set time, set date, set time format, set date display type and update time settings.

Note: If you remove the battery from the mobile phone or if the battery energy was exhausted a long time ago, you may need to reset the date and time when re-inserting the battery or powering on the mobile phone after recharging.

- ◆ **Auto power on/off:** Set the time when the mobile phone will be automatically powered on or off. Alert: Before entering an area where the use of mobile phones is forbidden, make sure that the scheduled power-on function is deactivated to avoid accidents.
- ◆ **Shortcut settings:** Customize the shortcut functions of the Left, and Right direction keys. In the standby interface, you can press a direction key to directly enter the function menu corresponding to that direction key.
- ◆ **Language settings:** Select the display and input language for the mobile phone.

Call Settings

- ◆ **Dual-SIM:** You can set standby mode, reply by original SIM and set SIM name through this function.
- ◆ **Call divert:** this network function enables you to forward incoming calls to another number you have

previously specified.

- ◆ **Call waiting:** After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.
- ◆ **Call barring:** The call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.
- ◆ **Others:** You can set IP shortcut key ,call time minute reminder, auto redial, vibration when connected and auto record voice call through this function..

Network selection

- ◆ **Network selection:** Set Network selection mode to Automatic or Manual. Automatic is recommended. When Network selection mode is set to Automatic, the mobile phone will prefer the network where the SIM card is registered. When Network selection mode is set to Manual, you need to select the network operator's network where the SIM card is registered.

Connections

Contact the network operator to obtain the following network services:

- ◆ **Network account:** You can manage data account through this function.
- ◆ **GPRS Service:** You can select to turn on/off this function.
- ◆ **Data Roaming:** Select on/off data roaming.
- ◆ **Data connection settings:** The default setting is connecting when needed.

Security

This function provides you with related settings about safety use

- ◆ **PIN:** To activate PIN lock, you need to input the correct PIN code. If you set PIN lock to On, you need to input the PIN each time you power on the mobile phone. In the case you input a wrong PIN for three consecutive times; you need to input the PIN Unblocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.
- ◆ **Modify PIN2:** To change PIN2 code of PIN code.
- ◆ **Phone locked:** The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The initial password is 0000.
- ◆ **Modify the cell phone password:** to change phone password.
- ◆ **Privacy:** You can set password to protect your privacy, the initial password is 0000.
- ◆ **Lock screen by end-key:** You can select to turn on/off this function.
- ◆ **Fixed dial number:** You can select to turn on/off this function and set fixed dialing number through this function.

- ◆ **Blacklist:** The number which you add to blacklist cannot call you.

Restore factory settings

Use this function to restore factory settings. The preset password is 0000.

6 Appendix

6.1 Appendix 1: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth

Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high-traffic hours

The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider

	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

FCC Caution.

§ 15. 19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

§ 15. 21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15. 105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:



This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: F1015D (FCC ID: 2AAZ8-F1015D) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the **ear is** 1.41W/kg and when properly worn on the body is 1.16W/kg. This device was tested for typical body-worn operations with the back of the handset kept **1.5cm** from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a **1.5cm** separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **1.5 cm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna