



VivaSound™ Portable Bluetooth® Speaker

Model: EBK-C151-KUSR

User Manual

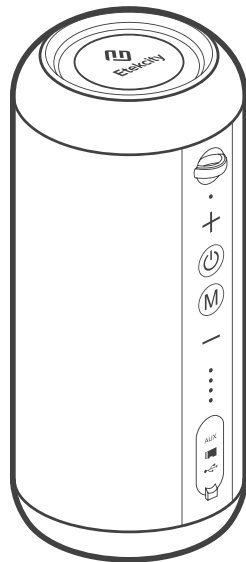 


Table of Contents

Package Contents	2
Specifications	2
Safety Information	3
Functions & Controls	6
Connections	7
Transferring Files onto a Micro SD Card	8
Bluetooth Pairing	8
Using the Bluetooth Speaker	9
True Wireless Stereo (TWS) Pairing	10
Care & Maintenance	10
Troubleshooting	11
Warranty Information	13
Customer Support	15

Package Contents

- 1 x Portable Bluetooth® Speaker
- 1 x USB-C Cable
- 1 x 3.5 mm AUX Cable
- 1 x User Manual

Specifications

Battery	DC 3.7V, 3000mAh Li-ion battery
Charging Time	3.5 hours
Input	DC 5V 1A, USB-C
Power	15W
Playback Time	Up to 10 hours
Drivers	2 x 60 mm full range drivers, 2 x 65 mm passive radiators
Frequency Range	50Hz–18000Hz
Dimensions	8.3 x 3.5 x 3.5 in / 21 x 9 x 9 cm
Weight	2.1 lb / 937 g
Water Resistance Rating	IPX6
Connections	Bluetooth 5.0, AUX input, Micro SD card (up to 32GB)
Supported File Formats	MP3, WMA, WAV, APE, FLAC
Bluetooth Frequency Range	2.402–2.480GHz
Bluetooth Transmit Power	0–10dBm

READ AND SAVE THESE INSTRUCTIONS

Safety Information

Please read and follow all instructions and safety guidelines in this manual.



Warning:
Risk of Electrical Shock

Medical

- The speaker generates magnetic fields, which can interfere with the functioning of medical devices such as pacemakers.
- Always keep a distance of at least 3.9 in / 10 cm between a medical device and the speaker. Please consult your physician if you have any questions.

General Use

- **Only** use the speaker as described in this user manual. Any other use may result in property damage or risk of injury.
- **Do not** use the speaker in environments where there is a risk of explosion, such as areas of excessive humidity or power surges.
- **Only** use the speaker where wireless transmissions are permitted.
- **Do not** use the speaker on or near any heat sources such as radiators, heat vents, stoves, or other apparatuses (including amplifiers) that produce heat.
- **Do not** allow the charging cable to come into contact with hot surfaces.

- Keep the charging cable out of areas where people walk often. Place the cable where it will not be tripped over.
- The speaker is intended to be used only with the charging cable provided by the manufacturer.
- Unplug the speaker during lightning storms or when unused for long periods of time.
- To maintain the safety of the speaker, **only** a qualified repair person using identical replacement parts should service the speaker.
- To disconnect the speaker from AC power, disconnect the charging cable from the wall outlet.
- This speaker is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the speaker by a person responsible for their safety.
- The speaker is not a toy. **Do not** allow children to play with the speaker.
- **Do not** use the speaker if it is damaged, not working, or if the charging cable is damaged. Contact **Customer Support** (see page 15).
- Handle with care. Not for commercial use. Household use **only**.

Battery Warnings

- Improper handling of the speaker can cause the rechargeable battery to explode or cause a fire.
- **Do not** subject the speaker to excessive warmth or heat such as direct sunlight, fire or similar.
- Leaked battery fluid can cause chemical burns if it touches skin or other parts of the body. If you notice that battery fluid has leaked, **do not** allow it to touch your skin, eyes or mucous membranes.
- If you have touched battery fluid, immediately rinse the affected areas with plenty of clean water and promptly contact a physician.
- Use protective gloves to handle a leaking battery and wipe off any battery fluid with a dry, absorbent cloth.



Warning: Risk of Hearing Loss

- Listening at a high volume for prolonged periods of time poses a risk of hearing loss. Avoid listening at a high volume for a prolonged period of time.
- Maintain adequate distance from the speaker and never hold the speaker to your ear.
- Set the volume on the playback device to a low level before starting playback on the speaker. If you set the playback device to full volume, very high noise pressure may cause organ damage and adverse psychological effects. Children and pets are particularly at risk in this respect.

Water Resistance Rating

The speaker features IPX6 water resistance, which can resist high-pressure water streams but cannot be submerged in water. You can use this speaker at any place where water exposure is possible but there is no chance of completely submerging in water.

- To ensure that the speaker is water resistant, remove all cable connections and tightly close the rubber cover.
- Exposing the speaker to liquids without closing the rubber cover may result in permanent damage to the speaker.
- **Do not** expose the speaker to water while charging, as doing so may result in permanent damage to the speaker or power source.

Functions & Controls

A. LED Indicator Light

- Blinking blue light indicates Bluetooth pairing mode.
- Solid blue light indicates Bluetooth is connected.
- Rapid blinking blue light indicates the speaker is at minimum or maximum volume.

B. +

- Press to increase volume.
- Press and hold to go to the next track.

C. ⏻

- Press and hold for 2 seconds to turn speaker on/off.
- Press to play/pause track.
- Press and hold for 8 seconds to restart the speaker.

D. M

- Press to cycle through connections (see [Connections](#), page 7).
- Press and hold to enter Bluetooth pairing mode (see [Bluetooth Pairing](#), page 8).
- Press to accept or end a call.
- Press and hold to reject a call.

E. -

- Press to decrease volume.
- Press and hold to go to the previous track.

F. Microphone


- Receives sound input during calls.

G. Battery Indicator Lights

- Each blue light represents 25% charge.
- All 4 blue lights will turn solid when the speaker is fully charged.

H. Rubber Cover

- Protects the connections from water and moisture.
- Keep the rubber cover closed to preserve the IPX6 water resistance rating.

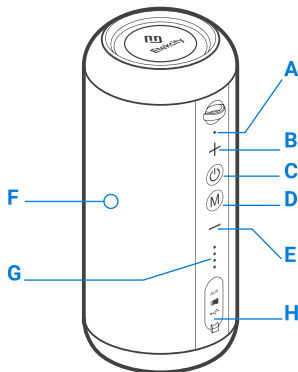

Connections

A. AUX Input

- Plug in the 3.5 mm AUX cable to play music with a wired connection.
- The speaker will automatically switch to AUX when the cable is plugged in.


B. USB-C Port

- Charge the speaker by connecting the USB-C cable to a DC 5V adapter and plugging into an outlet. You can also charge by plugging the cable into a powered USB outlet.
- Connect the USB-C cable to a computer to transfer audio files onto a Micro SD card.



C. Micro SD Card Slot

- Insert a Micro SD card (up to 32GB) with audio files (see [Transferring Files onto a Micro SD Card](#), page 8). If the speaker is on, it will automatically begin to play the files.
- Press **+** and **⏻** at the same time to toggle between normal playback and shuffle.
- Supported audio file formats: MP3, WMA, WAV, APE, and FLAC.

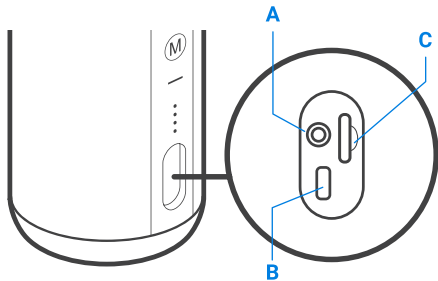Note: Press **M** to cycle through Bluetooth, Micro SD card, and AUX playback. A Micro SD card or AUX cable must be inserted in order to select those playback options.




Transferring Files onto a Micro SD Card

1. Press and hold the  to turn the speaker off. Insert a Micro SD card into the speaker.
2. Connect the speaker to your computer using the USB-C cable.
3. Press the  to access the Micro SD card on your computer.
4. Transfer audio files from your computer onto the card.

Supported audio file formats: MP3, WMA, WAV, APE, and FLAC.


Note: You can also transfer audio files onto a Micro SD card using other methods, such as a Micro SD card adapter.

Bluetooth Pairing


1. Press and hold  to turn the speaker on.
2. The LED indicator light will blink when the speaker is in pairing mode. To manually put the speaker in pairing mode, press and hold **M**.
3. Enable the Bluetooth on your phone or audio player.
4. Navigate to Bluetooth settings and scan for discoverable devices.
5. Connect to the speaker named:
Etekcity VivaSound

Using the Bluetooth Speaker

Note: Fully charge the speaker before first use. When fully charged, the 4 battery indicator lights will turn solid.

1. Press and hold  to turn the speaker on.
2. The speaker will automatically connect to the last paired device. If the last paired device is not available, it will go into Bluetooth pairing mode.
3. Play music or audio files from the connected device and it will play on the speaker.
4. Optionally, play music or audio files from an AUX cable or Micro SD card (see **Connections**, page 7).
5. Adjust volume, navigate tracks, and accept or reject phone calls using the controls (see **Functions & Controls**, page 6).

Note:

- To manually put the speaker in pairing mode, press and hold **M**.
- Optionally, press the  while in pairing mode to reconnect to the last paired device.

True Wireless Stereo (TWS) Pairing

With TWS pairing, the speaker can connect to another Etekcity VivaSound™ Portable Bluetooth® Speaker to provide left and right stereo sound.

1. Power on both speakers.
2. Place both speakers in Bluetooth pairing mode.
3. On one speaker, press **+** and **-** at the same time. This will become the left speaker.
4. A stereo link will automatically be established with the other speaker, making it the right speaker.
5. Connect your phone or audio player to the left speaker and begin playback.
6. To disconnect the speakers, press **+** and **-** at the same time on either speaker. Then, repeat with the other speaker.



Note:

- *The TWS pairing will save and reconnect when the speakers are turned on again.*
- *While connected, the LED indicator light on the left speaker will show all status changes, while the LED indicator light on the right speaker will stay solid.*
- *Use either speaker to adjust controls such as volume and playback.*

Care & Maintenance

- Store speaker in a cool, dry place away from direct sunlight.
- To preserve the health of the battery, fully charge the speaker approximately every 6 months, even if it is not in regular use.
- Clean the surface of the speaker with a soft, dry cloth.

Troubleshooting

Problem	Possible Solution
Speaker has trouble connecting.	Press and hold  for 8 seconds to restart the speaker. If a passcode is required, enter "0000".
Bluetooth connection is unstable.	Make sure your playback device is within 32.8 ft / 10 m of the speaker.
	Make sure there are no walls or barriers between your playback device and the speaker.
Micro SD card does not play audio.	The Micro SD card must be formatted FAT32.
	Make sure the audio files are a supported audio format: MP3, WMA, WAV, APE, or FLAC.
Speaker has no sound.	Adjust the volume on the playback device and speaker.
	Check to see if the audio is paused or muted.
Speaker does not turn on.	Check to see if the battery power is low. If necessary, recharge the speaker.
Speaker does not respond.	Press and hold  for 8 seconds to restart the speaker. If a passcode is required, enter "0000".

If you still need help, please contact [Customer Support](#) (see 15).

Federal Communication Commission Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

ETEK CITY CORPORATION hereby declares that this equipment is in compliance with the FCC Part 15 Subpart B

The declaration of conformity may be consulted in the support section of our Web site, accessible from www.etekcity.com

Attributions

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Etekcity Corporation is under license. Other trademarks and trade names are those of their respective owners

Warranty Information

Product Name	VivaSound™ Portable Bluetooth® Speaker
Model	EBK-C151-KUSR
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Order ID	
Date of Purchase	

Terms & Policy

Etekcitey Corporation (“Etekcitey”) warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Etekcitey agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcitey;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Etekcitey will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

Warranty Information (cont.)

This warranty does not extend to products purchased from unauthorized sellers. Etekcity's warranty extends only to products purchased from authorized sellers that are subject to Etekcity's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via **support@etekcity.com**. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Etekcity product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at www.etekcity.com/warranty.

This warranty is made by:

Etekcity Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Etekcity Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com

Toll-Free: (855) 686-3835

Support Hours

Mon–Fri,
9:00 am–5:00 pm PST/PDT

**Please have your invoice and order ID ready before contacting Customer Support.*



Connect with us @Etekcitey

