



White Noise Machine with Bluetooth® Speaker

Model No.: EWN-S12



Questions or Concerns? support@etekcity.com • (855) 686-3835

Thank you for purchasing the
White Noise Machine by Etekcity.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **support@etekcity.com**. We hope you enjoy your new white noise machine!

BECOME AN ETEKCITIZEN

Get exclusive deals, giveaways, and product registration. Better products for better living.
Find us at **etekcity.com**

Table of Contents

Package Contents	3
Specifications	4
Function Diagram	5
Charging the Battery	6
• Low-battery Indication	6
Operation	7
• Turn the Machine On/Off	7
• Turn the LED Display On/Off	7
• Set the Clock	7
• Connect to a Bluetooth Device	8
• Play Music via the Bluetooth Speaker	9
• Play White Noise	9
• Set the Timer	10
Warranty Information	13
Customer Support	16

Package Contents

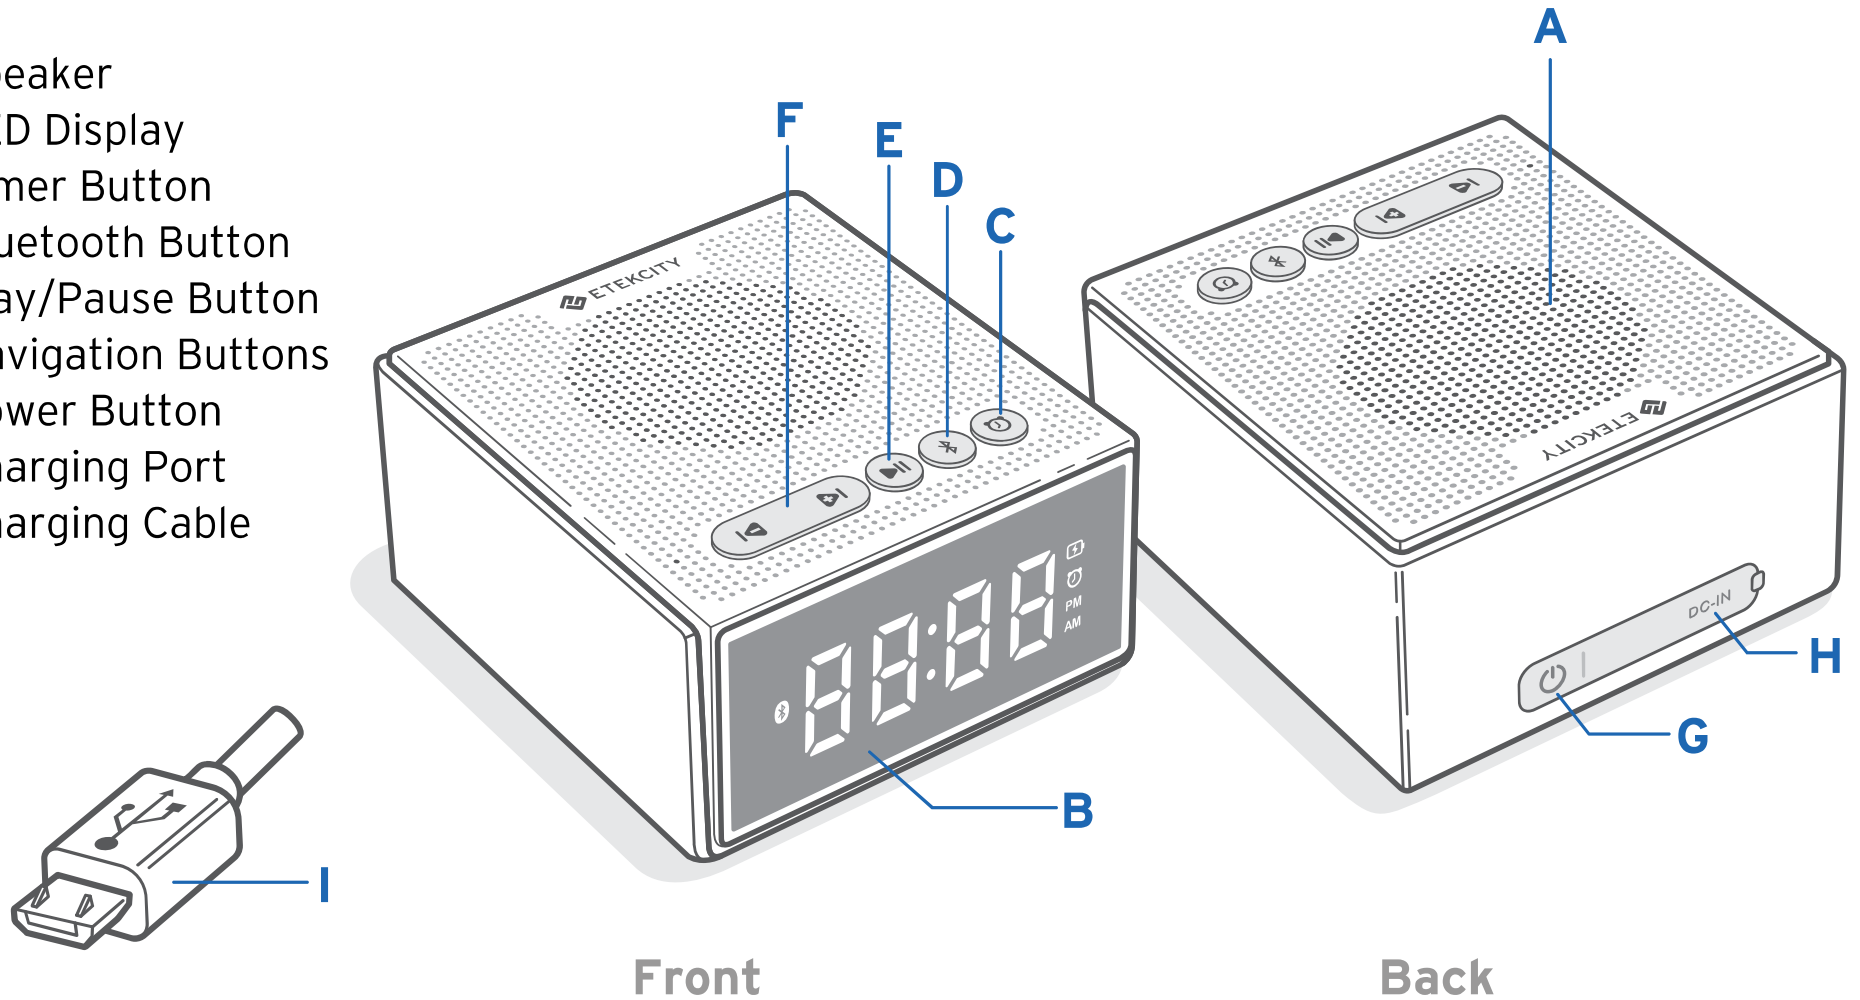
1 x White Noise Machine with Bluetooth Speaker
1 x USB Charging Cable
1 x User Manual

Specifications



Input	DC 5V, 1A
Speaker	4Ω, 8W
Bluetooth	V4.2
Support	A2DP, AVRCP
Power	2200mAh Li-ion 18650 battery
Charging Time	4–5 hours
Clock	12 hour format
Waterproof Level	IPX5

Function Diagram

- A. Speaker
- B. LED Display
- C. Timer Button
- D. Bluetooth Button
- E. Play/Pause Button
- F. Navigation Buttons
- G. Power Button
- H. Charging Port
- I. Charging Cable




Charging the Battery

1. Plug the charging cable into the DC outlet of the white noise machine.
2. Plug the USB cable into a DC 5V adapter and plug into an outlet. You can also plug the cable into a powered USB port.  will appear on the display.
3. When the machine is fully charged,  will disappear.

Note:


- The charging time is about 4-5 hours.
- We recommend fully charging your white noise machine before use.

Low-Battery Indicator


 will flash on the display when it is time to charge the battery.

Operation








Turn the Machine On/Off

- Press  to turn the machine on and off.
- The machine will automatically turn off after an hour of inactivity.



Turn the LED Display On/Off

- Press and hold  for 2 seconds to turn off the LED display.
- Press any button to turn the display back on.



Set the Clock

1. Press and hold  until the hour flashes on the display.
2. Press  or  to adjust the hour.
3. Press  again. The minutes will flash.
4. Press  or  to adjust the minutes.
5. Press  to set the clock.

Connect to a Bluetooth Device



1. Press  to turn on the machine.
2. Press  to enter Bluetooth mode.

Note: This will disable white noise playback until Bluetooth is turned off.



3.  will flash on the display, indicating that the machine is ready to pair.
4. In your mobile device's Bluetooth settings, select **Etekcity EWN-12**. If pairing is successful,  will turn solid.

Note: Press  again to exit Bluetooth mode.






To pair with another Bluetooth device:

1. Unpair the machine by pressing and holding .
2.  will flash on the display, indicating that the machine is ready to be paired again.
3. Follow the steps in **Connect to a Bluetooth Device**.







Play Music via the Bluetooth Speaker

1. Press  to turn the machine on.
2. Press  to turn Bluetooth on.



Note:

- This will disable white noise playback until Bluetooth is turned off.
 - If you have not yet paired a mobile device with the white noise machine, see **Connect to a Bluetooth Device** (page 11).
3. Press  to play or pause music from your mobile device.
 4. Press  or  to adjust the volume.
 5. Press and hold  or  to cycle through music.


Play White Noise

1. Press  to turn the machine on.
2. Press  to play or pause the white noise.
3. Press  or  to adjust the volume.
4. Press and hold  or  to cycle through the 18 white noise tracks.



Set the Timer

1. Press  to turn the machine on.
2. Press  to set the timer.

Note: Timer can be set for 30 min, 60 min, 90 min, 2 hr, or 7 hr.

3.  will appear on the display. The selected time will flash for 5 seconds, then return to the current time.
4. The selected white noise track will begin to play and automatically stops playing when the sleep time expires.

Note:

-  will remain on the display while the timer is on.
- The timer will only work while the machine is playing white noise. The timer does not work in Bluetooth mode.
- Press  while the timer is on to see the remaining time. Press again to adjust the timer.

FCC Statement to the User

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

Warranty Information

Product Name	White Noise Machine
Model Number	EWN-S12
Default Warranty Period	1 year
<i>For your own reference, we strongly recommend that you record your order number and date of purchase.</i>	
Order Number	
Date of Purchase	

Terms & Policy

Etekcitec warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Etekcitec will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etekcitec is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional

safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Etekcitec and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential

losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Additional 1-Year Warranty

You can extend your 1-year warranty by an additional year. Log onto **www.etekcity.com/warranty** and enter your order number (for example, from Amazon or Houzz) to register your new product for the extended warranty.

If you are unable to provide the order number for your product, please type a short note in the order number field along with the date you received your product.

Defective Products & Returns

If your product proves defective within the specified warranty period, please contact Customer Support via **support@etekcity.com** with your order number. **DO NOT** dispose of your product before contacting us. Once Customer Support has approved your request, please return the unit with a copy of the invoice or your order number.

Customer Support

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

Customer Support

Etekcitey Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com

Toll-Free: (855) 686-3835

Support Hours

Monday - Friday

9:00 am - 5:00 pm PST/PDT

**Please have your order confirmation number ready before contacting Customer Support.*

Connect with us @Etekcity





v01.00