

# Cynus T7 User's Guide

---

## Table of Contents

<b>1. INSTALLATION</b> .....	<b>3</b>
➤ <b>ACCESSORIES INTRODUCES</b> .....	<b>3</b>
➤ <b>BATTERY CHARGING</b> .....	<b>5</b>
➤ <b>INSERT A MEMORY CARD</b> .....	<b>6</b>
<b>2. FUNCTIONAL MENU</b> .....	<b>7</b>
➤ <b>FILE MANAGEMENT</b> .....	<b>7</b>
➤ <b>SENDING AN EMAIL</b> .....	<b>7</b>
➤ <b>DIALING</b> .....	<b>8</b>
➤ <b>CALCULATOR</b> .....	<b>8</b>
➤ <b>BROWSER</b> .....	<b>8</b>
➤ <b>VOICE RECORDER</b> .....	<b>9</b>
➤ <b>CALENDAR</b> .....	<b>9</b>
➤ <b>SETTINGS</b> .....	<b>10</b>
➤ <b>CLOCK</b> .....	<b>12</b>
➤ <b>RADIO</b> .....	<b>12</b>
➤ <b>CONTACTS</b> .....	<b>13</b>
➤ <b>GALLERY</b> .....	<b>13</b>
➤ <b>CAMERA</b> .....	<b>14</b>
➤ <b>MESSAGING</b> .....	<b>15</b>
➤ <b>NOTIFICATION MENU</b> .....	<b>15</b>
➤ <b>DOWNLOAD CONTENT</b> .....	<b>15</b>
➤ <b>MUSIC</b> .....	<b>16</b>
➤ <b>CALL RECORDS</b> .....	<b>16</b>

---

➤	<b>WIDGET</b> .....	16
➤	<b>SELECTING WALLPAPER SOURCE</b> .....	17
<b>3.</b>	<b>FAQS AND SOLUTIONS</b> .....	<b>17</b>

## **1. Installation**

### ➤ **Accessories introduces**

Check whether there is a box products within the following items:

Mobile phone

Battery

Travel charger

 
Mobile Phone User Guide

With mobile phones provide goods may be different, depending upon the area where you can use or service providers are provided for the software and accessories. Installing the SIM or USIM card and battery



---

➤ **Battery charging**

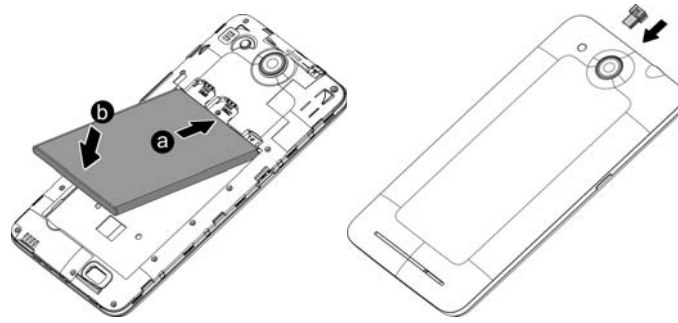

Use the phone for the first time, you must charge the battery.

Only use this mobile phone charger and data cable.

Unauthorized charger or data cable can cause the battery explosion or damage to your phone.

The battery is low, the phone will issue a warning tone and display the low battery message. The battery icon [■] will appear blank.

If the battery is too low, the phone will automatically shut down. Need to charge the battery in order to continue to use the phone.

**Charging Travel Charger**

The travel charger is not connected properly may result in serious damage to mobile phones. For any damage caused due to misuse, Do not belong to the manufacturers repair range.

not only can use the phone and charging, but so this will

---

extend the battery is fully charged.

When the phone is charging, the touch screen may be due to unstable power supply failure. At this time, disconnect the cell phone Travel Charger.

Phone become warm while charging. This is normal, does not affect the service life or performance of the phone.

**Computer data line charging**

Before charging, make sure the computer is turned on.

**Reduce battery consumption**

If you start in the background, automatic synchronization, Bluetooth or WIFI function, the battery will be consumed faster. To save power, turn off unnecessary applications.

➤ **Insert a memory card**



If you store more multimedia files, you must insert a

---

memory card. The phone can use a microSD or a microSDHC memory card capacity up to 32 GB (depending on manufacturer and type of memory card).

**Remove the memory card**

Remove the memory card before you uninstall the memory card for safe remove.

**Formatting memory card**

Format the memory card on the computer may lead to memory card and the phone is not compatible. Only on the phone to format the memory card.

## 2. Functional Menu

➤  **File Management**

The file management is composed of SD sdcard and Phone storage, while Phone storage is the memory of the phone, SD sdcard is the external SD card. In the file management, files can be searched rapid, deleted or edited in each card and new files can be created.

➤ **Sending an email**

You can send an Email to anyone who has an

---

 
Email address.

➤ **Dialing**

When dialing, you can have a quick access to the call records, contacts and digit dial keyboard (used for manual dialing) by the menu key on the screen.

➤ **Calculator**

Your phone provides a calculator.

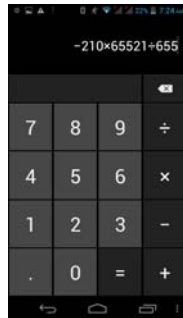

➤  **Browser**

 
The browser allows you to surf on the net and browse the page just like on the computer. You can create on the phone a bookmark and synchronize it with computer. You can have a quick access to your favorite sites on the main screen.



---

➤  **Voice Recorder**

The recorder could be used to record audio files.

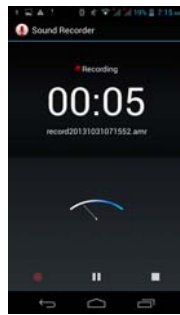

➤  **Calendar**


Calendar allows you to view your schedules and events at any time. You may view schedules one by one or several ones at the same time.




---

➤  **Settings**


Reach the menu and customize your phone settings. SIM card management: SIM card can be managed and made settings.

 **Wi-Fi** WLAN: WLAN can be turned on and off and made some settings.


 **Bluetooth** Bluetooth: Bluetooth can be turned on and off and settings are made.


The information flow usage: It makes you in full awareness of the usage of the information.

More: Click more and you will set up flight mode and VPN and more.

 **Audio profiles** Audio profiles: General, silent, meeting and outdoor optional. In the meanwhile, customized setting-up of some scene modes are allowed.

Select a mode and enter the customized setting-up, operational are vibration, volume, ring tones, notifications and key beep, etc.


 **Display** Display: Customized setting-up of the phone luminance, wallpaper, the screen and screen time-out and font size is allowed.

 **Storage** Storage: The internal memory of the storage card and of the phone is shown.


 **Battery** Battery: The usage detail of the battery is


---


shown.


 **Apps** Applications: View manage and delete the applications on your phone.


Account and synchronization: Set the synchronization of your phone account with your phone.


 **Location access** Location access: Set the service during the locating. Activate or deactivate the GPS connection.

 **Security** Safety: Set unlocking pattern; lock the SIM card; set the SD card.


 **Language & input** Language and keypad: Select a language and input method.


 **Backup & reset** Backup and reset: Reset DRM and restore factory settings to clear all personal data on your phone.

 **Date & time** Date and time: Set current time and date.

 **Scheduled power on & off** Schedule power on/off: set the time to turn on or off your phone.

Auxiliary function: Some auxiliary functions can be set.

 **Developer options** Developers' options: Set some options used by developers.

 **About phone** About phone: View the model, service status, mobile software and hardware information, etc.

---

 
➤  **Clock**

Clock

Enter the menu to display the current time.


Alarms

Your phone provides many groups of alarm clocks. Select one of them to edit and customize alarm clock.

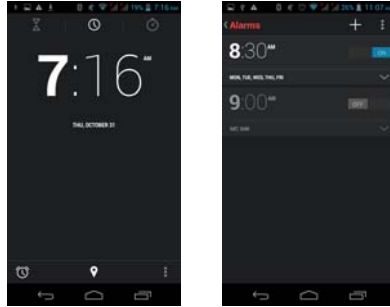

➤  **Radio**

 Wear your earpieces of radio before searching for channels.

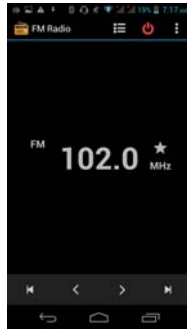

➤ **Contacts**

The “contacts ” lets you easily call your colleagues or friends, or send emails or short messages to them. You may add contacts directly from your phone, or synchronize “contacts” with any application on your computer. You may open “contacts ” directly from the Main screen, or open it via the “Dialing” application.

➤  **Gallery**

Gallery is a picture manager that typically exhibits miniatures, supports the features of “save picture”, “set pictures as desktop” and “share picture”.



➤  **Camera**

Your phone provides the camera and video recorder features. Wherever you go, you can take high-resolution photos and videos. It also supports advanced camera features such as image stabilization, face embellishment, panorama shooting, high dynamic range and zero delay shutter, which can also be customized.



---

➤  **Messaging**

Messaging lets you send text and multimedia messages to any contact that has an SMS device. The multimedia messages include photos, video clips, contacts information, and voice memos. What's more, you can send messages to several contacts at the same time.

➤ **Notification Menu**

Slide and pull down menu on the main interface, you can see the message notice and choose whether to turn on or off WIFI, Bluetooth, GPS, off-line mode. In the data connection, the current SIM is available to make data connection of GPRS. Slide it around you can see the options of profile for your convenience.

➤  **Download Content**

You can download through the browser things and pictures you want and list them in the Download Content menu.

---

➤  **Music**

Music is used for enjoying the stored audio files. Select Music, you can see the menus of “ List of played songs”, “Songs”, “Specialists” and “Artists”



➤ **Call Records**

Come into the call records, you can view missed calls, received calls and outgoing calls. The calling time is viewed in each record and features such as calling, sending messages and adding to new contacts can be set. Deleting call records and setting up speed dial can be done in the menu.

➤ **Widget**

The widget is on the right of applications in Main Menu, holding down this widget, you can drag it



---

anywhere you want in the main screen. It is convenient for you to enter that procedure.

➤ **Selecting Wallpaper Source**

Hold down the main screen, the options of selecting wallpaper source will appear, then you can set up wallpapers you like.

### 3. FAQs and Solutions

If you have any questions about the phone, please find the solutions from the table below.

FAQs	Causes	Solutions
Poor reception	When you use your phone at poor reception areas, for example, near high rise buildings or base rooms, the radio wave cannot be transmitted effectively.	Avoid this as far as you can.
	When you use your phone at network traffic congestion, such as working time and off-duty time, the congestion can result in poor reception.	Avoid this as far as you can.

	This is related to the distance to base station in question.	You may ask the network service provider to provide service coverage map.
Echoes or noises	The trunk line of network is in bad condition. It is a regional problem.	Hang off the call and dial again. Choose another better line.
	In some areas, the call lines are in bad condition.	
Shorter standby time	The standby time is relevant to network settings.	In poor reception areas, turn off your phone temporarily.
	Replace the batteries	Change with a new battery.
	When no signals are received, your phone will continue searching for base stations, thus consuming a large amount of battery power and reducing standby time.	Use your phone at strong signal areas or Turn off the phone temporarily.
Failed to turn on your phone	The battery power is used up.	Check the battery power level or charge the battery.
SIM card error	The SIM card is damaged.	Contact your network service provider.
	The SIM card is not properly installed.	Ensure the SIM card is properly installed.
	The metallic face of the SIM card is contaminated.	Wipe the face with a clean cloth.

 
Failed to connect to the network	The SIM card is invalid.	Contact your network service provider.
	Beyond the GSM coverage.	Consult the network service provider for service areas.
	The signal is feeble.	Retry at a stronger signal area.
Failed to make a call	The call barring feature is used.	Cancel the call barring settings.
	The fixed dialing number feature is used.	Cancel the fixed dialing number settings.
PIN code error	Enter incorrect PIN codes for three times in succession.	Contact your network service provider.
Failed to charge the battery	The battery or the charger is damaged.	Change a new battery or charger.
	Charge the battery when ambient temperature is lower than -10°C or above 55°C.	Change the environment.
	Poor connection.	Check whether the plug is properly connected.
Failed to add contacts to phonebook	The storage space of phonebook is used up.	Delete some contacts from the phonebook.
Failed to set up some features	Your network service provider does not provide the services, or you haven't subscribed them.	Contact your network service provider.

Warning:

1. Risk of explosion if battery is replaced by an incorrect type, dispose of used battery according to the instruction.
2. Charger and adapter are designed for indoor use only. Use the adapter listed below:  
Manufacturer: Mobistel GmbH.  
Model: Cynus T7  
Input: 100-240V~50/60Hz 0.15A  
Output: 5.0V DC DC 1.0A
3. To prevent possible hearing damage, do not listen at high volume levels for long periods.



Correct Disposal of this product

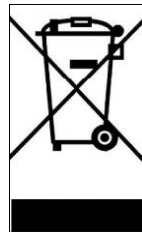

Do not on any account put your old equipment out with the domestic refuse. For the sake of the environment, please use your local authority's collection point set to return and recycle old electric and electronic equipment.

---

## FCC Statment

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful  
22

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, equipment generates, uses and can radiate radio frequency energy and, if not installed and

---

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

---

# Specific Absorption Rate

## (SAR)

### Information

SAR tests are conducted using standard operating positions accepted by the FCC with the Phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone While operating can be well below the maximum value, in general, the closer you are to a Wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each the FCC that it does not exceed the exposure limit established by the FCC, Tests for each required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 1.0 cm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

The maximum SAR of GSM was 0.611W/Kg for Head and

---

0.768W/Kg for Body,WCDMA was 0.270W/Kg for Head and  
0.423W/Kg for Body,WLAN was 0.305W/Kg for Head and  
0.656W/Kg for Body;  
The maximum summation of SAR was 0.916W/Kg for Head  
and 1.424W/Kg for Body;