
UM-X-MH16		MOBILE ODYSSEY ERIS CLIP SPEAKER - USER MANUAL	Page 1 OF 1
AUG14	07.11.14	ART FILE	Revision :

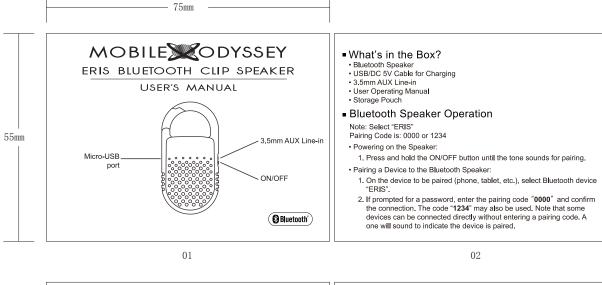

■ Safety Information:

- · Avoidsources of intense heat or flame.
- Do not insert metal objects into item. (Short circuit risk).
- Do not attempt to repair the device. Rather, contact a service professional.

04

Plug the provided USB charging cable into the DC 5V port and connect to an active computer USB port, USB AC adapter, USB car charger or portable

1. When the device and Bluetooth speaker are separated beyond the effective range (≥30 ft.), the Bluetooth communication will be disconnected. 2. Return the device to the effective range (≥30 ft.) to reconnect with the Bluetooth speaker.

• To power off the speaker, press and hold the ON/OFF button.

To increase or decrease volume, do so on your music device.
To skip or go back in tracks, do so on your music device.

• To play or pause, short press the ON/OFF button.

• If the battery is low or depleted, sound may be interrupted before speaker

03

shuts off.
• Typical charging time: 2-3 hours.

Charging the Battery

