

Let's get started.

### Quick Start Guide

#### In-app Setup

1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, tap **Set Up a Device** and find the **Range Extender** in the Security Devices menu.
3. Follow the in-app instructions to complete setup.

#### Installation

1. Make sure the Range Extender is plugged into an outlet at all times.
2. Choose an outlet between your Base Station and some of the devices farthest from your Base Station.

You can move the Range Extender to another outlet as needed to expand the range of your 2-Wire network.

For additional help, visit [ring.com/help](http://ring.com/help)

#### Placement

Choose an outlet between your Base Station and some of the devices farthest from your Base Station.

Note: You can move the Range Extender to another outlet as needed to expand the range of your 2-Wire network.

For 2-Wire network information, visit [ring.com](http://ring.com)  
 ©2019 Ring LLC. All rights reserved. Ring, the Ring logo, and all other marks are trademarks of Ring LLC in the US and other countries.

APPROVED BY:	PD NAME: Nikiki	CUT LINES:	DIMENSIONS:	PRESS LINES:	PERFORATIONS:	THIRD ANGLE PROJECTION:
CUSTOMER: Ring	DESIGNER: Dennis	HALF CUT LINES:	GLUE AREA:	TEAR LINE:	DS TAPE:	
PROJECT #: Ring19095	SUBSTRATE: Flute/c1s					
CUTTER / FILE NAME:	DATE: 2019-12-03	VERSION: 1	NOTES: *			