




Microphone Speaker User Manual

Mode: L-598

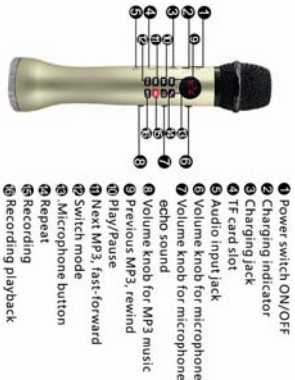

5.The Battery Charging Method and Risk:

- (1) The charging current of the battery is about 500mA. So Please kindly use the standard DC5V mobile phone charger which is with current more than 500mA and has passed some safety certifications to charge this product or charge through the computer USB port. Using bad quality or unsuitable chargers to charge may damage the product or lead to failure to charge.
- (2) When you find the red indicator light flashing or can not turn on the product, means the power is not enough and you need to charge the battery. When charging, the charging indicator light is in red color without flashing. When the indicator light is in green color without flashing, means the battery is fully charged.
- (3) Battery charging time is about 4-5 hours. When fully charged, can play about 4-5 hours in biggest volume in TF card or BLUE mode.
- (4) When the playtime of the battery is shorter and shorter after fully charged, means the lifetime of the battery is shorter and shorter, and you need to get ready to replace with new battery. We suggest you to use our original standard battery.
- (5) Battery is belong to dangerous product. Do not use electrical conductor like metal to connect the anode  and the cathode  of the battery directly, or do not put the battery together with some metal materials, may lead to short circuit and then cause fire or explosion.

- (6) While install the battery, please make sure the   symbol of the battery and the   symbol the product are in the same direction.
- (7) Do not install the battery oppositely. If not, may have risk to cause fire.
- (8) Do not take out the battery and charge it with other charging devices.
- (9) Do not throw this product into fire, may have risk to cause explosion.
- (10) Do not charge under humid environment or when nobody around.
- (11) When charging, please make sure there are no flammable objects around.
- (12) When charging, if the product smoke or overheat, please immediately cut off the power, and move the product to a safe place.

6.Technical Parameters:

- Maximum output: 9W
Effective Bluetooth connection distance: about 10 meters
Frequency response: 100Hz-18KHz
- 7.Packing Included:**
- (1) Microphone: 1PC
 - (2) 2000MAH battery: 1PC
 - (3) 80CM USB charging cable: 1PC
 - (4) User manual: 1PC

1.Product Feature:

Welcome to use this product of our company! This product has solved the inconvenience of music lovers perfectly. It includes nearly all the functions of previous series microphone singing devices. Its easy operation enables you to sing anytime anywhere. It is with maximum 9W output and the mixing sound of microphone is much more stronger, which can satisfy the music lovers very much.

2.Operation Instruction of Each Interface:

- (1) **ON/OFF**: Turn on or turn of this product;
- (2) **Charging indicator**: When charging, it is in red color, when fully charged, it is in green color;
- (3) **DC 5V IN**: Charging jack;
- (4) **TF**: TF card slot, plug in TF card with MP3 files inside and then the MP3 files can be played, can not play other format files, please insert TF card in right direction, if not, it may be easy to damage the product and the card itself;
- (5) **AUX**: 3.5mm audio input jack from computer, mobile phone and so on;
- (6) **Micro**: Volume knob for microphone, volume up to the big side;

8.Frequent problems solutions:

Serial NO.	Problems	Solutions
1	Can not turn on this product:	A. Please check whether the battery is installed oppositely. B. The battery maybe without power and you just need to charge it. C. When charging, the LED charging indicator is not light, meaning there is no electric current through, please check whether there is problem with the USB charging cable, charger or socket. D. Please use the USB charging cable and charger which are dry, if yes, please take out the battery and clean the connection points with dry cloth.
2	The LED charging indicator turn green but the playtime is short:	A. The actual voltage of the charger is not enough or the electric current is small, please change to standard charger. B. the charging interface of the USB charging cable and this product or the output jack of the charger may loose, which lead to the failure to connect well. C. The battery maybe used for too long time and become aging, we suggest you to change to new battery which is with same structure as original battery.
3	Can not record:	A. Please make sure you have insert in TF card. B. Please use high quality TF card to record.

- (7) **Micro**: Volume knob for microphone echo sound, long echo sound to the big side;
- (8) **Micro**: Volume knob for MP3 music, volume up to the big side;
- (9) **Micro**: In MP3 mode, short press for previous MP3 while hold press to rewind;
- (10) **Micro**: Short press to play or pause in MP3/Recording mode;
- (11) **Micro**: In MP3 mode, short press for next MP3 while hold press to fast-forward;
- (12) **MODE**: Switch mode among TF/BLUE/AUX;
- (13) **Micro**: When turn on this product, the  symbol will appear on the top left corner of the display screen, which means the microphone is in working condition. Short press the  button to turn off the microphone audio source, and at this time, the  symbol will appear on the top right corner of the display screen. One more short press the  button to turn on the microphone audio source;
- (14) **Micro**: In MP3 mode, first long press for ONE, repeating the current one MP3; Next long press for FOLD, repeating the MP3 of the current folder. Next long press for ALL, repeating all the MP3;
- (15) **REC**: Recording, insert in TF card, then can record;
- (16) **REC**: Short press to play the recording content.

FCC Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses radio frequency energy and, if not properly installed and used, in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3.Bluetooth:

When turn on this product, the default mode is Bluetooth, the display screen will show "BLUE", at this time if open the Bluetooth of your mobile phone and search, you will see the name of this Bluetooth device and then click to pair. If successfully paired, there will be a hint tone of successful connection, then the music in your mobile phone can be played through this product.

4.Recording:

- (1) Insert TF card, press "MODE" to change to the mode of TF, short press "REC" button, then the word "REC" on the bottom right corner of the display screen will light, meaning it is recording. At this time, this product is recording the sound through the microphone.
 - (2) When recording, short press the button "Micro" and the time numbers on the display screen stop, which means to pause the recording, one more press to continue the recording.
 - (3) When recording, short press "REC" button to stop recording and broadcast the content just recorded.
 - (4) In the mode of TF, short press the button "REC" to play the recording content, and you can press "Micro" or "Micro" to choose the previous or next recording you want to play.
 - (5) When playing the recording, hold press the button "REC", the display screen says "DEL", meaning the current recording has been deleted.
- Please note that this product can not record in the mode of Bluetooth.