

SYLVANIA

MODEL NO. SCR3130BT

 
 
DUAL ALARM CLOCK RADIO WITH BLUETOOTH

INSTRUCTION MANUAL



PLEASE READ BEFORE OPERATING THIS EQUIPMENT

Locations of Controls

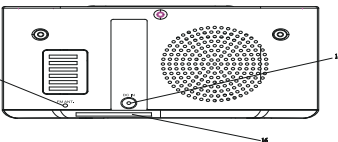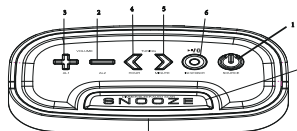

1. POWER, AL OFF BUTTON
2. VOLUME DOWN & ALARM TWO BUTTON
3. VOLUME UP & ALARM ONE BUTTON
4. TUNING DOWN & HOUR BUTTON
5. TUNING UP & MINUTE BUTTON
6. PLAY/PAUSE/BLUETOOTH SET/MEMORY BUTTON
7. SNOOZE & SLEEP & DIMMER & AUTO SCAN BUTTON
8. SLEEP INDICATOR
9. FM INDICATOR
10. ALARM TWO INDICATOR
11. BLUETOOTH INDICATOR
12. ALARM ONE INDICATOR
13. FM INDICATOR
14. DJ CACK
15. FM ANTENNA
16. BACKUP BATTERY COMPARTMENT (2 X 1.5V AAA BATTERY) (Not Include)

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Do not mix alkaline, alkaline (carbon-zinc), or rechargeable (ni-cad, ni-ni, etc.) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2

Setting Clock

1. In standby mode, press and hold the MEMORY & TIME SET BUTTON
 2. The hours will blink. Press TUNING DOWN & HOUR BUTTON to set the current hour.
 3. Press the TUNING UP & MINUTE BUTTON to set the current minute.
 4. Press MEMORY & TIME SET BUTTON once and the current time is set.
- NOTE: The PM indicator will light when the hour is set in the PM.

Setting Sleep Timer

When listening to radio, press SNOOZE & SLEEP & DIMMER & AUTO SCAN BUTTON to enter sleep mode. You can just adjust the sleep timer from 10 to 90 minutes by pressing the SNOOZE & SLEEP & AUTO SCAN & DIMMER BUTTON

The unit will automatically turn off after the selected time expires.

Playing FM Radio

1. Press the POWER BUTTON to turn the clock radio on
2. Press TUNING UP & MINUTE BUTTON and TUNING UP & MINUTE BUTTON to adjust the radio to desired frequency.
3. Press and hold the TUNING DOWN & HOUR BUTTON and TUNING UP & MINUTE BUTTON to search for the next available frequency
4. Press AND hold the POWER BUTTON to turn the clock radio off.

Saving a Station as Preset

1. Follow the instructions for Tuning the FM Radio.
2. Tune to the desired station
3. Press and hold the MEMORY & TIME SET BUTTON to save the current radio station as a preset.

Tuning to a Preset Radio Station

1. Follow the instructions for Tuning the radio and saving a station as a preset.
2. Press the MEMORY & TIME SET BUTTON to cycle through preset radio stations.

Notes:
* Adjust the position of the FM antenna to improve FM Radio reception.

Bluetooth Playback

1. Power on the unit by pressing the POWER BUTTON.
2. Press the SOURCE BUTTON switch to Bluetooth Mode
3. Press the PLAY/PAUSE/BLUETOOTH PAIR BUTTON and the BLUETOOTH INDICATOR will blink quickly.
4. Using the native controls on your Bluetooth devices, select the SCR3130BT in your Bluetooth settings to pair.
5. If your device requested a password, enter the default password 0000.
6. When successfully paired and connected, the pairing indicator will be solid.
7. After successfully pairing to a device, use the native controls on the connected bluetooth device to playback music.

Important Safety Instructions

Read Instructions: All the safety and warning instructions should be read before the product is operated.

Retain Instructions: The safety and warning instructions should be retained for future reference.

Read Warnings: All warnings on the product and in the operating instructions should be followed.

Follow Instructions: All operating and use instructions should be followed.

Cleaning: Clean this product from the inside before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.

Attachments: Do not use attachments not recommended by the product manufacturer as they may cause injury.

Wear and Tear: Do not use the product where it is subject to rain, water, moisture, dust, vibration, shock, or excessive heat, or in an environment where it is subject to extreme temperatures.

Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or pet, and serious damage to the product. Use only with a cart, stand, tripod, or table recommended by the manufacturer, or one that is specifically designed for use with this product. If you use any accessories not recommended by the manufacturer, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2

Setting the Alarm

1. If in radio mode, press and hold the POWER BUTTON to turn the unit off.
2. Press the VOLUME DOWN & ALARM TWO BUTTON or VOLUME UP & ALARM ONE BUTTON.
3. Press the TUNING DOWN & HOUR BUTTON to adjust the hour.
4. Press the TUNING UP & MINUTE BUTTON to adjust the minute.
5. Press the VOLUME UP & ALARM ONE or VOLUME DOWN & ALARM TWO BUTTON repeatedly to switch between Radio Buzzer (b) or off.
6. Once the set alarm time is reached, the alarm will sound.
7. To set the other alarm, follow the above steps and choose the alarm not currently set. Cancelling the Alarm

1. Follow the instructions for Setting the Alarm.
2. Press the VOLUME DOWN & ALARM TWO BUTTON or VOLUME UP & ALARM ONE BUTTON repeatedly until the display show "OFF" and volume will no longer lit.
3. Press SNOOZE & SLEEP & DIMMER & AUTO SCAN BUTTON to delay for an additional 9 minutes. Press POWER BUTTON to turn the alarm off until the set alarm time is reached again.

Care and Maintenance

1. Clean the unit with a soft, damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid operating your unit under direct sunlight or in hot, humid or dusty places to reduce the risk of fire or electric shock.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. For better clock display clarity, avoid operating the unit under direct sunlight or in strong room illumination. Use the AC adapter from the unit and the electrical power outlet immediately in case of malfunction.

Troubleshooting Guide

Symptom	Possible Cause	Solution
Noise or sound distorted on FM broadcast	Station not tuned properly for FM. FM Telescopic antenna is not fully extended.	Fine tune the FM broadcast station. FM Telescopic antenna is not fully extended the FM Telescopic antenna.
FM no sound	Volume at minimum	Increase Volume

Specifications

Frequency:
FM 87.5 - 108 MHz
AC Adapter: Input 100-240~50/60Hz
Output: DC 5V 1000mA
Backup Battery: 2 X DC 1.5V AAAA Batteries (Not Included)

Features

 
- FM radio
- Built-in speakers
- AC power: AC/DC Adapter
- DC Back up: requires 2 AAAA batteries, (not included)

In the Box

- AC/DC Adapter
- Documentation

Powering the Unit

AC Power
Plug the AC/DC Adapter into a standard AC outlet (100-240~50/60Hz)

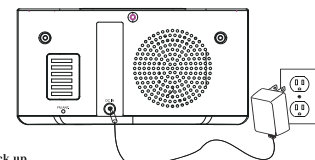

Battery Back up
Requires 2 AAAA batteries (not included)



4

LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workmanship, provided that the unit is used under the normal operating conditions intended by the manufacturer. Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtain.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, however caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

Canada
C.I. Service Dept.
315 Atwell Drive
Toronto, ON
M9W 5C1

USA
Curtis International Ltd
c/o Lotus International Company
6880 Commerce Blvd.
Canton MI 48187
USA.

For service assistance and product information, please call: 1-800-968-0853.
If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

Model No. _____ Date Purchased _____ Serial No. _____