

CD:



CD Playback:

The unit is designed to play normal music CD disc bearing the correct identification logo. If the disc does not confirm to the standard, it may not be played back properly.

Note: This unit is compatible with MP3 CDs.

1. Open the CD door by pull the CD OPEN (Close) area.
2. Place a CD disc on the center spindle, with the printed label side up.
3. Close the CD Door by press the CD OPEN (Close) area
4. Power on the unit and enter to CD mode as previously instructed. "Cd" indicator will appear on the display.
5. Wait a few seconds until the total number of tracks appears on the display. Then press the **▶||** Play/Pause Button on the unit or Remote Control to start playback.
6. During playback:
 - Press the **▶||** Play/Pause Button on the unit or Remote Control to pause, press again to resume normal playback.
 - Press the **▶▶** (Next/Skip Forward) or **◀◀** (Previous/Skip Backward) Buttons on the unit or Remote Control repeatedly to skip tracks.
 - Press and holding the **▶▶** (Next/Skip Forward) or **◀◀** (Previous/Skip Backward) Buttons on the unit or Remote Control repeatedly to fast searching the specified section.
 - To stop, press the **■** (Stop) Button on the unit or Remote Control.

CD Repeat / Random Playback :

1. During playback, press the MODE Button on the unit or Remote Control once. "◀REP" indicator will appear on the display. The current track will playback repeatedly.
2. During playback, press the MODE Button twice. "◀REP ALL" indicator will appear on the display. All the tracks on the current disc will be playback repeatedly.
3. During playback, press the MODE Button three times. "RAND" indicator will appear on the display. All the tracks on the current disc will be playback randomly.
4. To cancel the Repeat/Random function, press the MODE Button repeatedly until all the repeat indicators disappear on the display.

MP3 CD Repeat/Random Playback:

Open CD door to place MP3 disc on the center spindle and close the CD door to run the disc. The "MP3" indicator will appear on the display.

During playback:

- Press the play mode button once to repeat current MP3 file.
- Press the play mode button twice to repeat the MP3 files within the folder.
- Press the play mode button three times to repeat all MP3 files within the disc.
- Press the play mode button fourth times to play the MP3 files randomly.
- Press the play mode button fifth times to return back to normal mode.

EQ Operation

You can enjoy different EQ sound effect modes.

Press the **EQ** button on remote control will change to different sound effects:

FLAT / JAZZ / POP / ROCK / CLASSIC

Programmed Playback:

1. In CD stop playing mode, press the PROG (Program) Button on main unit or remote control. "P01" will appear on the display and PROG indicator will blink.
2. Select the first specific track to be programmed by pressing the ►► (Next/Skip Forward) or ◀◀ (Previous/Skip Backward) Buttons on the unit or Remote Control repeatedly.
3. Press the PROG Button again to store the selected track into the memory.
4. Repeat steps 2 and 3 until all the specific tracks stored into the memory.
5. Press the ►|| Play/Pause Button on the unit or Remote Control to start program playback.
6. To stop press the ■ (Stop) Button on the unit or Remote Control once. "PROG" indicator will remain on the display. Then press ►|| Button to start program playback again.
7. To stop and cancel the program, press the ■ (Stop) Button on the unit or Remote Control twice. "PROG" indicator on the display will disappear.

Remark:

The unit can store up to 20 tracks for CD and 99 tracks for CD/MP3 in the programmable memories. During the programmed playback, user can still select the "repeat 1 / repeat all" functions.

BT (BLUETOOTH)**BT (Bluetooth) pairing**

First time use or re-pairing the unit to a new BT Device, pair as follows:

1. Power on the unit and enter to BT mode as previously instructed. "bt" indicator will appear on the display and blink.
2. Power on the external BT Device and enter to Bluetooth searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the "bt" indicator on the display will stop blinking.
3. If pairing is complete you may now play music with your external BT Device.
4. During playback:
 - Press the ►|| Play/Pause Button on the unit or Remote Control to pause, press again to resume normal playback.
 - Press the ►► (Next/Skip Forward) or ◀◀ (Previous/Skip Backward) Buttons on the unit or Remote Control repeatedly to skip tracks.

- Notes:**
- When the external BT Device searched the unit, model number "PSS2000" will appear on the display of external BT Device.
 - If while pairing you are asked for a code, please try "0000" or "1234".
 - Press the PAIR button for 3 seconds to reactivate the pairing mode for another BT device.

Normal operation after pairing:

1. Turn on the BT function of the external BT Device.
2. Power on the unit and enter to BT mode as previously instructed. "bt" indicator will appear on the display and blink.
3. Wait a few seconds until the unit is automatically paired to the external BT Device. ("bt" indicator on the display will stop blinking).
4. After pairing is complete you may now play music with your external BT Device.

AUX IN:

1. Connect the external Audio Device with a 3.5mm AUX cable. (Cable not included).
2. Insert one end of the AUX cable to the Phone; Line Out or AUX Out Jack on the external Audio player.
3. Power on the unit from Standby mode by press the POWER Button on the unit to select AUX In mode. Insert the other end of the AUX cable into the AUX In Port on the front of unit. "AUX" indicator will appear on the display.
4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)

FM RADIO:

1. Power on the unit and enter to Radio mode as previously instructed. The radio frequency will appear on the display.
2. Press the ◀◀ or ▶▶ Button to select the radio station as desired.


AUTOSCAN RADIO

1. Press and hold || Play/Pause Button for 2 seconds
2. The unit will auto scan available station and store in the preset memory.
3. To navigate through the stored presets, press the MEMORY Button and then press ◀◀ or ▶▶ button to select the preferred Preset Number.

SETTING RADIO PRESETS:

1. Find the radio station you would like to save.
2. Press the MEMORY Button on the main unit or MEMORY Button on the remote control.
3. Press ◀◀ or ▶▶ buttons to select the preferred Preset Number, The display will show "P01, P02, etc ..."
4. Press the MEMORY Button on the main unit or press MEMORY Button on remote control again to save the station.
5. Repeat steps 1-4 until you have finished saving your presets.
6. To navigate through the stored presets, press the ◀◀ or ▶▶ Button.

Notes:

- If stereo FM radio station is receiving. The FM stereo indicator "  " will appear on the display automatically.
- This unit can store up to 30 FM radio station presets

FM Antenna:

The FM Wire Antenna is for FM reception only. If reception is weak, unwound and relocation the wire antenna.

USB Playback:

1. Plug the USB flash drive into the USB socket. Press the FUNCTION button to USB
2. Total number of tracks and USB indicator will then show on the LCD display.
3. Press PLAY/PAUSE button to play the track on the USB.
4. Press SKIP FORWARD or SKIP BACKWARD button to search rapidly within a track to locate a specific passage.
5. Press the STOP button to stop the USB play.

NOTES:

This unit only support 64GB With FAT32 format USB device.

TROUBLESHOOTING

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC Power cord had not connected	Plug the AC power cord to any wall outlet having AC: 100~240V 50Hz/60Hz
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume level by turning the VOLUME Control Knob clockwise
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by turning the VOLUME Control Knob counterclockwise
	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
Alarm not functioning	Unit is not in standby mode	Press POWER button to turn back to standby mode
BT not functioning	Unit not in BT mode	Press the SOURCE Button repeatedly until "bt" appear on the display
	The external BT device had NOT paired to the unit	Pair the external BT Device to the unit as page 15
	The external BT device too far from the unit	Place the external BT device close to the unit
CD not play	Unit not in CD mode	Press the SOURCE Button repeatedly until "Cd" appear on the display
	CD disc incorrect install	Place the CD disc on the center spindle with label side face up
	Disc is dirty or scratched	Try other discs or clean the discs
Radio not function	Unit not in radio mode	Press the SOURCE Button repeatedly until "tun" indicator appear on the display
Radio reception not good	The direction or location no good for radio reception	Turn the FM wire antenna new direction.

SPECIFICATION

Power Source:	AC 100V~240V; 50Hz/60Hz; 18W
BT Version:	5.0
BT Operation Distance:	<=32 Feet in open area
Radio Frequency:	FM: 87.5-108MHz
Disc Compatible:	CD; CD-R; CD-RW; CD-MP3
Impedance of Speakers:	2 x 10W; 8 ohm
Audio power:	2 x 7.5W (Total 15W, RMS)
USB Section:	Support USB flash-drive up to 64 GB

ACCESSORIES

- 1 x User's Manual
- 1 x Remote Control (Uses 2 x AAA batteries, not included)
- 1 x AC/DC Adapter

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

PHC Americas, LLC ("PHC Americas") warrants this product against defects in material or workmanship for the time periods and as set forth below when purchased directly from PHC Americas or a PHC Americas Retailer. Pursuant to this Limited Warranty, PHC Americas will, at its option, (i) repair the product using new or refurbished parts, (ii) replace the product with a new or refurbished product, or (iii) recommend you return to retailer for exchange or refund. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

Parts & Labor: For a period of six (6) months from the original date of purchase of the product, PHC Americas will, at its option, repair or replace with new or refurbished product, product determined to be defective.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the PHC Americas service facility. A **dated purchase receipt** from PHC Americas or a PHC Americas Retailer is required.

For specific instructions on how to obtain warranty service for your product,

Visit Web Site: www.Philco.US
Email us: Support@PHCAmericas.com
Call us: 1-888-718-4525

This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for six (6) months, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of PHC Americas. This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the PHC Americas product or product purchased from other than PHC Americas or a PHC Americas Retailer.

This Limited Warranty does not cover PHC Americas products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries).

This Limited Warranty is invalid if the factory-applied seal has been altered or removed from the product. This Limited Warranty is valid only in the United States and Canada. LIMITATION ON DAMAGES: PHC AMERICAS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.