


正面英文 规格：280*290MM



PROSCAN ELITE

**LIGHT UP 360 DEGREE SOUND
WATERPROOF BLUETOOTH SPEAKER**

MODEL NO.: PESP1708

INSTRUCTION MANUAL

Please read these instructions thoroughly before use and retain for future reference

PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD. - www.proscan-brand.com.

Introduction

Thank you for choosing the PROSCAN P1708 Bluetooth Speaker as your source for entertainment! You can use this item with iPads, iPhones, iPods and many types of smartphones to stream music. In order to get the best results when using the device, please read this manual first before using.

Read these usage tips carefully to enhance your user experience:

To ensure the proper charging performance of your speaker:

- Please charge your speaker completely before first use.
- Use a USB charger with a minimum rating of 5VDC 1A.
- Make certain the USB cable is firmly plugged into the USB type-c jack on the speaker.

If you experience issues with your speaker not charging or not charging fully:

- Make certain the USB cable is plugged in firmly
- Try a different USB charger
- Try a different USB cable


If you are experiencing issues with poor sound:

- Adjust the volume on your audio source device
- Adjust the volume on your speaker
- Reallocate/adjust the placement of your speaker
- Try a different audio source device
- Try different audio content

If you experience Bluetooth Connectivity/Playback Issues:

- Reset your audio source device
- Reset your speaker (Power OFF)
- Try a different audio source device

Description

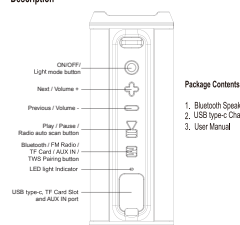

Package Contents

1. Bluetooth Speaker
2. USB type-C Charging Cable
3. User Manual

Features

- Bluetooth—enables simple wireless pairing with your Bluetooth-enabled devices
- 360-degree sound with deep bass
- Built-in FM Radio
- Built-in TF card support
- Stylish tubedesign design with carrying hook
- Large control buttons for easy operation
- 3.5mm standard auxiliary input provides a simple wired connection to wide variety of devices
- Built-in rechargeable battery

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit
- Do not use the unit if it has been dropped or damaged in any way
- Repair to electrical equipment should only be performed by a qualified technician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint, etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.

INSTRUCTIONS FOR USE

Charging the Speaker

The speaker has a built-in rechargeable battery. When the battery is drained, the speaker will turn OFF automatically. NB: You will hear "low battery" indicating the speaker needs to be charged prior to the speaker shutting off due to battery depletion. Please recharge the battery every time it has been drained.

Attach the USB type-c cable to the unit and plug into a charger minimum 5VDC 1A. If the unit is completely discharged, it will take approximately 5 hours to fully charge at 5V/500mA.

The Red LED will illuminate during charging, when it has completed, the Red LED will turn off. There will hear "low battery" when the battery is low and needs to be charged.

Flashing Light Effect

This unit support 5 different flashing light patterns by pressing the ON/OFF/Flash mode button.

Operation

Press and hold "ON/OFF" button 2 seconds to power ON, the Blue LED will start to flash. Press and hold "ON/OFF" button 2 seconds to power OFF.

Bluetooth Mode Pairing

The unit will go into "Pairing Mode" automatically when the power is on. Go into your Bluetooth device settings menu and look for "PROSPESP1708"

After the unit has paired and connected, it will re-connect automatically when the unit is powered on and the device is in range.

Note: Bluetooth Timeout: 10 minutes. You can press and hold the Play/Pause button to unpair your current device and search for new devices in Bluetooth mode.

Begin Streaming Music

- Press Play/Pause button to start playing music
- Press and Hold "+" button 2 seconds to play the next track
- Press and Hold "-" button 2 seconds to play previous track
- Press either "+" or "-" button for volume control

Note: You will hear an audible alert when the maximum (minimum volume level) has been reached.

How to work for TWS mode

- Get two same units and press both units to power on.
- Don't pair with any other Bluetooth devices.
- Long press the "M" button from one of them, it will have a tone coming out, and then it will pair both speakers together.
- Turn on the Bluetooth from your Bluetooth devices
- Search the Bluetooth pair name Pro PESP1708, and tap to connect it.
- After the Bluetooth device connected to these speakers, you can play songs from your Bluetooth devices.

FM Radio Mode

When the unit is ON, a short press of the "M" button will turn on FM Radio mode.

- A long press of the Play/Pause button will initiate an auto scan of all available FM radio stations. (Maximum of 30 stations), they will automatically be saved in the speaker's memory.
- A long press of the "+" button or the "-" button will select from the saved radio stations.
- Press the "M" button again to switch the speaker to the other mode.

TF Card Mode

When the unit is ON, a short press of the "M" button twice will turn on TF Card mode.

Aux In Mode

Plug in the supplied 3.5 mm cable into the AUX port on the speaker. Connect the other end to your audio output/telephone jack on your device.

NS: A Red LED will illuminate when the speaker is in "AUX in" mode.

Please note that you can control playback volume and content selection on your device.

LED Status

Blue LED flashing & Blue LED solid	Bluetooth Mode
Red LED flashing	AUX Mode
Red LED	TF Card Mode / Charging
Red LED off	Full charged
Purple LED solid	Radio Mode
Purple LED flashing	Radio Auto Scanning

Troubleshooting

Unit doesn't connect to device	Speaker needs to be connected/repaired to device
A tone is heard every few seconds	Speaker needs to be charged
Unit will not power on	Speaker needs to be charged
Unit doesn't control track's volume	Speaker needs to be in Bluetooth mode for full control
Unit distorts at high volume	The device's volume needs to be lowered

Care and Maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Speaker to liquid, moisture or humidity to avoid damage to the speaker's internal circuitry.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the device in a fire as it will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the speaker as you may cause damage.

Specifications

Bluetooth specification	Bluetooth 5.0 (A2DP, HFP, AVRCP)
Bluetooth range	33ft (10m)
Charging input voltage	DC 5V + 500mA
Frequency range	FM 87.5 - 108MHz
Built-in battery	2200mAh rechargeable lithium battery
Dimension	280mm x 78mm

Battery life & charging time may vary based on usage & types of devices used.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

To make a warranty claim, please email support@curtis.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us, if the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V-60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE. PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Product Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

For service assistance and product information, please call: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3
www.curtis.com

4

5

2

3

