SYLVANIA

BLUETOOTH SPEAKER

INSTRUCTION MANUAL

MODEL:SP328-BLACK SP328-PURPLE SP328-SILVER SP328-RED







Please read the instruction manual carefully before using

BLUETOOTH SPEAKER

Warnings:

Do not place the system in the high-temp and humidity environment. Prevent it from raining or rough handing and strong shock.

In order to avoid electric shock and other accidents. Do not open the top side panel cover for repair without any professional guidance. In case fragments or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately, if the system needs repair, please go to the professional maintenance for help. Switch off the power and pull off the plug from the power switch when the system

Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side. Do not keep it close to the

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates.

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BLUETOOTH SPEAKER

Trouble shooting:

No function light & No sound

1. Possible problem: Plug is not well connected.

Solution: Insert the plug into electric outlet

Function light on but no sound

1. Possible problem: Cable misconnected

Solution: Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack

2. Possible problem: Audio signal is not transmitted to speakers Solution: Check all the speakers if there is audio signal output

If the problem exists after checking related procedures above, please refer to the appointed service agent professional technician to fix it. Do not attempt to company assumes no responsibility.


Product equipment list:

1. Portable Bluetooth Speaker unit 1PC 2. 3.5mm USB charging wire 1PC 1PC 3. 3.5mm stereo audio line

Specifications:

Output power: 3W*2 Input power: DC5V.500mAh Speaker unit: 4"*2 Frequency response: 80Hz-20KHz Built in rechargeable Battery: 3.7V/1200mAh

BLUETOOTH SPEAKER

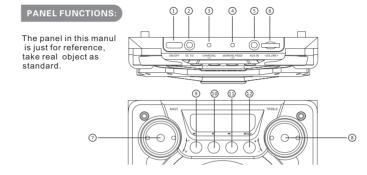

- ① ON/OFF: Pull the button to left unit will be turn on pull to right is power off.
- 2 DC5V: 3.5mm recharging jack, connect with USB charging wire.
- (3) Charging LED: Charging mode indicator, in red light mens the unit is recharging, in green light means the unit is full recharged.
- (4) Working mode LED: Light in red is under line in working mode, light in blue color is under bluetooth working mode. In blinking red color is low battery warning.
- (5) AUX: 3.5mm line in jack for connecting with audio cable.
- -Volume+: Master volume control
- Bass: Bass volume control knob. Turning from left to right is volume increase.
- Treble: Treble volume control knob. Turning from left to right is volume increase.
- ≥ Press once is for Previous play to the track. long press is volume decrease.
- MI: Press to Play/Pause the track.
- > :Press once is for NEXT play to the track. Long press is volume increase.
- (2) MODE: Press to select AUX/bluetooth mode.

Bluetooth version 2.1, Bluetooth connecting name is SP328, power on the unit, it will defeat setting at Bluetooth mode with voice alarm: Bluetooth mode, search Bluetooth name SP328 and connecting it to your Bluetooth device. Then the unit will play music from your Bluetooth device directly. Manually change the mode via "mode" button on unit also workable.

Connecting your mobile device to AUX IN jack on unit via 3.5MM audio cable, the unit will turn to audio input mode directly with "audio input " voice alarm and then it will play the music directly from your mobile album. Manually change the mode via "mode" button on unit also workable.



This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals. operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept, warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper,

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or quarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or quarantees, including any warranties, conditions, representations or quarantees under any Sale of Goods Act or like legislation or statue is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself. howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

- 1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
- 2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
- 3. The warranty does not cover cabinets and accessories.
- 4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
- The defective product should be mailed to:

Canada C.I. Service Dept. 315 Attwell Drive Toronto, ON M9W 5C1

U.S.A Curtis International Ltd c/o Lotus International Company 6880 Commerce Blvd. Canton MI 48187

For service assistance and product information, please call: 1-800-968-9853,

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

Model No. _____ Date Purchased _____ Serial No. ____





