

## Turn up procedure

- 1) After the boot, long press the PTT
- 2) Pu-frequency transmitter frequency detection
- 3) Transfer batch precise adjustments with adjustable capacitor PCB board until the frequency is 462.5625MHz.
- 4) The ERP of the device is 22 +/-1dBm.